 


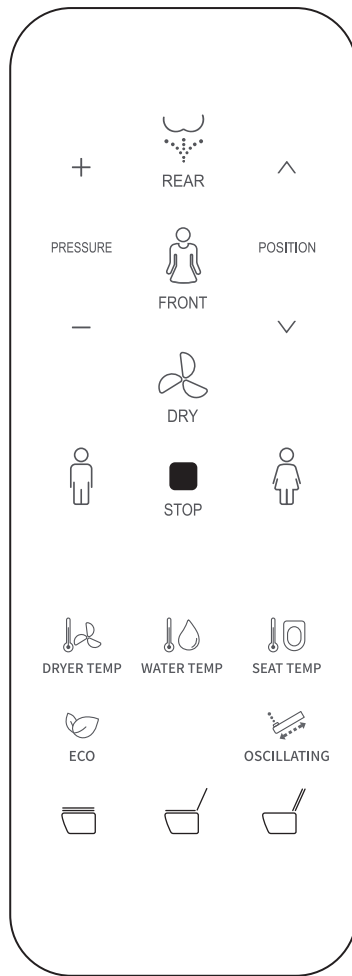

Remote Control Illustration

Thank you for choosing our product. Please read the instructions carefully before installation and keep it available for future maintenance or reference.

Content

Installation preparation

01. Remote control installation	01
---------------------------------	----

Usage Instruction

01. Remote control illustration	03
02. Rear/Front washing operation	04
03. Dry operation	04
04. Water volume adjustment	05
05. Spray nozzle position adjustment	05
06. User button	05
07. Auto function	06
08. Temperature adjustment	06
09. Energy saver	07
10. Oscillating washing operation	08
11. Open/close by remote controller	08
12. Combination button	09


Automatic function setting

01. Setting rear washing	10
02. Setting front washing	10


Remote control installation

Remote control hanger installation

 
(1) Place the remote control hanger upright on the pre-installed area of the wall and mark the location of the two mounting holes on the wall with a marker. Drill a hole in the marked position on the wall with a drill bit of 6 mm in diameter, with a depth of 35 mm. (When determining the installation location, note that when the person sits on the seat to ensure that the user can catch the remote control.)

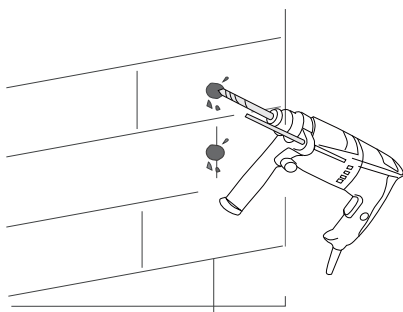


(2) Put the expansion tube into the wall hole and the hanger is tight against the wall. Align the hole in the hanger with the expansion tube and tighten the screw, and then cover the silicone gasket.

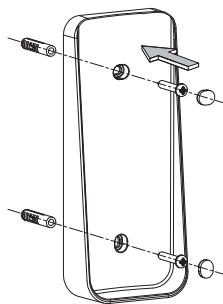

(3) Put batteries into remote control and cover remote control.

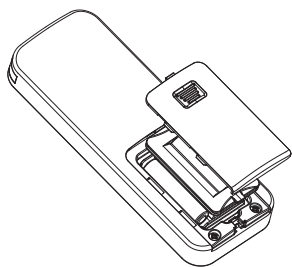

(4) Put remote control to the hanger.

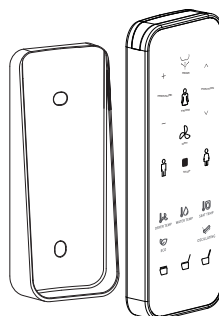


Note: Don't install and use the product in damp places such as shower room.
Don't place the product in a place where it is easily exposed to water.

Installation Preparation


Remote control installation

Remote control hanger installation (Only for the hanger matching with fixing board and foam gasket.)


(1) Clean and dry the pre-installed area of the remote control rack on the wall. (When determining the installation location, make sure that the user can reach remote control when he sits on the seat.)

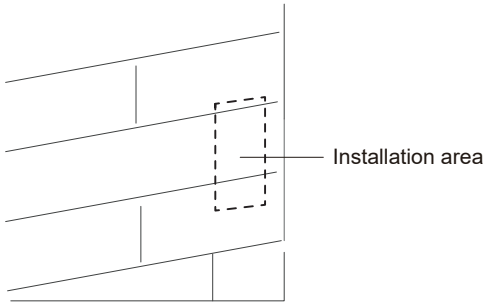


(2) Remove the adhesive tape on the back of the hanger and place it tightly against the wall, then cover the silicon gasket.

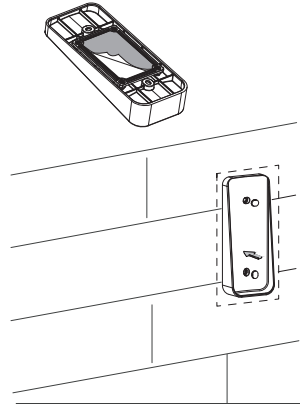

(3) Put batteries into remote control and cover remote control.

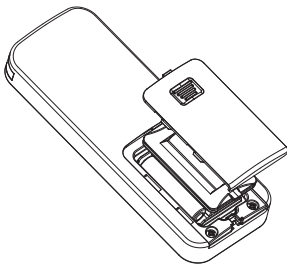


(4) Put remote control to the hanger.

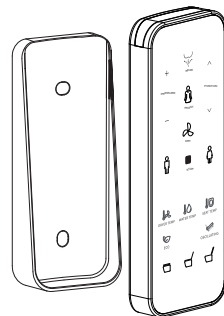

Note: Don't install and use the product in damp places such as shower room.
Don't place the product in a place where it is easily exposed to water.

Remote control illustration

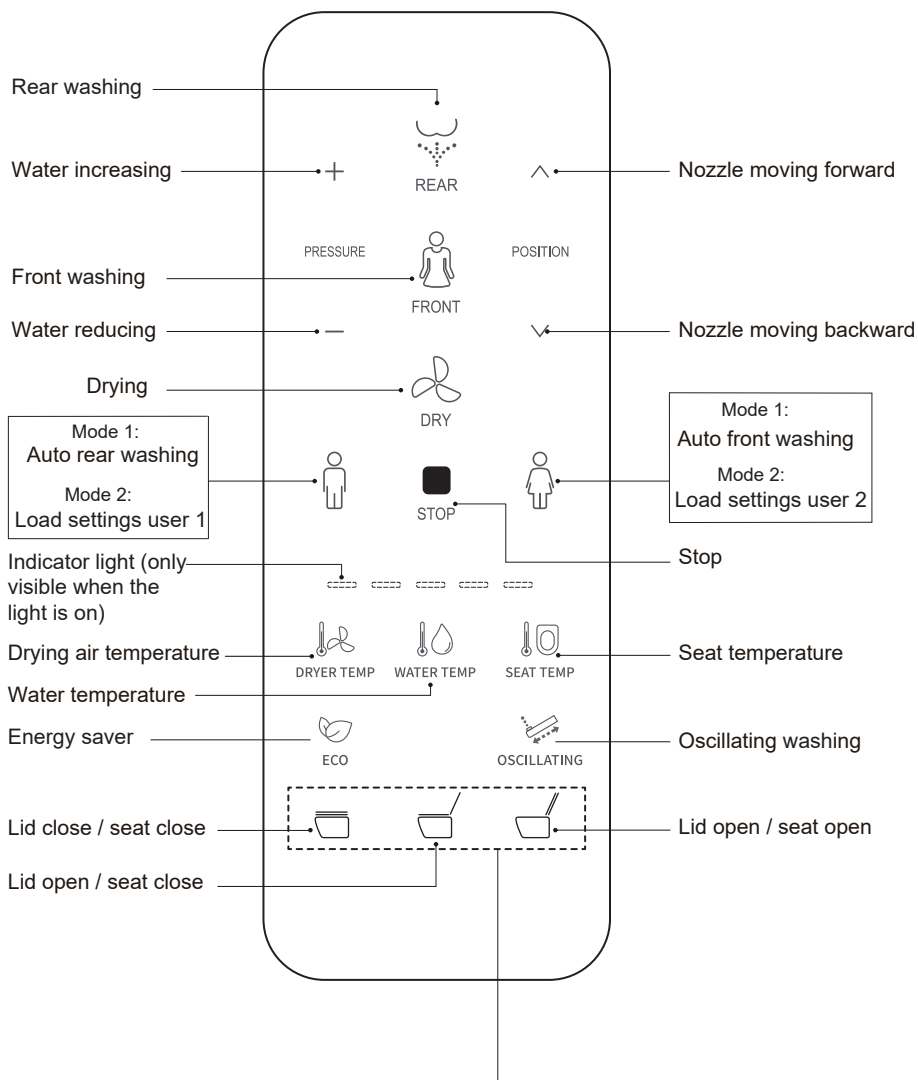


Toilet without function of lid auto open and close don't have these three buttons.

Rear/Front washing

- Press "REAR" button, the indicator light is on showing current water temperature level, it starts rear washing. The washing will stop automatically after one cycle, while it will stop immediately if the user presses "STOP" button.
- Press "FRONT" button, the indicator light is on showing current water temperature level, it starts front washing. The washing will stop automatically after one cycle, while it will stop immediately if the user presses "STOP" button.

Drying Operation

- Press "DRY" button, the indicator is on, showing the current air temperature level. It will stop drying automatically after one cycle or after leaving.

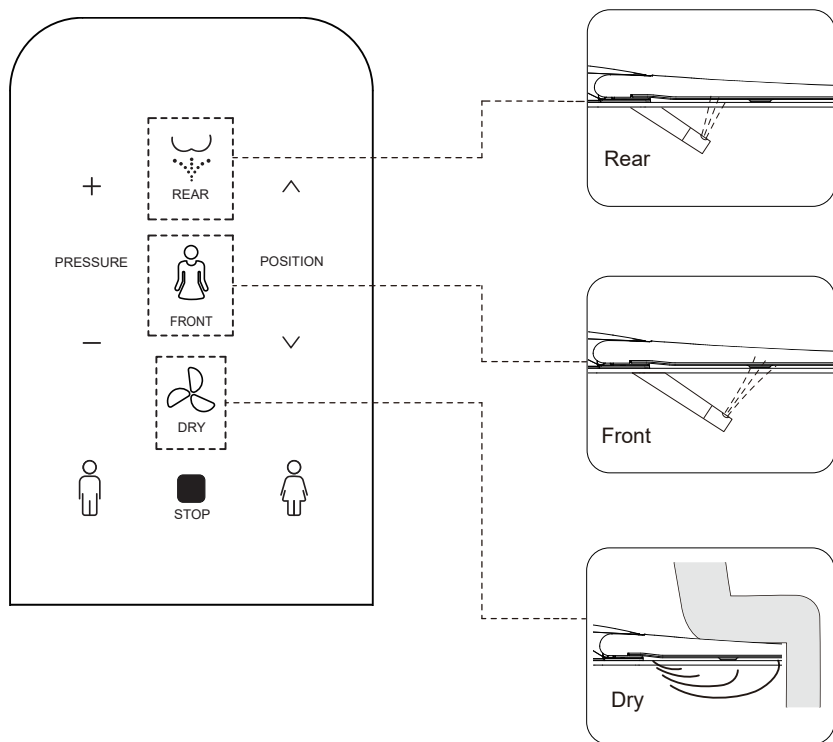


Water volume adjustment

- Press "+" or "-" button when it is under function of rear washing or front washing, the indicator light is on showing current water volume level, and water volume can be adjusted in 5 levels.

Spray nozzle position adjustment

- Press "^" or "v" button when it is under function of rear washing or front washing, the indicator light is on showing current nozzle position, and nozzle position can be adjusted in 5 levels.

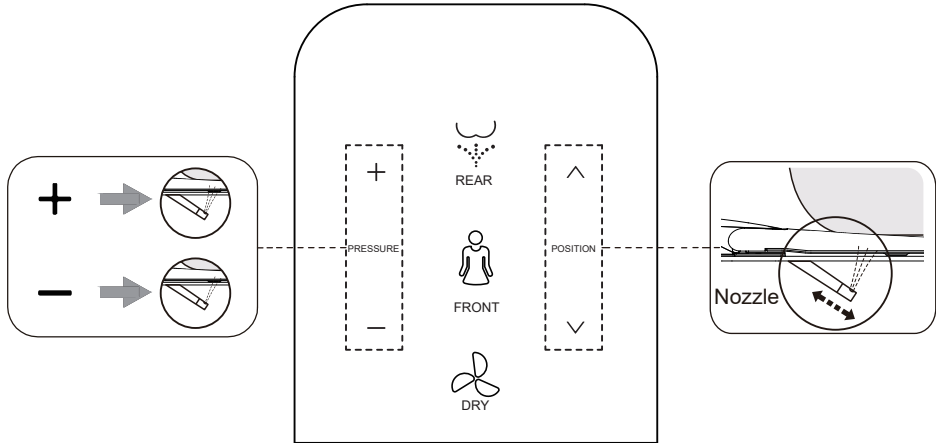

User code (Only for the toilet with User code function)

Long press "♂" or "♀" button to save the setting, including current pressure, nozzle position, dry temperature, water temperature, seat temperature and oscillating washing status. Quick press "♂" or "♀" button to use saved setting.

Mode 1: Load & act male rear wash Load & act female bidet wash




Mode 2: Load settings user 1 Load settings user 2

Mode2 support loading user settings only; Mode 1 support loading & acting user settings simultaneously. Remarks: Hardware 1 & 2 are matched with different smart seat/cover respectively. They do not coexist. Mode 1 support V8100 series, and Mode 2 support all except V8100 series, generally for now. Configuration refer to factual product version and subject to change.

Auto function (Only for the toilet with auto flush function)

- The automatic function of factory default setting is middle level for water volume, nozzle position, water temperature, air temperature, seat temperature; oscillating washing function is shut off. Users can set their personal favorite 6 state values such as level position and temperature and so on.
- Short press “” or “” to start rear washing or front washing automatically. The user can first set the water volume, nozzle position, temperature level and whether to open the oscillating washing function. After the setting is completed, press and hold the corresponding automatic button 3S to save the setting. The next time you use it, you can call the saved settings to turn on the automatic function by pressing the corresponding auto button, to achieve automatic cleaning, drying, etc.
- The Auto function mode will be off if the user presses other buttons during operation of auto functions and shift to operate the functions of the buttons.

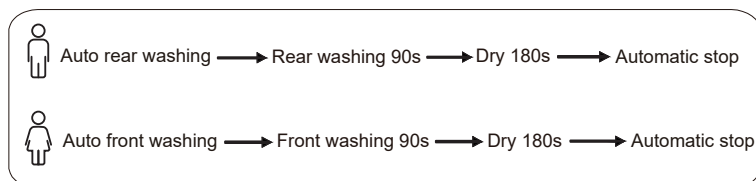

Temperature adjustment

- Drying air temperature adjustment: Press the “” button, the indicator light will light up the displayed drying air temperature level position, continue to press the “” button to adjust the air temperature. It will be neutral level when the indicator light is off, and the level position adjustment mode is up and down cycle.
- Water temperature adjustment: Press the “” button, the indicator light will light up the displayed water temperature position, continue to press the “” button to adjust the water temperature, and the indicator light will be neutral when the indicator light is off (Note: the setting temperature is $10 \pm 2.5^{\circ}\text{C}$ when the neutral level is in progress. When the water temperature is higher than 10°C , it will not be heated; when it is lower than 10°C , it will be heated; and the temperature of the outlet water will be controlled at about 10°C). And the level position adjustment mode is up and down cycle.
- Seat temperature adjustment: Press the “” button, the indicator light will light up the displayed seat temperature position, continue to press the “” button to adjust the seat temperature, the indicator light will be neutral when the indicator light is off. And the level position adjustment mode is up and down cycle.



Energy saver

Short press the "ECO" Energy saver button to cycle the power saving level position in 0, 3, 6, and 9. The level 0 refers to not turning on the energy saving, and the indicator light on the remote controller is not bright. At this time, the power indicator on the main unit is on, The saving energy indicator is off. 3, 6, and 9 respectively means 3 hours, 6 hours, and 9 hours of power-saving mode is on. The indicators on the remote control are illuminated by 1, 3, and 5 lights respectively. At this time, the power indicator on the main unit is off, and the energy-saving indicator is on.

If the 9-hour power-saving level position is turned on, the toilet will continue to save power for 9 hours every day for a fixed period of time, for example, at 8:00 am, then every day from 8:00 am to 17:00 pm, the toilet is in a power-saving state within 9 hours. Other time periods are working.

Energy saving:

- Under energy saving mode, seat temperature is low(level 1) to achieve energy saving. (Note: If the seat temperature before energy saving is neutral, keep the neutral after energy saving)

Remark:

- Energy saving mode will be suspended and goes to function mode if someone uses the seat in the middle of energy saving. The seat starts to heat immediately (without closing the seat temperature), and the energy saving mode is restored after the human body leaves the seat.




Oscillating washing operation

- Press the "OSCILLATING" button, the oscillating washing function is turned on, the nozzle moves back and forth to expand the washing range; press the "OSCILLATING" button again, the oscillating washing function is turned off, and the cycle is repeated.



Auto lid open/close (Only for toilet with this function)

- Press " " button to close seat cover.
- Press " " button to open lid and close seat.
- Press " " button to open lid and seat.

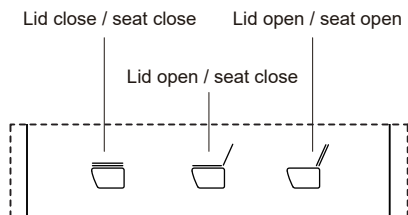

Combination button

Night light button

Night light factory default setting to be intelligent mode (automatically turn on/off the night light according to the external environment), first press and hold the "STOP" button, then press the "DRY" button to exit the smart mode. The night light is often off. Repeat the above actions to turn on smart mode.

Quiet mode

Press "STOP" button and then " " button to turn off buzzer to avoid noise in the night; Repeat the process to start buzzer function.

User code

The user button needs to be set to avoid disturbance from remote controls when more than one toilets are used in the house. Turn on the toilet for setting while turn off others.

- Press user button buttons (Press "STOP" button first and then press "REAR" button) to enter into user button setting mode, the indicator lights will be on and keep flashing.
- Press the water volume " + ", " - " button to choose user button, adjust the user button 1-9, the indicator light shows the corresponding user button.
- Press "STOP" button and then "REAR" button again, remote control will save the setting and exit user button setting window, the buzzer will ring "CLICK" to indicate successful setting.
- If the main unit is powered off and then restarted or the battery is removed from the remote control, press any key to release the capacitor on the keypad, the user button will be cleared and needs to be reset.
- Remote control will exit user button setting mode and go back to previous mode if there is no action for 10S after enter into user button setting mode.

Auto open/close

Press "STOP" button, and then press " " button, it is the mode of auto open/close. Repeat above action to stop this function. (This key combination is only for toilet seat with auto open/close function. The default setting of auto open/close is in the off state, so it needs to be turned on at the first-use.

Lid initializing

Press "STOP" button first and meanwhile press " " button to send lid initializing order to main unit.

Auto deodorizing button

Press "STOP" button first and meanwhile press "FRONT" button to start or close auto deodorizing function; The deodorizing function will be activated when detect the user sitting on the seat, the function will stop 3S after the user leaves. The deodorizing function will be off during drying operation. (Only for the toilets with auto deodorizing function, this function is the default when the toilet is power on.

Remark:

- The buzzer will sound "BEEP" when the user presses one button which means the main unit receives the signal and conduct the operation accordingly. If the buzzer doesn't sound, it means the main unit doesn't receive the signal, please adjust the remote control direction and repress the button.
- In case of power cut during wand's spray operation, the nozzle cannot go back to place, please wait until the power is reset. In case of a power cut for a long period, please push the nozzle softly back by hand. Do not push hard, to avoid damage to nozzle and electrical machine.
- The body should touch the seat and the buzzer rings "CLICK", which means functions of front cleaning, rear cleaning and drying are in operation. The nozzle will continue to spray for 1-2 seconds after user stands up during spray operation, so please press "STOP" button before standing up.



Set automatic Rear washing function

According to personal preference, press the nozzle position adjustment buttons “^”, “v” to adjust the nozzle position; press “+”, “-” to adjust the water volume, and then press “Wind temperature”, “Water temperature” and “Seat temperature” to adjust the temperature setting .

Press and hold the “” auto button for 3 seconds to save the settings.

After the setting is saved, just press “” shortly after each use, the remote controller will send the information of the nozzle position, water volume, temperature level and other information that you have previously set to the main unit, and call the corresponding parameters. At this point, you don't need to operate the remote control or any button on the main unit. The toilet will automatically run the cleaning and drying according to the set parameters, and then automatically stop working.

In the process of using the rear wash automatic function, the user can still change the nozzle position, water volume and temperature level position. To save the changed new settings, just press the rear wash automatic button for 3 seconds.


Set automatic Front washing function

According to personal preference, press the nozzle position adjustment buttons “^”, “v” to adjust the nozzle position; press “+”, “-” to adjust the water volume, and then press “Wind temperature”, “Water temperature” and “Seat temperature” to adjust the temperature setting

Press and hold the “” female front auto button for 3 seconds to save the settings.

After above steps, quick press “” afterwards when using, shortly after each use, the remote controller will send the information of the nozzle position, water volume, temperature level and other information that you have previously set to the main unit, and call the corresponding parameters. At this point, you don't need to operate the remote control or any button on the main unit. The toilet will automatically run the cleaning and drying according to the set parameters, and then automatically stop working.

In the process of using the female automatic washing function, the user can still change the nozzle position, water volume and temperature level. If you want to store the new settings after the change, just press and hold the female washing automatic button for 3 seconds.

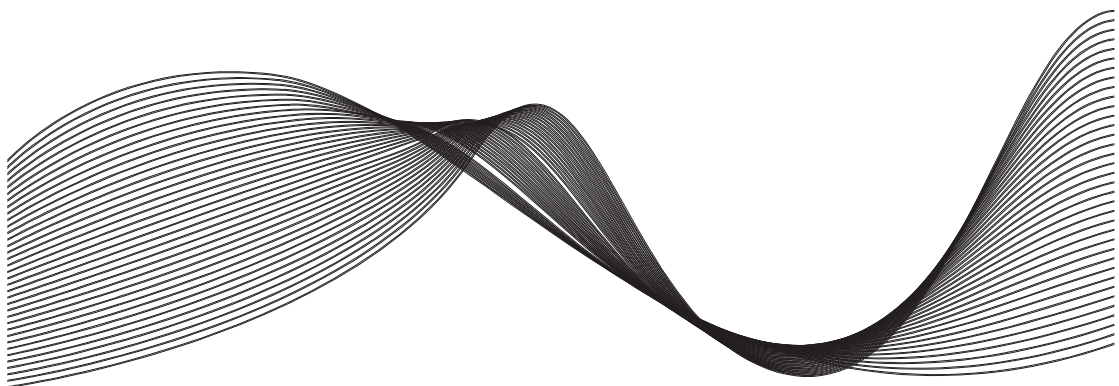

The picture of product may not entirely consistent with actual appearance and color because of products improvement, please in kind prevail.