 


Little Patrol Car

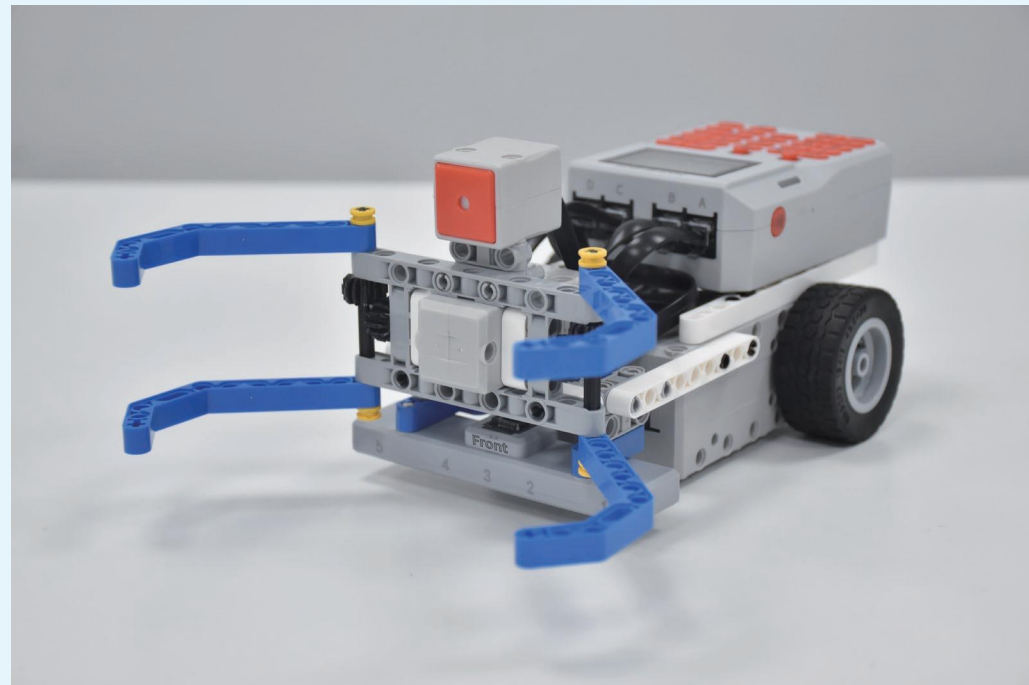 


01

1 Electronic module



MPC Controller x1

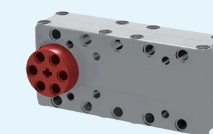

Motor x2



Servo Motor x1



Full Color Light x1



Integrated 5-Grayscale Sensor x1

 
2 Building Blocks





 Building steps: items with this icon need to be turned over. Accessories include decorative pieces, which can be decorated by yourself.

02



3 Let's start building

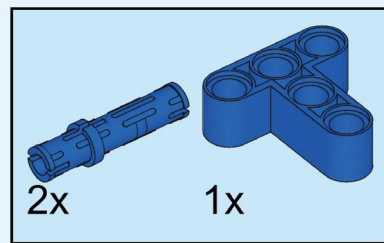



1

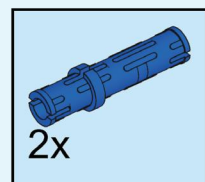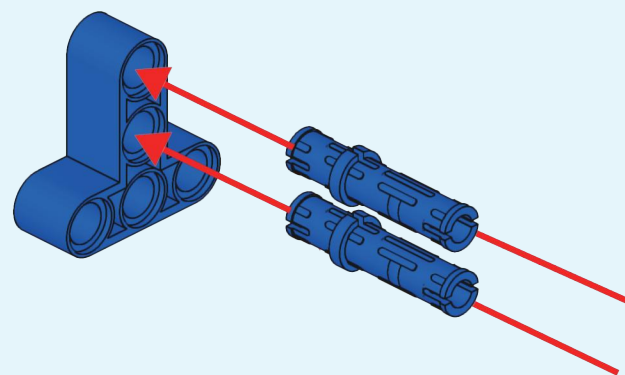  


2

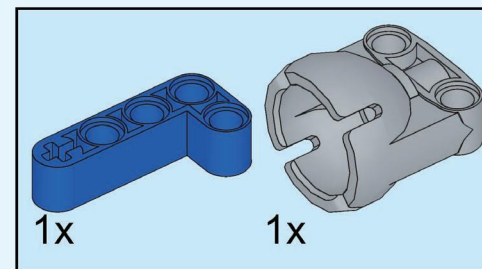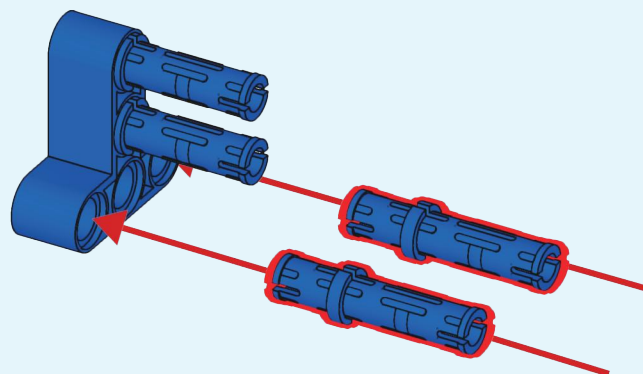  


3

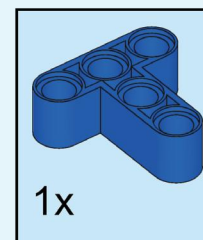 
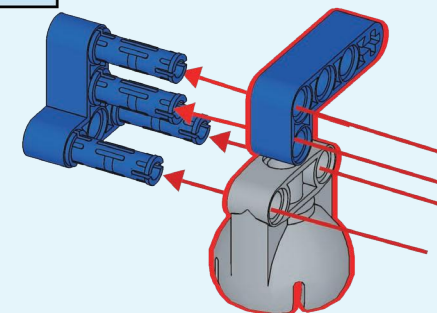 


4

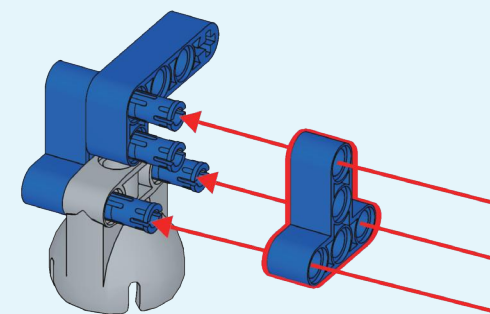 


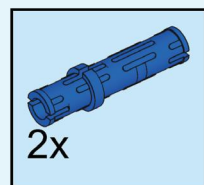 



5

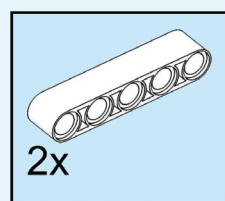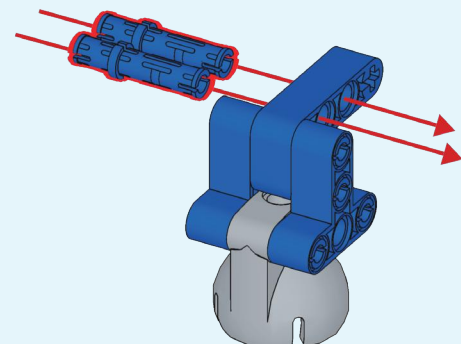  


6

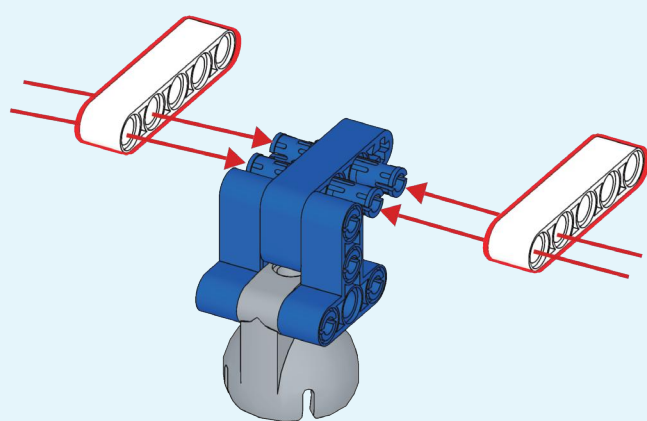 


7

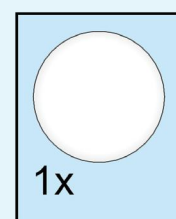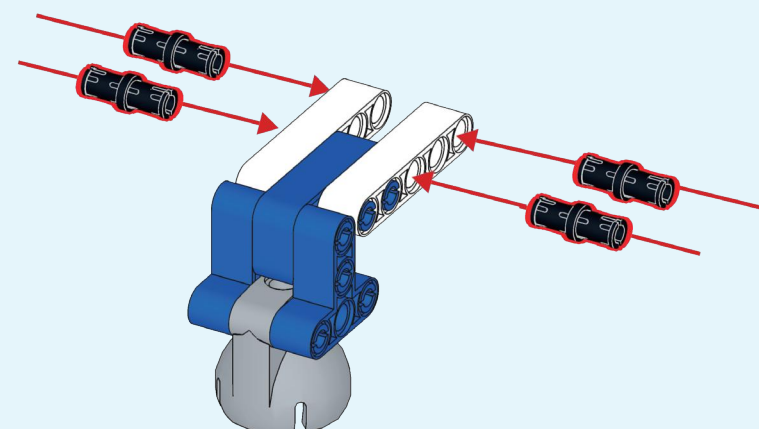  


8

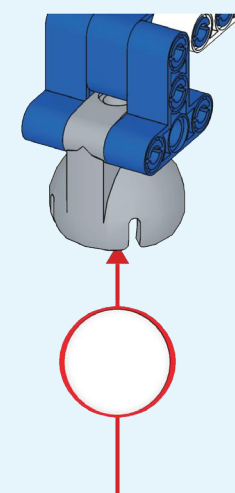 


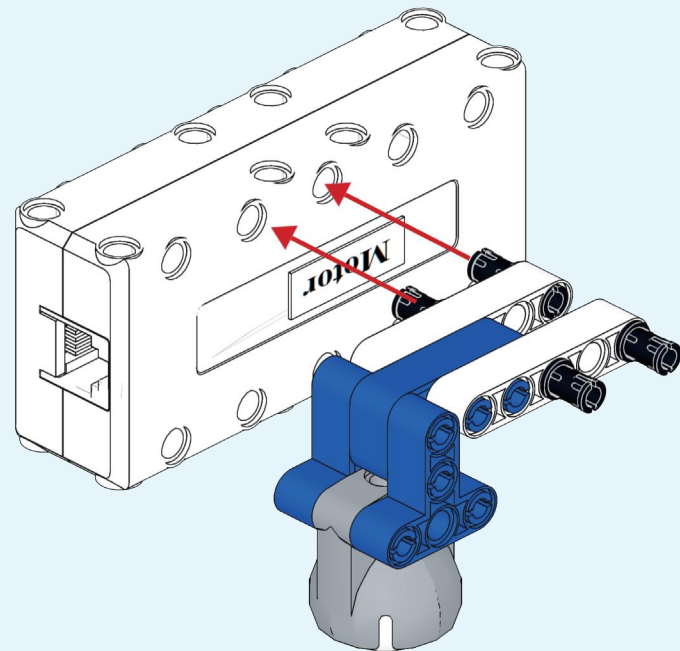 


9

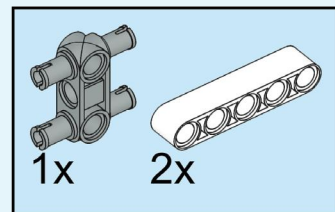 



10

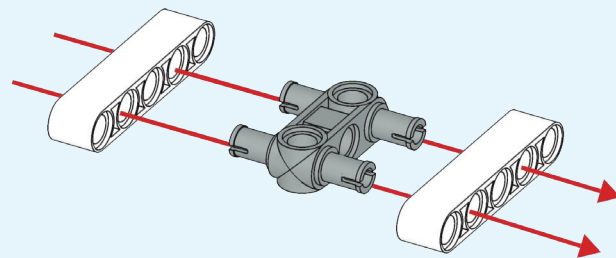 

07

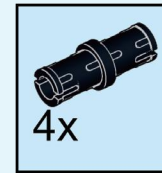 


11

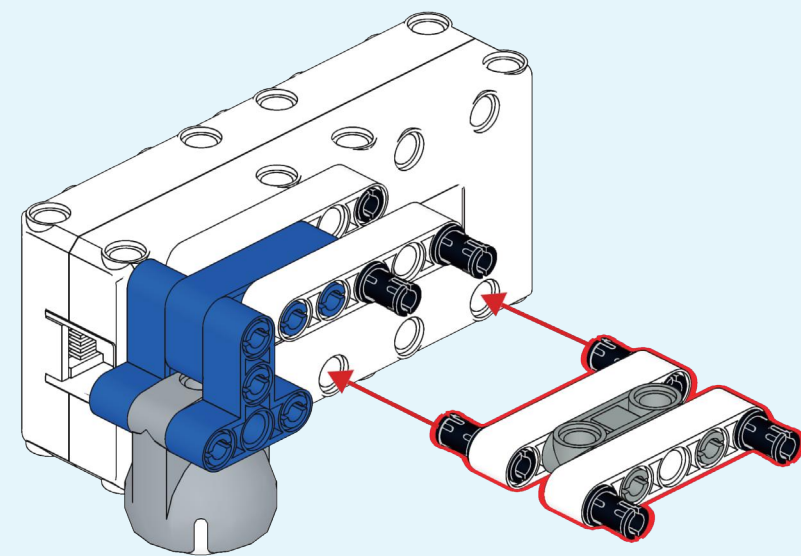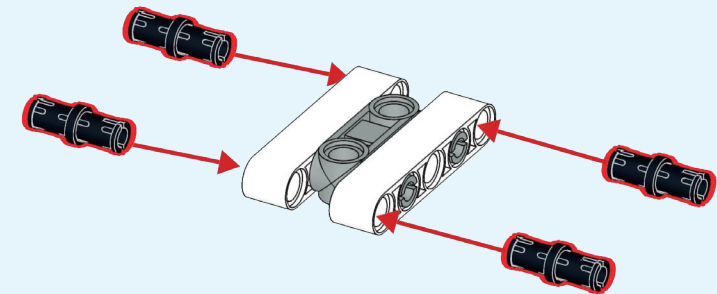  


12

 08

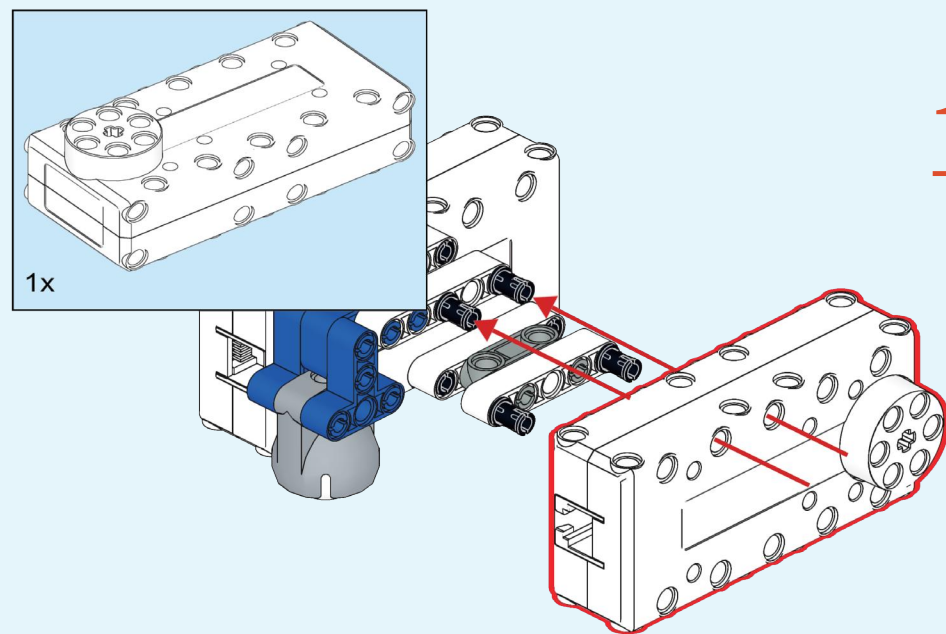


13

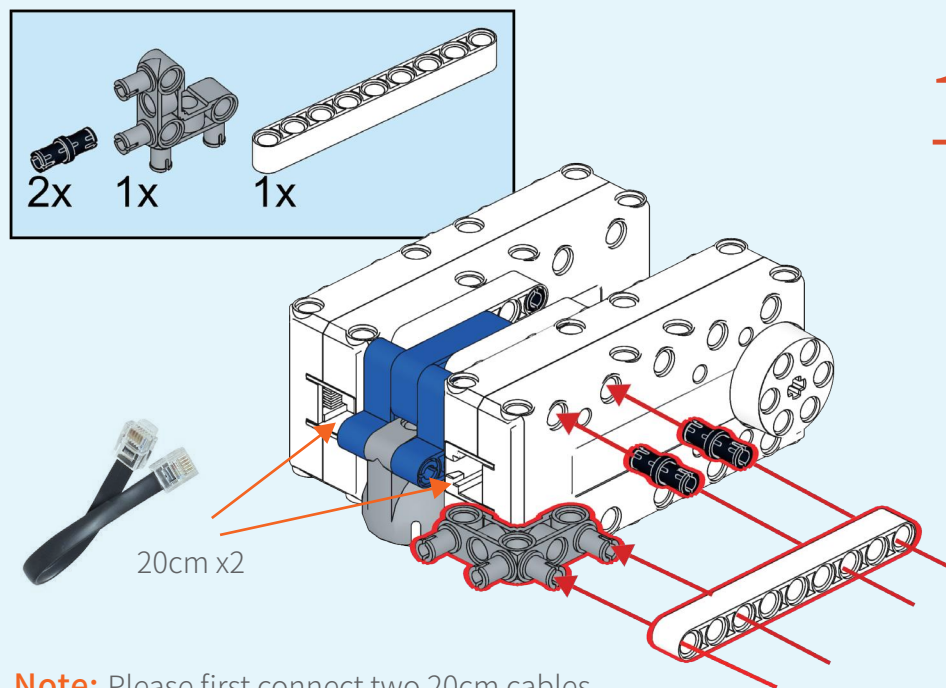 


14


 
Note: Please first connect two 20cm cables.

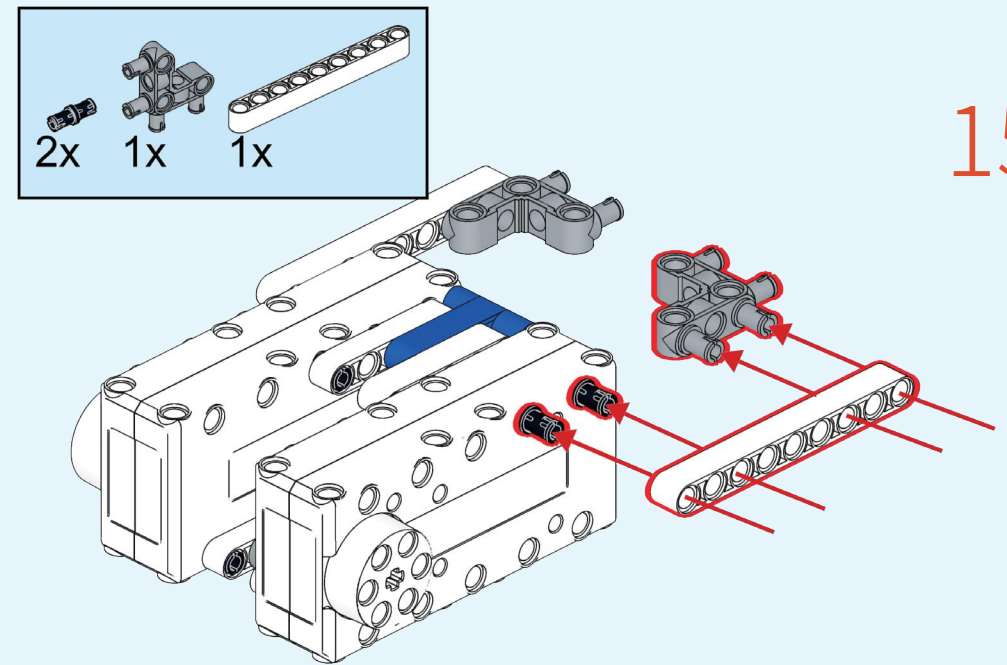



15

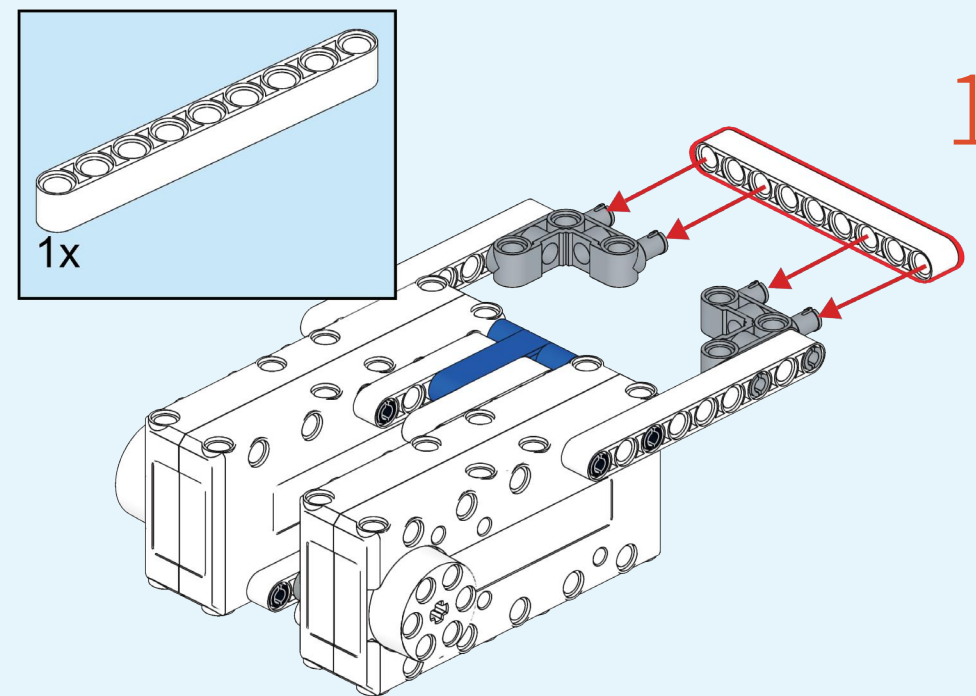 



16

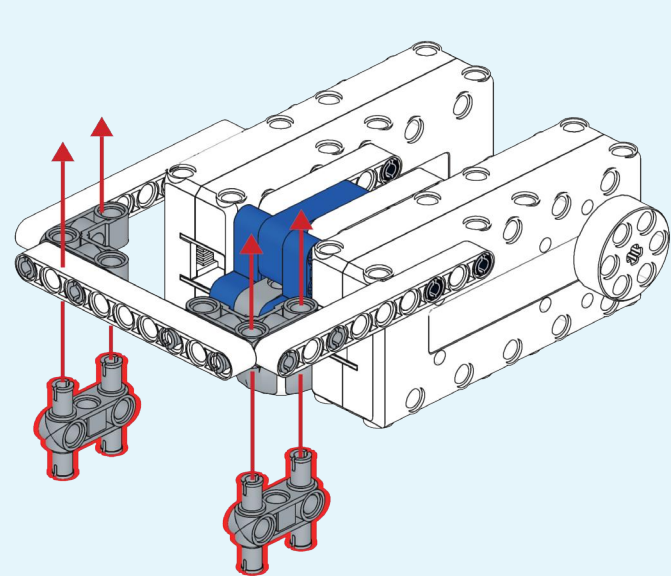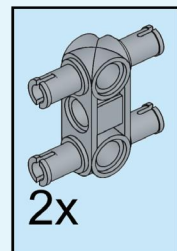  



17

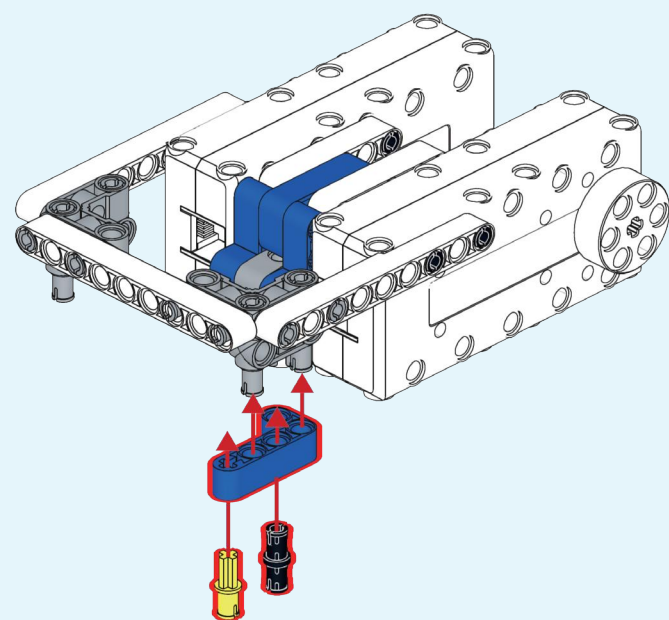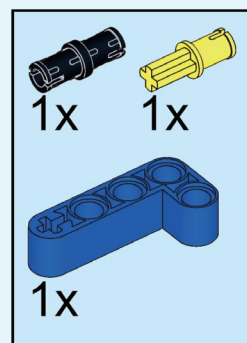  

18

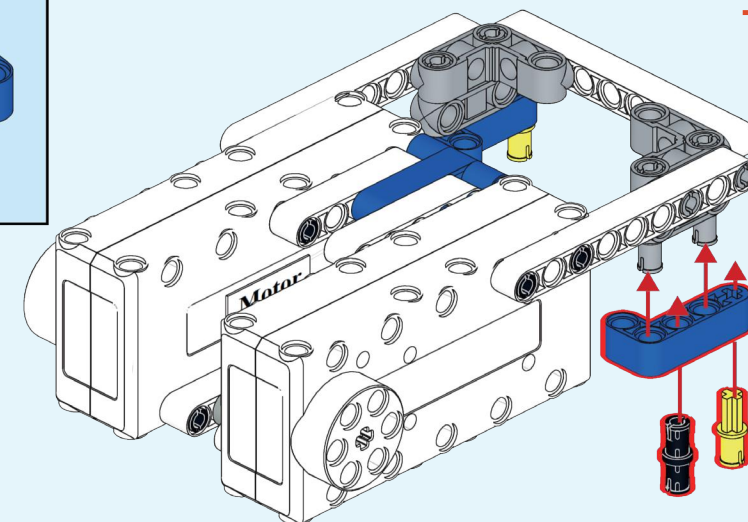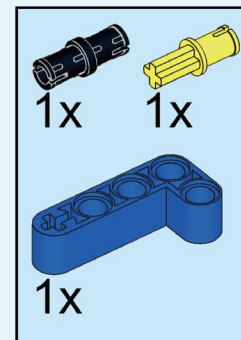  


19

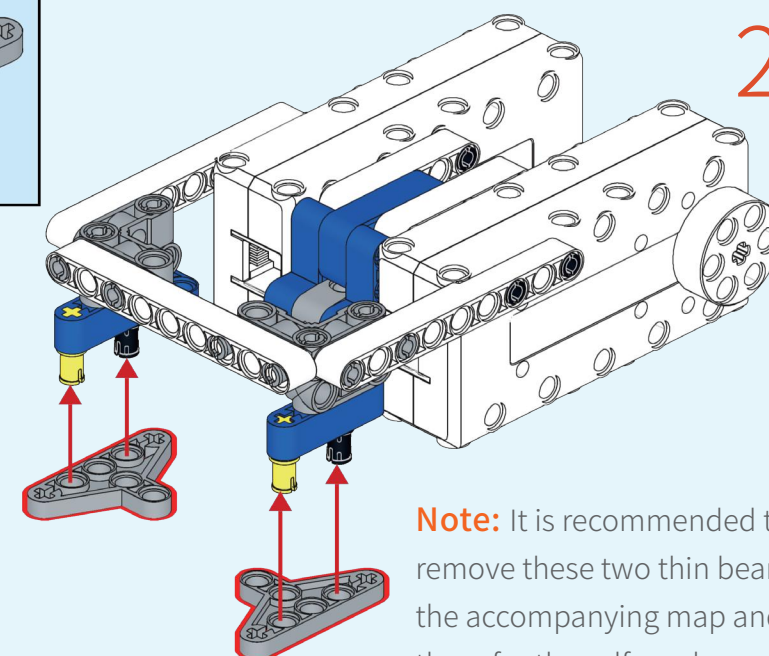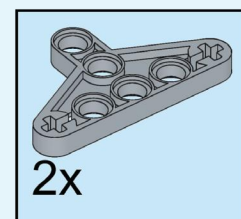  


20



 
Note: It is recommended to remove these two thin beams for the accompanying map and add them for the self-made route.

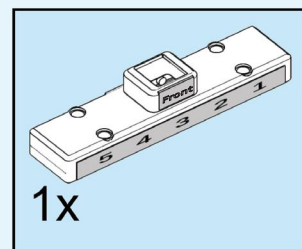


1x

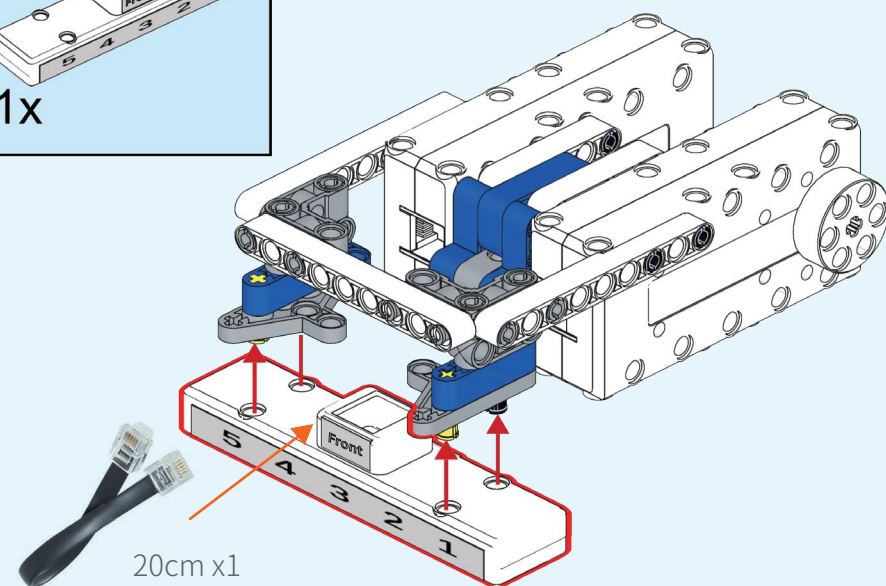 

   Note: Please connect the cable before installation.
Please pay attention to the installation direction.

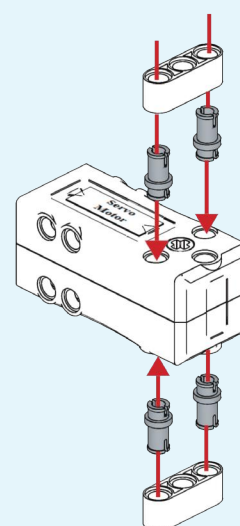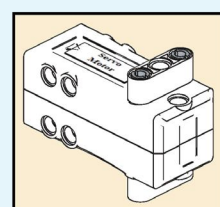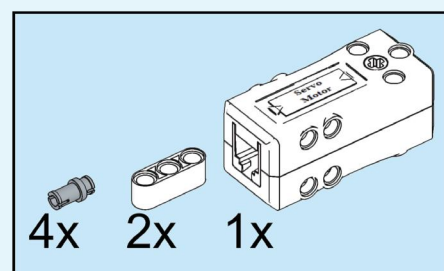


22


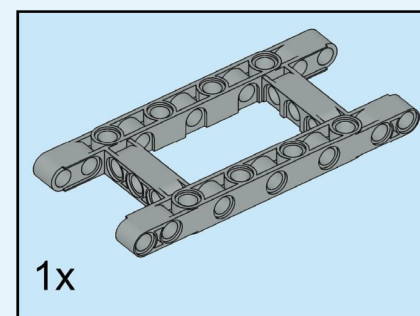 


1x


 
Note: There is a "Servo Motor" sign on the left side. Please pay attention to the installation direction.

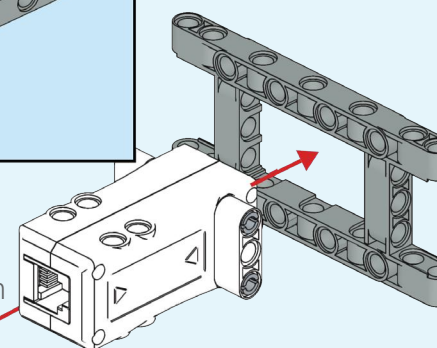

23

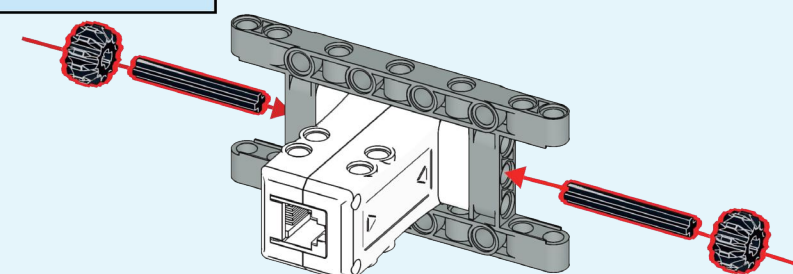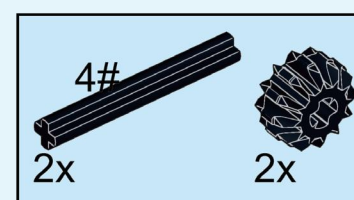  




24

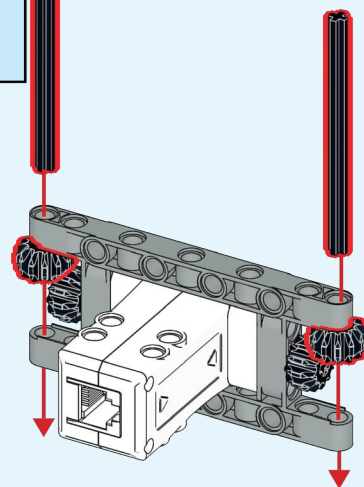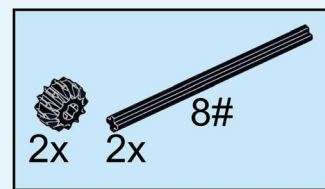  

25



Note:

   Before installing the servo motor structure, connect the servo motor to the controller F port, turn on the machine, select the middle mode, and set the servo motor angle to 45°.

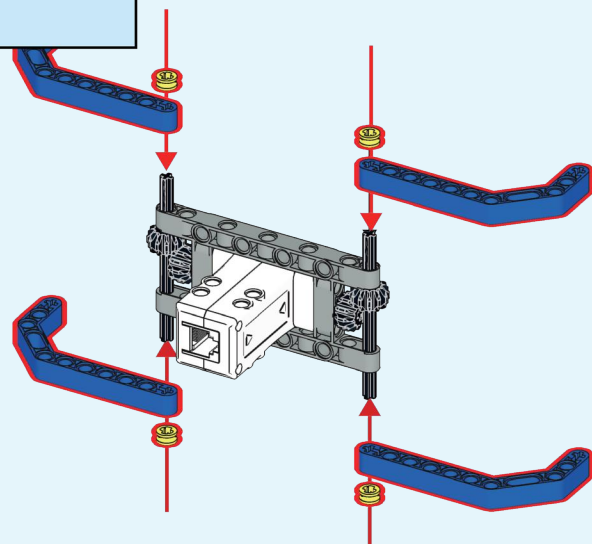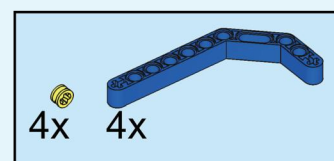
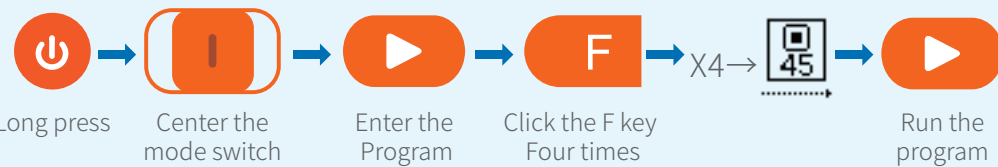


26

  15

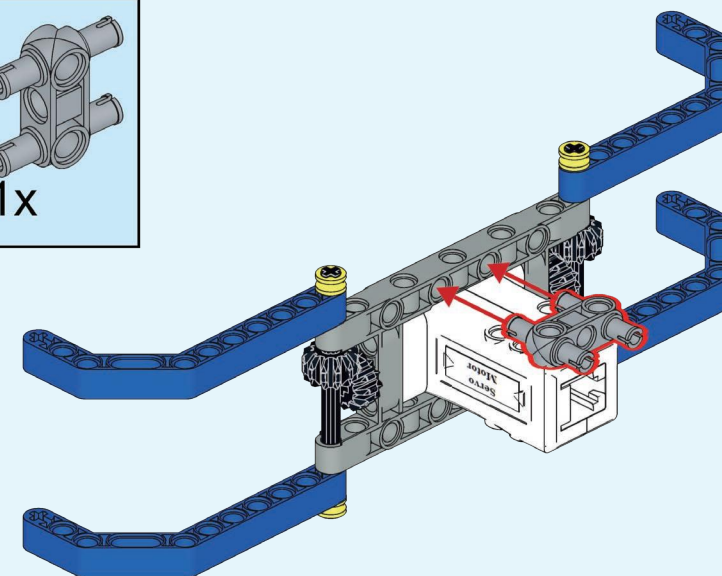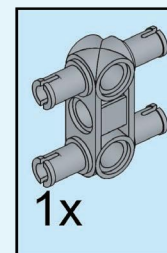







27

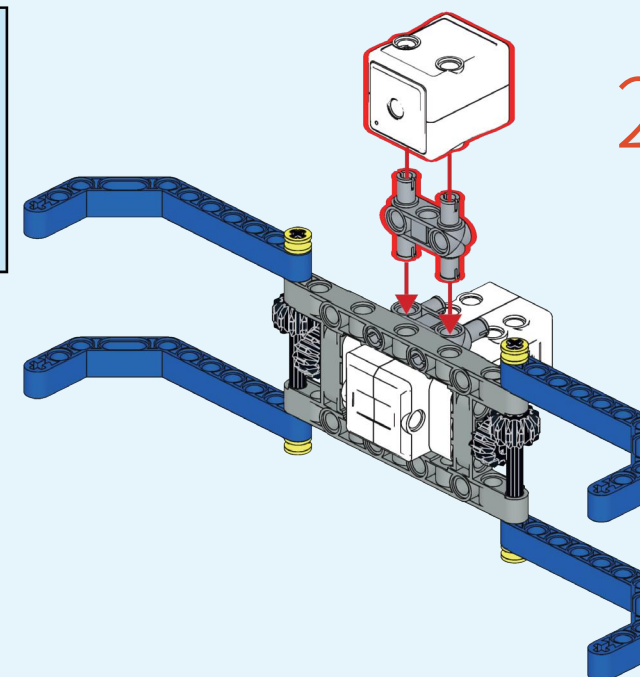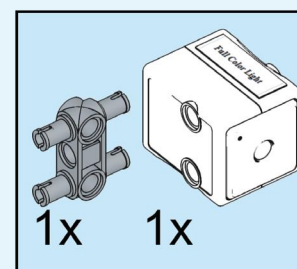  

28





      16

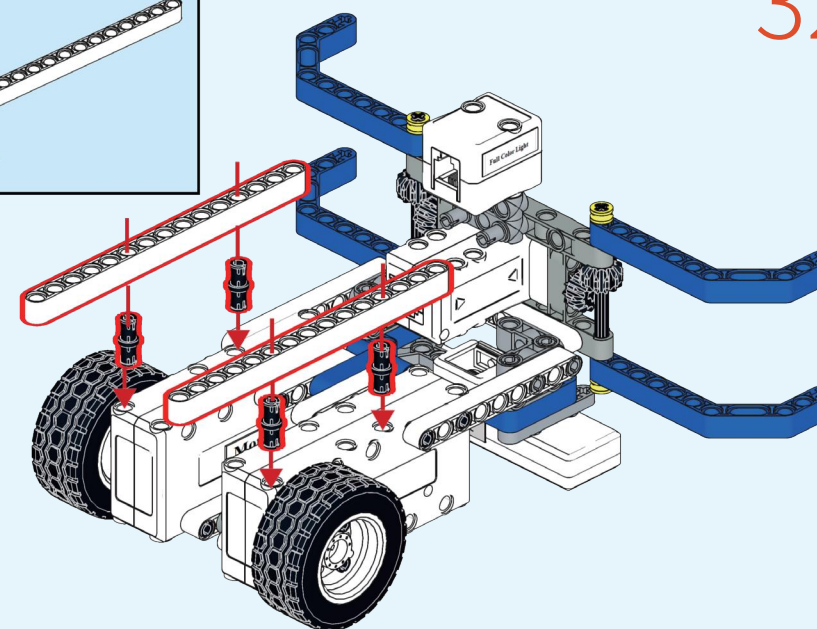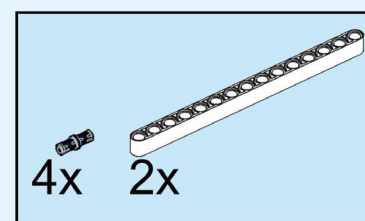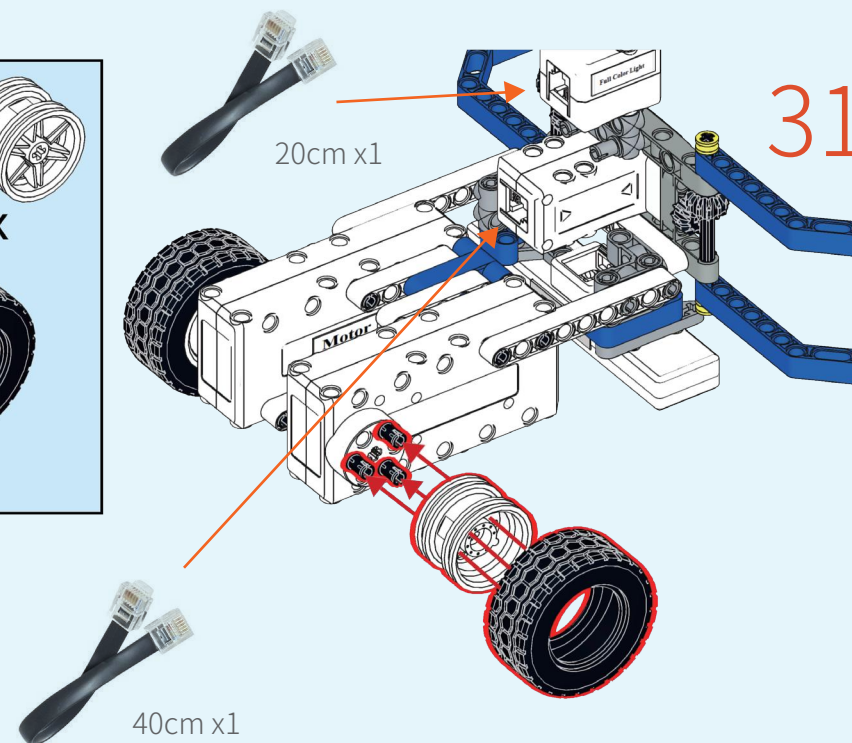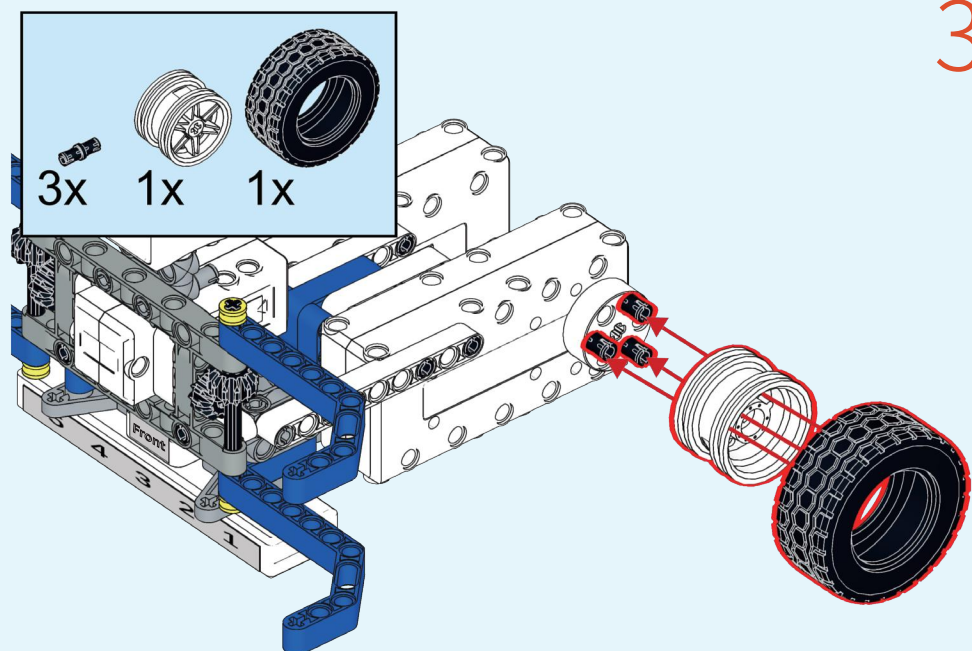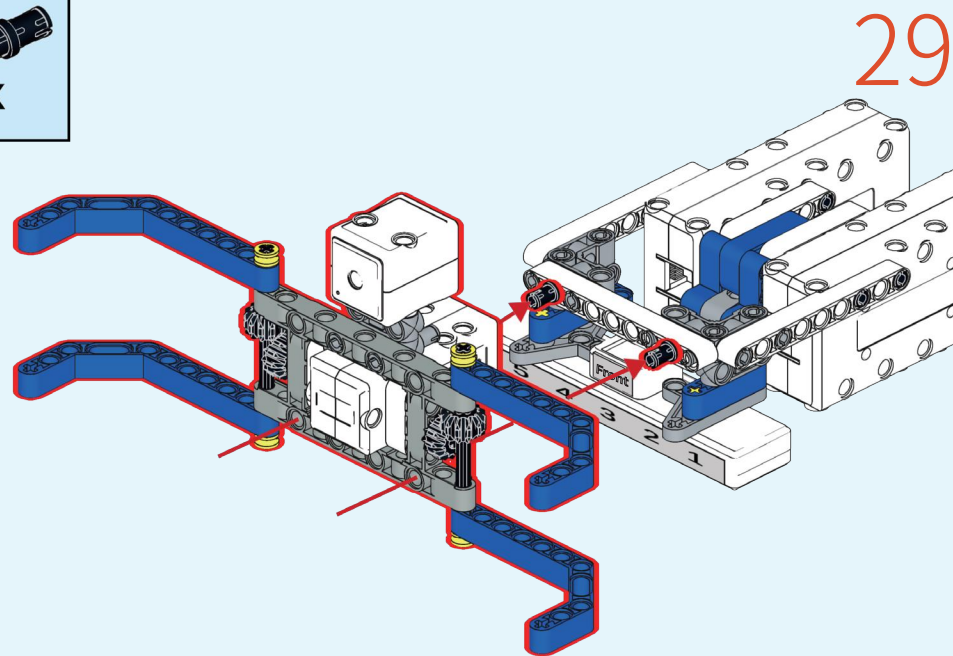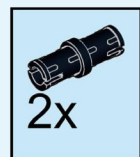




33

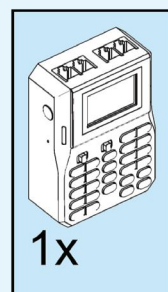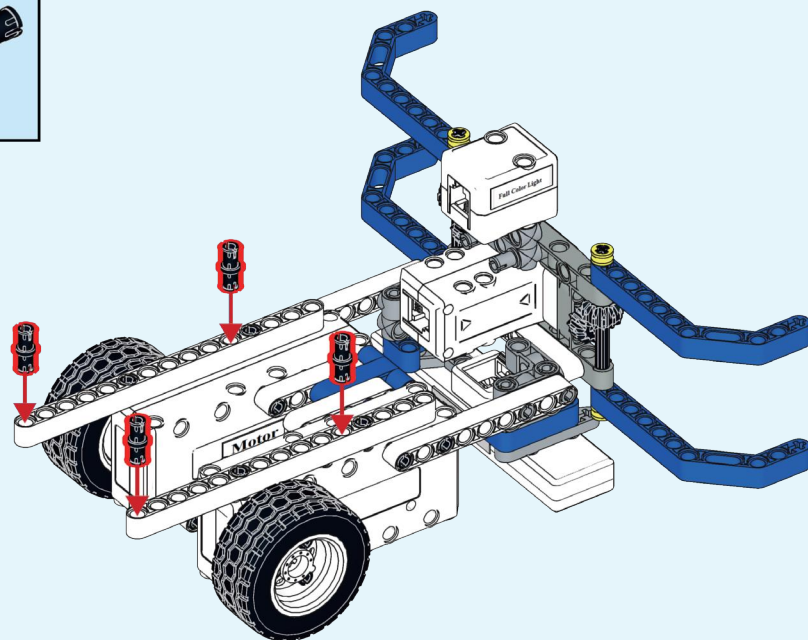  


34

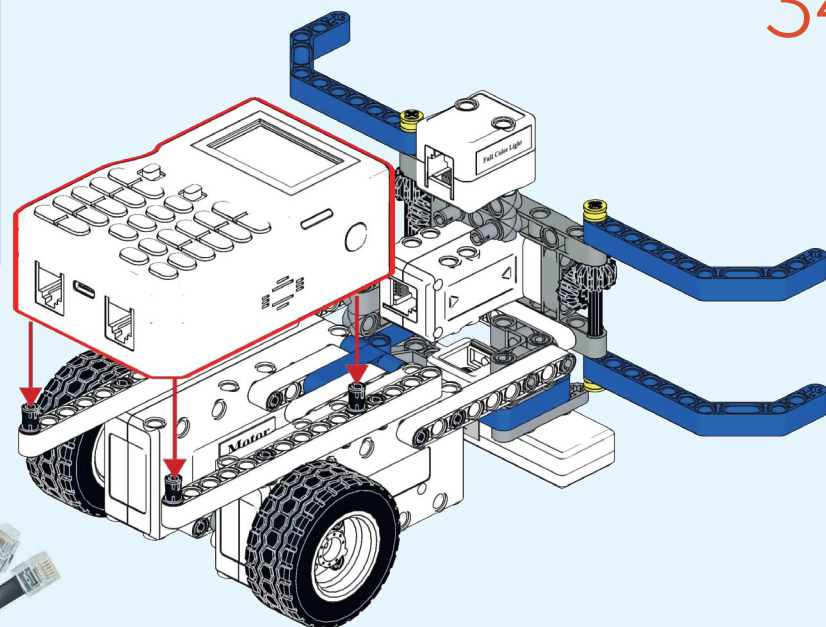 

Note: Please connect before installing the controller.

Right

 35

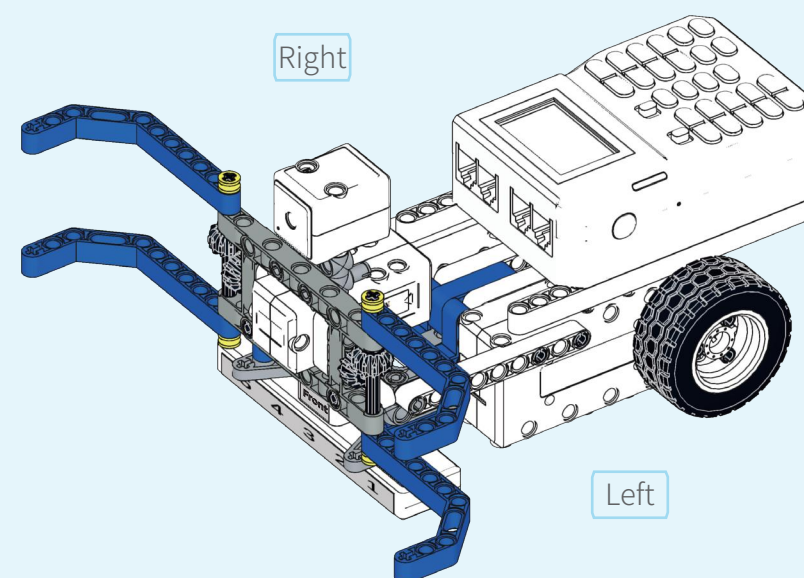

Left

Note: The left motor is connected to port A, the right motor is connected to port B, the integrated 5-grayscale sensor is connected to port C, the full color light is connected to port D, and the servo motor is connected to port F.