



LiFePO<sub>4</sub>

# 51.2V 100AH LIFEP04 BATTERY 3U MANUAL

## Operation and Maintenance

V3



(Model: ECO-LFP4810002)

### SUPPORT

If you are experiencing technical problems and cannot find a solution in this manual, please contact ECO-WORTHY for further assistance.



·Call: +1 866-939-8222(US&CA)  
+49 6175-6514-999(DE)  
+44 7553-406-988(UK)

·Web://[www.eco-worthy.com/](http://www.eco-worthy.com/)

·E-mail: [customer.service@eco-worthy.com](mailto:customer.service@eco-worthy.com)

## Description

This manual describes in detail the requirements and procedures for safe installation and operation of ECO-WORTHY lithium battery pack. Please read this manual carefully. Only qualified persons are allowed to install, operate and maintain the system, otherwise it may cause product damage or personal safety risks.

Any actions against safety operation, or do not follow rules of this manual and limited warranty letter, will void warranty and qualification of this product. Meanwhile, the manufacturer will be not responsible for the product damage, property damage, personal injury or even death.

The information contained in this manual is accurate when it's issued. **ECO-WORTHY reserves right to change specification (such as optimization, upgrade or other operations)** without prior notice.

In addition, please noted that the diagrams/schematics in this document are used to help understand system configuration and installation instructions, which may be different from the actual items in the installation.

# Contents

<b>I. Information</b>	1
<b>II. Safety</b>	4
<b>III. Product Overview</b>	6
<b>IV. Installation</b>	19
<b>V. Caution</b>	29
<b>VI. Troubleshooting</b>	30
<b>VII. Transport and Storage</b>	31
<b>VIII. Disposal of battery</b>	31
<b>IX. Technical Support</b>	32

# I. Information

## 1.1 Validity

This document is valid for: ECO-LFP4810002

## 1.2 Target Group

This document is intended for qualified persons and operators. Only qualified persons are allowed to perform activities marked with a warning symbol and the caption "Qualified person" in this document. Qualified persons must have the following skills:

- \* Knowledge of how lithium iron phosphate batteries work and are operated.
- \* Knowledge of how an energy storage system (including PV/battery/hybrid inverter, MPPT, Meter, Distribution box etc.) works and is operated.
- \* Knowledge of local applicable connection requirements, standards, and directives.
- \* Training in the installation and commissioning of electrical devices and batteries.
- \* Training in how to deal with the dangers and risks associated with installing, repairing and using electrical devices and batteries.

## 1.3 Levels of warning messages

The following levels of warning messages may occur when handling the product.



### DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



### WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

















### CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury or product permanent damage.

**NOTICE**

Indicates a situation which, if not avoided, can result in property damage or product not working or accelerated product damage.

## 1.4 Symbol Description

Symbols	Definition
	Indicates the danger of electric shock. If not avoided, it would cause casualties.
	Indicates a potentially dangerous condition which could result in injury or death.
	Indicates important information or warnings related to concepts talked about in the text.
	Indicates more information is available in other documents relating to the subject and reader.
	Indicates important steps or tips for optimal performance.
	Do not place the battery within children/pet touchable area.
	Do not place the battery near heat source and flammable material.
	Do not expose the battery to direct sunlight, rain and snow.
	Do not short circuit the battery.
	The UL1973 certificate label for Safety by Intertek
	Recycle label
	WEEE designation
Label	Definition
 Qualified person	Indicates activities that can only be performed by qualified persons
	Grounding point

## 1.5 Abbreviation Description

Abbreviation	Definition
Battery/battery pack/battery module	Single ECO-LFP4810002 rechargeable lithium iron phosphate battery pack including cells, BMS and enclosure etc.
Battery system/ cluster	Multiple ECO-LFP4810002 battery pack connected in parallel with power, communication and grounding cables and installation auxiliaries.
BMS	Battery management system Electronical Unit to ensure lithium cells' safety and display information or control the operation of the battery.
SOC	State of charge The battery state of charge refers to the percentage of the remaining capacity and rated capacity of the battery.
SOH	State of health The battery health status refers to the percentage between the full charged capacity and the rated capacity of the battery.
DIP switch	Used to set the address of the battery in the battery pack

## II. Safety

### 2.1 Safety precautions



DANGER

- Do not impact the battery with heavy objects.
- Do not squeeze or pierce the battery pack.
- Do not throw the battery pack into the fire.
- Do not connect the battery in series.



WARNING

- Fire risk
- Do not expose the battery pack to the condition over 80°C.
  - Do not put the battery near a heat source, such as a fireplace.
  - Do not expose the battery pack to direct sunlight or raining.



WARNING

- Electric shock risk
- Do not allow non-qualified person to disassemble the battery pack.
  - Do not touch the battery pack with wet hands.
  - Do not expose the battery pack to moisture or liquid environment.



NOTICE

- Damage risk
- Do not short-circuit or reverse connect the battery.
  - Do not use chargers or charging devices unapproved by the manufacturer to charge the battery.
  - Do not mix batteries from different manufacturers or different kinds types or brands.
  - For safety, it is not recommended to use the battery near the ocean.

### 2.2 Safety instructions

The battery has been designed and tested in accordance with international (such as ETL, IEC, UN38.3 etc.) safety requirements. However, due to various factors during the whole lifetime process, ECO-WORTHY cannot guarantee absolute safety, in order to prevent personal and property damage and ensure long-term operation of the battery. Please do read and follow the section below carefully to operate the battery and handle emergency situations.

### 2.2.1 Safety gear

It is required to wear the following safety gear when installing and handling the battery pack.



Insulated gloves



Safety Glasses



Safety Shoes

### 2.2.2 Emergency safety measures

#### \* Water invasion

Please cut off the AC power supply of the system first and then disconnect all switches under the premise of ensuring safety.

#### \* Electrolyte or gas leakage

If the battery pack leaks electrolyte, avoid contacting with the leaking liquid or gas. If one is exposed to the leaked substance, immediately perform the actions described below.

- Gas Inhalation: Evacuate the people from the contaminated area and seek medical aid immediately.
- Eye Contact: Flush your eye with clean and flowing water for 15 min, and then seek medical aid immediately.
- Skin Contact: Thoroughly rinse the exposed area with soap and water to be sure no chemical or soap is left on them, and seek medical aid immediately.
- Ingestion: Induce vomiting, and seek medical help immediately.



#### WARNING

In case of fire situations, please use carbon dioxide fire extinguisher rather than liquid to put out fires.


## 2.2.3 Other Tips

- All the product are strictly inspected before shipment. Please contact us for replacement if you notice there are any defectives such as swelling etc.
- Do not disassemble batteries and components, otherwise the manufacturer will not be responsible for any damage caused by unauthorized disassembly or repair.
- Enable the battery to be safely grounded before use to make sure the system in safe and normal operation.
- Please ensure that the electric parameters of these devices are compatible mutually before connecting the battery to other devices.
- Please take the environmental factors into careful considerations to ensure that the system can work in a suitable condition as the environment and storage methods have a certain impact on the service life and reliability of this product.

## III. Product Overview

### 3.1 Introduction

The ECO-LFP4810002 battery is designed for residential application and works as a storage unit in the photovoltaic system. It is a 48V Li-ion battery storage system, with BMS inside itself. It could be operated in both on-grid, back-up and off-grid modes with compatible inverters. Below is the general schematic of an ac-coupled system.

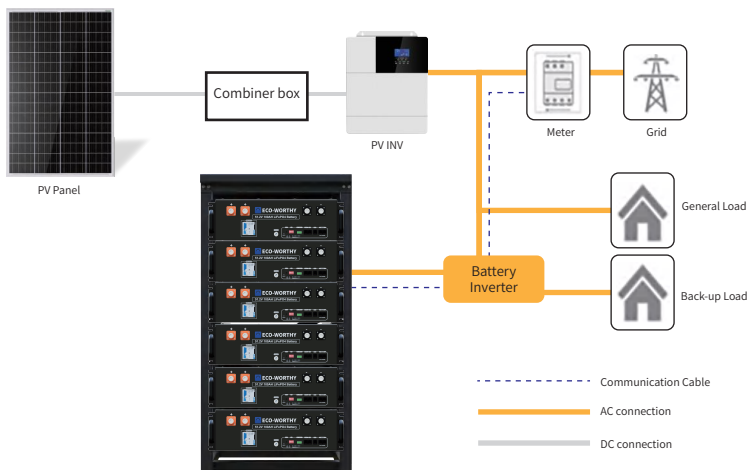





This electrical connection in this diagram is only for illustration. Please follow the manual suggestions of related devices and operate in accordance with locally applicable connection requirements, standards, and directives.

### 3.2 Features

- Equipped with shunt release, the safety performance is improved to a higher level.
- With highest safety, battery is made from LiFePO<sub>4</sub> chemistry and complies with highest international safety and transport standard.
- Modular and flexible, it can support up to 32 batteries connected together to expand the system energy.
- Built-in pre-charge circuit to avoid rush current when connecting with different inverters/chargers.
- Automatic dynamic addressing function when connecting multiple batteries together.
- It can support a maximum of 96% DOD under off-grid and back-up application.
- Built-in BMS provides warning and protection functions including over-discharging, over-charging, over-current, short-circuit and high/low temperature.
- LiFePO<sub>4</sub> is equipped with automatic balancing function to meet long cycle life. New batteries need to go through multiple charge - cycles (approximately 10 times) to reach their maximum capacity.
- Compact size and light weight for easy installation and maintenance.
- CAN/RS485 port for external communication.

### 3.3 Specification

#### 3.3.1 Dimension

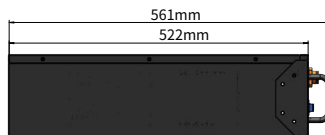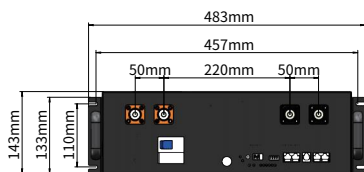

#### 3.3.2 Parameters

Items	ECO-LFP4810002
Rated voltage	51.2V
Max. voltage range	40~58.4V
Charge voltage	58.4V
Low voltage cut-off	40.0V
Nominal energy	5.12KWh
Usable energy	5.12KWh
Nominal capacity	100Ah

Dimension	22.09*19.02*5.63in/56.1*48.3*14.3cm	
Weight	103lbs/47kg	
Standard charge current	≤50A	
Max. charge current	100A	
Standard discharge current	≤50A	
Max. discharge current	100A(initial temp. ≤35°C)	
Communication port	RS485 /CAN/RS232	
Max. parallel number	32pcs	
Operating temperature	Charge: 0~55°C	Discharge: -20~55°C
Storage temperature	-20~25°C	Less than 1 year
	20~40°C	less than 3 months
	Environment at the shipment state	60±25%R.H.

### BMS Parameters

Charge	Spec	Delay	Recovery
Cell Voltage Protection	3650mV	3000mS	3400mV
Module Voltage Protection	58.4V	3000mS	54.4V
Charge Over Current 1	120A	2000mS	
Charge Over Current 2	130A	500mS	
Temperature Protection	<32°F/0°C or >149°F/65°C	/	>41°F/5°C or <122°F/50°C

Discharge	Spec	Delay	Recovery
Cell Voltage Protection	2500mV	3000mS	3000mV
Module Voltage Protection	40.0V	3000mS	48.0V
Discharge Over Current 1	120A	2000mS	
Discharge Over Current 2	140A	200mS	
Short Circuit	1200A	400uS	
Temperature Protection	<-4°F/-20°C or >149°F/65°C	/	>-4°F/-20°C or <14°F/-10°C

BMS	Parameter	Condition	
PCB Temperature Protection	$>221^{\circ}\text{F}/105^{\circ}\text{C}$		
Cell Balance	60mV charging equalization		
Temperature Accuracy	$\pm 3^{\circ}\text{C}$		
Cell Voltage Accuracy	$\pm 10\text{mV}$	For Cells	
Current Accuracy	$\pm 2\%$		
SOC	5%		
Power Consumption	Off Mode	$\leq 20\mu\text{A}$	Storage/Transport
	Sleep Mode	$\leq 200\mu\text{A}$	Sleeping
	Operating Mode	$\leq 50\text{mA}$	Charging/Discharging
Communication Ports	RS485、CAN、RS232		
Bluetooth&Wifi Signal Distance	$\geq 49$ feet/15m		



#### NOTICE

The optimum operating temperature range is from  $15^{\circ}\text{C}$  to  $30^{\circ}\text{C}$ . Frequent exposure to the harsh temperatures may worsen the performance of the battery pack and its cycle life.

### 3.3.3 Panel Interface



<b>NO.</b>	<b>Items</b>	<b>Usage description</b>	<b>Remark</b>
<b>A</b>	Handles	For handling, installation and disassembly of battery	4 open holes for fixing battery on the rack
<b>B</b>	Positive terminal	Used to connect the inverter/charger	
<b>C</b>	Negative terminal	Used to connect the inverter/charger	
<b>D</b>	125A breaker & shunt release	Over-current protection & BMS Second level of protection	Connected in series to the positive busbar
<b>E</b>	Power switch	Used to Power on/off BMS	
<b>F</b>	Reset	Used to reset the BMS	
<b>G</b>	ADD	Used to set the address of the battery in the battery pack	
<b>H</b>	Dry contact	PIN1 to PIN2: Normally open, closed for fault PIN3 to PIN4: Normally open, closed for low battery warning	
<b>I</b>	RS485-1	Connect to host computer/inverter	Baud rate 9600
<b>J</b>	CAN	Connect to inverter	Baud rate 9600
<b>K</b>	RS232	Connect to host computer/inverter	
<b>L</b>	RS485 IN RS485 OUT	For communication between batteries	Baud rate 19200
<b>M</b>	ON/OFF indicator	Indicates whether the battery is turned on or off	
<b>N</b>	RUN	Used to show battery is in running status when lighting or flashing	
<b>O</b>	ALM	Used to show battery Alarm/ Protection status	
<b>P</b>	SOC	Used to show battery real-time SOC	
<b>Q</b>	Grounding	Used to connect battery with ground	



By setting the address through the dip switch on the BMS to distinguish different PACKs, it is necessary to avoid setting the address to be the same. The definition of the BMS dip switch refers to the table below, and the system supports a maximum of 32 parallel machines.


Battery ID	ADD Settings						Explain
	1	2	3	4	5	6	
1	ON	OFF	OFF	OFF	OFF	OFF	SET TO PACK1 (Master)
2	OFF	ON	OFF	OFF	OFF	OFF	SET TO PACK2
3	ON	ON	OFF	OFF	OFF	OFF	SET TO PACK3
4	OFF	OFF	ON	OFF	OFF	OFF	SET TO PACK4
5	ON	OFF	ON	OFF	OFF	OFF	SET TO PACK5
6	OFF	ON	ON	OFF	OFF	OFF	SET TO PACK6
7	ON	ON	ON	OFF	OFF	OFF	SET TO PACK7
8	OFF	OFF	OFF	ON	OFF	OFF	SET TO PACK8
9	ON	OFF	OFF	ON	OFF	OFF	SET TO PACK9
10	OFF	ON	OFF	ON	OFF	OFF	SET TO PACK10
11	ON	ON	OFF	ON	OFF	OFF	SET TO PACK11
12	OFF	OFF	ON	ON	OFF	OFF	SET TO PACK12
13	ON	OFF	ON	ON	OFF	OFF	SET TO PACK13
14	OFF	ON	ON	ON	OFF	OFF	SET TO PACK14
15	ON	ON	ON	ON	OFF	OFF	SET TO PACK15
16	OFF	OFF	OFF	OFF	ON	OFF	SET TO PACK16
17	ON	OFF	OFF	OFF	ON	OFF	SET TO PACK17
18	OFF	ON	OFF	OFF	ON	OFF	SET TO PACK18
19	ON	ON	OFF	OFF	ON	OFF	SET TO PACK19
20	OFF	OFF	ON	OFF	ON	OFF	SET TO PACK20
21	ON	OFF	ON	OFF	ON	OFF	SET TO PACK21
22	OFF	ON	ON	OFF	ON	OFF	SET TO PACK22
23	ON	ON	ON	OFF	ON	OFF	SET TO PACK23
24	OFF	OFF	OFF	ON	ON	OFF	SET TO PACK24
25	ON	OFF	OFF	ON	ON	OFF	SET TO PACK25
26	OFF	ON	OFF	ON	ON	OFF	SET TO PACK26
27	ON	ON	OFF	ON	ON	OFF	SET TO PACK27
28	OFF	OFF	ON	ON	ON	OFF	SET TO PACK28
29	ON	OFF	ON	ON	ON	OFF	SET TO PACK29
30	OFF	ON	ON	ON	ON	OFF	SET TO PACK30
31	ON	ON	ON	ON	ON	OFF	SET TO PACK31
32	OFF	OFF	OFF	OFF	OFF	ON	SET TO PACK32



NOTICE

Failure to follow the DIP switch setting will cause the communication fault between battery and inverter. For detailed settings with different inverter/charger, please contact your supplier or ECO-WORTHY for consultation.

### 3.3.3.2 Communication Interface Pin Diagram

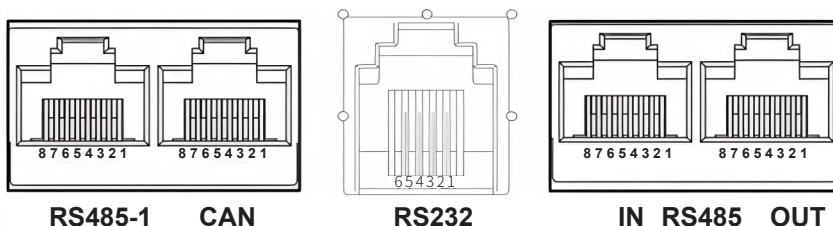

Communication Port	RS485-1		CAN		RS232		IN RS485 OUT	
Functional Description	Connect to host computer/inverter		Connect to host computer/inverter		Connect to host computer		Parallel communication	
Pin Description	PIN	Description	PIN	Description	PIN	Description	PIN	Description
	1,8	RS485-B1	1,8	NC	1,2	NC	1,8	RS485-B2
	2,7	RS485-A1	2,7	NC	3	TX	2,7	RS485-A2
	4	NC	4	CANH1	4	RX	4	NC
	5	NC	5	CANL1	5	GND	5	NC
3,6	GND	3,6	GND	6	14V	3,6	GND	

### The communication protocols/devices/software supported by each ports

PORT	RS485-1	CAN	RS232
<b>USAGE</b>	Connect to the inverter or upper computer	Connect to the inverter	Connect to the upper computer
<b>SUPPORT</b>	PYLON-LV RS485 V3.5 2019/08/07 (9600)-(Default)	Pylon CAN bus protocol V2.0.6_220510-(Default)	JBD-UP
	Growatt Low voltage battery BMS V1.09(1)-20201022	Growatt BMS CAN-Bus-protocol-low-voltage-V1.04	Solar Assistant
	VOLTRONIC-485-V1.0.3-200325	Goodwe-CAN-V1.7-220228	Overkill
	LXP-485-V1.0.0-210625	Sofar-CAN-V1.00-211117-Rev6	
	Deye-485 Modbus Protocol(4)-deye-V1.30-20160801	Victron-CAN-V1.00-210107	
	SRNE WOW PACE BMS Modbus Protocol for RS485 V1.3(2020-11-24)	Luxpowertek Battery CAN Protocol-V1.0-20200211	
	Lithium Battery Protocol GT Version December 22 Version 1.0	Deye-Low voltage battery CAN -V1.0-20220402	
	SAKO-485 Inverter and BMS communication Protocol(2022-01-07)	Ginlong-Low voltage battery CAN Protocol	
		SMA-CAN V1.0.0-210630-FSS-ConnectingBat-TI-en-20W	
		VMII-Low voltage battery CAN Protocol-V1.4 SRNE_WOW_BMS_Modbus_Protocol_for_CAN_V1.0	
	INVT-BMS and PCS CAN Protocol V1.00		

 
### 3.3.3.3 Reset

BMS Status	Operation	LED indicator	System
<b>Sleep mode</b>	Press button(1 second) and then release	The LED indicators light up in sequence: SOC1-> SOC6-> ALM-> RUN-> MOS, each indicator lights up for 0.5 seconds	Protection board activated
<b>Active mode</b>	Press the button(3~6 seconds) and release	The LED indicators light up first, then turn off in sequence: MOS-> RUN-> ALM-> SOC6-> SOC1	System entered sleep mode
<b>Active mode</b>	Press the button(6~10 seconds) and release	The LED indicators display according to the current power level	Protection board reset


### 3.3.3.4 Parallel Wiring Instructions

Example of parallel dialing method


1#




Standard Ethernet cable

 


2#

 

Standard Ethernet cable

 


3#

 


Standard Ethernet cable



 
13#



Standard Ethernet cable

 


14#

 

Standard Ethernet cable



 15#



terface



### 3.3.3.5 LED Description

#### LED Indicator Light Colors

Name	ON/OFF	RUN	ALM	SOC(LED1~6)					
				LED1	LED2	LED3	LED4	LED5	LED6
Color	Green	Green	Red	Green	Green	Green	Green	Green	Green

#### LED Indicator Light Status Display

Status	Description
On	The light stays on continuously.
Off	The light stays off continuously.
Slow Flash	The indicator turns on for 0.25S and off for 3.75S.
Fast Flash	The indicator turns on for 0.5S and off for 0.5S.
Medium Flash	The Indicator turns on for 0.5S and off for 1.5S.

#### SOC Indicator Status (Battery Level)

Charging State		Charging State Indicator Logic						Discharging State Indicator Logic					
LED		LED1	LED2	LED3	LED4	LED5	LED6	LED1	LED2	LED3	LED4	LED5	LED6
SOC	0~16.6%	Off	Off	Off	Off	Off	Fast Flash	Off	Off	Off	Off	Off	On
	16.6~33.2%	Off	Off	Off	Off	Fast Flash	On	Off	Off	Off	Off	On	On
	33.2~49.8%	Off	Off	Off	Fast Flash	On	On	Off	Off	Off	On	On	On
	49.8~66.4%	Off	Off	Fast Flash	On	On	On	Off	Off	On	On	On	On
	66.4~83.0%	Off	Fast Flash	On	On	On	On	Off	On	On	On	On	On
	83.0~100%	Fast Flash	On	On	On	On	On	On	On	On	On	On	On
RUN		On						Medium Flash					

## LED Indicator Light Description

System Status	Event	ON/OFF	RUN	ALM	SOC(LED1~6)						Description
					LED1	LED2	LED3	LED4	LED5	LED6	
Shutdown State	Sleep	Off	Off	Off	Off	Off	Off	Off	Off	Off	Indicator lights are all off
Standby State	Normal	On	Slow Flash	Off	Indicate according to SOC status						/
	Warning	On	Slow Flash	Medium Flash	Indicate according to SOC status						/
Charging State	Normal	On	On	Off	Indicate according to SOC status						/
	Warning	On	On	Medium Flash	Indicate according to SOC status						/
	Over-voltage protection	On	On	Off	On	On	On	On	On	On	Stop charging
	Over-current, High/Low temperature	On	Off	On	Off	Off	Off	Off	Off	Off	Stop charging
Discharging State	Normal	On	Medium Flash	Off	Indicate according to SOC status						/
	Warning	On	Medium Flash	Medium Flash	Indicate according to SOC status						/
	Under-voltage Protection	On	Off	Off	Off	Off	Off	Off	Off	Off	Stop charging
	Over-current, Short-circuit, High/Low temperature	On	Off	On	Off	Off	Off	Off	Off	Off	Stop charging
Failure State	Single cell disconnect, Temperature probe disconnect, AFE sampling failure, Discharge MOS failure	Off	Off	On	Off	Off	Off	Off	Off	Off	Stop charging

**Important Notes:**

1. Alarm: The ALM light alerts you to issues that may limit the inverter's charging or discharging current.
2. Standby Warning: The warning state in standby mode is triggered first by an alarm, then the device enters standby mode.

### 3.4 Protection

Items	Description	Remark
Charge End Cell/ PACK high-voltage	The BMS will stop charging if any cell or PACK voltage reaches the protection value and it will be auto-released only when both Pack and cell voltage back to the release voltage range or there is efficient discharge current.	
Discharge End Cell/ PACK low-voltage	The BMS will stop discharging if any cell or PACK voltage is under the protection value and it will be released only when all the cell voltage back to the release voltage range or there is efficient charge current.	It can automatically recover. Please charge timely, otherwise it may be in Low-power mode to be over-discharged.
High temperature	The BMS will halt charging, discharging, or both if any cell, environment, or MOSFET temperature falls outside the acceptable range.	Automatic recovery
Low temperature	The BMS will stop charging or discharging or both if any cell/environment/MOS temperature is under the range.	Automatic recovery
Charge over-current	The BMS will stop charging when the charging current is higher than the protection value. And it will release from the protection when the system delays time is met.	It can automatically recover. If locked after three consecutive times, manual intervention is required.
Discharge over- current/ Overload	The BMS will stop discharging when the discharging current is higher than the protection value. And it will release from the protection when the system delays time is met.	Automatic recovery. If locked after three consecutive times, manual intervention is required.
Short-circuit/ Reversed	Short-circuit and Reversed polarity protection happened	Charge to release Manual reset
Temperature, Voltage, Current sensor failure	When entering the failure mode, manual intervention is required; no charging and discharging.	Manual intervention
Dormancy mode	After reaching a certain condition, it will be in the dormancy mode.	Recoverable

**CAUTION**

Please re-charge the battery via solar, grid/generator or other energy source within 24h if the battery is over-discharged.

**NOTICE**

Manually short-circuiting and reversing the battery will void the warranty.

## IV. Installation

### 4.1 Preparation

#### 4.1.1 Safety Compliance

The system installation must be finished by qualified person(s). During the whole installation process, please strictly follow the local safety regulations and related operating procedures.

#### 4.1.2 Environment

The operating environment shall meet the following requirements:

Category	Description
Working temperature	-20°C-55°C(maximum operating range) 15°C-30°C (optimal temperature)
Relative humidity	5%~90%, No condensation
Altitude	<3000m
Safety requirement	<ul style="list-style-type: none"> <li>•Do not expose the battery to direct sunlight, rain and snow.</li> <li>•Do not place the battery within children/pet touchable area.</li> <li>•Do not place the battery near heat source and flammable material.</li> <li>•Do not place the battery in a closed place where the ventilation is not available.</li> <li>•Do not drop, deform, impact, cut or spearing with a sharp object.</li> <li>•Do not put heavy things on battery.</li> <li>•Do not disassemble the battery without Manufacturer's permission.</li> <li>•No conductive dust and water or other liquid to contact battery.</li> <li>•Follow the emergency measure if there is water invasion or electrolyte and gas leakage.</li> <li>•Contact your supplier within 24 hours if any product failure happens.</li> </ul>
Area restriction	This product is not suitable for use near the ocean.




### 4.1.3 Tools





Tools	
Screwdriver (slot, cross)	Multi-meter
Wrench	Clamp meters
Diagonal pliers	Insulating tape
Needle nose pliers	Thermometer (observe the installation environment)
Clamping pliers	Anti-static bracelet
Wire stripper	Cable ties

## 4.2 Inspection

### 4.2.1 Unpack precautions



- \* Please load and unload it in accordance with the specified requirements to prevent sun and rain when you receive the equipment.
- \* Please check and confirm the goods (such as quantity, appearance, etc.) according to the "scope of delivery " before unpacking.
- \* Do light take and put during unpacking process to protect the surface coating of the object;
- \* Please record and contact to the manufacturer if the inner packing is damaged after unpacking.

General materials		
 <p>Battery Pack *1pcs</p>	 <p>Manual *1pcs</p>	 <p>BMS &amp; APP Quick Start*1PCS</p>

Cables		
Type	Details	Qty.
Battery to Battery Communication Cable	 <p style="text-align: center;">150</p>	1PCS
Parallel Cables	<p>A: Battery to Battery positive cable(2AWG 150mm RED)</p>  <p style="text-align: center;">150</p>	1PCS
	<p>B: Battery to Battery negative cable(2AWG 150mm BLACK)</p>  <p style="text-align: center;">150</p>	1PCS
Grounding Cable	 <p style="text-align: center;">200</p>	1PCS

## 4.2.2 External cable

Cables connected to inverter or junction box belong to External Cable kits. It is NOT included in battery carton. Customers need buy it separately, and the information are as below.

Type	Detail	Qty.
Cables	<p>C: Battery to Inverter positive cable(2/0AWG 2000mm RED)</p> 	1PCS
	<p>D: Battery to Inverter negative cable(2/0AWG 2000mm BLACK)</p> 	1PCS



### NOTICE

Keep the unused cable pins NULL to avoid affecting the closed loop communication.



### NOTICE

A ground connection of communication cable may be required from some inverters. Please follow the rules from inverter manufacture.

## 4.3 Start Installation

### Qualified person

#### 4.3.1 Remainder

Please check again whether the following conditions or equipment meet the requirements before installation:

- \* Check if there's enough space for installation, and if the load-bearing capacity of the bracket or cabinet meets the weight requirements;
- \* Check whether the power cable pair(s) used meets the maximum current requirement for operation;
- \* Check whether the overall layout of power supply equipment and batteries at the construction site is reasonable;
- \* Check whether the installer is wearing anti-static wristband;
- \* Check whether there're two people on the construction site for installation work;
- \* Check if there's potential risks at location of installation site, e.g flooding, sun exposure, corrosion, and salt spray.

#### 4.3.2 Procedures



CAUTION

Injuries may result if the product is lifted incorrectly or dropped while being transported or mounted. Wear suitable personal protective equipment for all work on the product.



CAUTION

Ensure that no lines are laid in the wall which could be damaged when drilling holes.

### 4.3.2.1 Install the Battery

#### 1 Insert the Battery into the Rack Slot



**NOTICE**

For any other installations, please avoid the battery directly contacting the ground and avoid of high salinity, humidity to prevent the product from rusting and corrosion.

## 2 Connect the batteries in parallel



### Warning

First, ensure that the circuit breaker is in the off position on the left, and the POWER switch is off.

- ① Use the grounding wire included in the packaging to connect the casings of all batteries in series.



- ② Use the 2AWG 200mm battery parallel wires included in the packaging to connect the batteries in parallel.



- ③ Connect the batteries with the battery communication wires.

Note: Connect from the OUT port of the host battery to the IN port of the slave battery.

### 4.3.2.2 Set the inverter communication protocol

#### 1 Turn on the battery

① Turn on the 125A Circuit Breaker

② Press the POWER button



#### 2 Use the mobile app to set the communication protocol

① Scan the QR code to download the software

② Open the software and search for nearby devices (please turn on Bluetooth on your phone and grant Bluetooth permissions)



③ Modify the Inverter Protocol on the Parameter page (For more detailed information, please refer to APP-Quick Start)



**CAUTION**

Confirm inverter AC input and PV input are disconnected before wiring connection, and the DC/ signal switch of inverter/charger is in off status.

**NOTE**

Choose the suitable breaker considering the inverter power/current, rated voltage, and tripping characteristic etc.

**NOTICE**

The maximum communication cable length is required to be less than 15m between inverter/charger and battery.

The maximum power cable length is suggested to be less than 10m between inverter/charger and battery.

**CAUTION**

The maximum tolerance current of each power cable and terminal is 125A, and 100A for continuously is suggested. Please use corresponding number of power cable pairs according to the field configuration and local connection requirements, standards, and directives.

# V. Caution



## CAUTION:

Never position the battery upside down or face down!



## VI. Troubleshooting

Items	Solution	Measure
Unable to start	<ol style="list-style-type: none"> <li>1. Switch on battery and press RESET for 6s to observe whether the battery can be started.</li> <li>2. Charge the battery with a charge or inverter to provide 54-57.6V voltage and observe whether it can be started.</li> </ol>	<p>If the abnormal status is still alive after these steps, please contact your supplier.</p> <p>If there is any other situation(s) excluding in this table, turn off the faulty battery, and contact your supplier.</p>
Unable to charge	<ol style="list-style-type: none"> <li>1. Check whether the cable connection between the battery and the inverter/charger is correct.</li> <li>2. Check whether the inverter/charger setting is correct.</li> <li>3. Check whether the battery is in charge protection mode; if yes, try to discharge the battery.</li> </ol>	
Unable to discharge	<ol style="list-style-type: none"> <li>1. Check whether the cable connection between the battery and the inverter/charger is correct.</li> <li>2. Check whether the battery occurs short circuit, reverse connection, pre-charge failure during connection inverter etc.</li> <li>3. Check whether the battery is in discharge protection mode; if yes, try to charge the battery.</li> </ol>	
High/Low temperature	<ol style="list-style-type: none"> <li>1. Stop the battery system for a while, and check whether the installation location temperature meets the requirement.</li> <li>2. Avoid continuous full charging and discharging.</li> </ol>	
High current	Check whether the configuration and parameters setting on the inverter/charger is correct.	
ALM ON	Turn off all the batteries, and remove the fault battery from the system.	
Communication fail	<ol style="list-style-type: none"> <li>1. Check whether the communication cable type is correct and is contacted well.</li> <li>2. Check whether the DIP switch setting is correct.</li> <li>3. Check whether the inverter protocol related setting is correct.</li> <li>4. Check whether both battery and inverter are working properly.</li> </ol>	
ALM and RUN indicator lights flash continuously	There is a problem with the battery software and the firmware needs to be updated. Please contact the supplier to obtain the update method.	
The BMS cannot communicate	There is a problem with the battery software and the firmware needs to be updated. Please contact the supplier to obtain the update method.	
The ON/OFF indicator does not light up	Please contact the supplier for repair documentation.	



### NOTICE

Please restart after software is upgraded.

## VII. Transport and Storage

- \* Do not violently shake, impact or squeeze, and prevent sun and rain during the transportation.
- \* Do light take and put and strictly prevent falling, rolling, and heavy pressure during loading and unloading.
- \* The battery should be placed in a dry, clean, dark, and well-ventilated indoor environment for long-term storage, and the recommended storage temperature range is 15~30°C .
- \* No harmful gases, flammable and explosive products and corrosive chemical substances in the storage location.
- \* The batteries should be stored and transported in close to 50% SOC, and do not store over 80% SOC for long time.
- \* The battery needs to be charged every 6 months if it is not used for a long time.
- \* No fall down, no pile up over 6 layers, and keep face up.

## VIII. Disposal of battery

Disposal of battery must comply with the local applicable disposal regulations for electronic waste and used batteries. Please review your local battery recycling or management regulations or contact ECO-WORTHY for more information.

# IX. Technical Support

UK

DE

## 1) Customer service email:



**E-mail:** [customer.service@eco-worthy.com](mailto:customer.service@eco-worthy.com)

## 2) Company address: USA/Germany



**Address(US):** 4411 East State Hwy D Suite C Springfield, Missouri 65809



**Address(DE):** ECO-Worthy Europe GmbH Otto-Hahn-Str. 20 61381 Friedrichsdorf - Köppern Germany

## 3) Customer service telephone numbers:

**Tel(DE):** +49 6175-6514-999

**Tel(US&CA):** +1 866-939-8222

**Tel(UK):** +44 7553-406-988

### Note:

Customer Service Hours:

**US:** Mon-Fri 8:30 AM - 6:00 PM(CST)

**UK:** Mon-Fri 9:00 AM - 5:00 PM(GMT)

**DE:** Mon-Fri 9:00 AM - 5:00 PM(CET)

## 4) Official website address:



**Web:** <https://www.eco-worthy.com/>

## 5) Official social media:




**Facebook:** <https://www.facebook.com/ecoworthy.store/>



**Youtube:** @ecoworthy



**Tiktok:** [https://www.tiktok.com/@eco\\_worthy](https://www.tiktok.com/@eco_worthy)

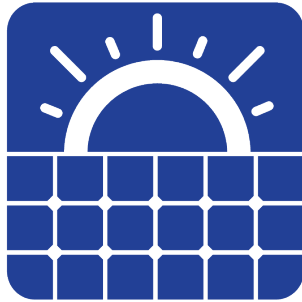

**ECO-WORTHY**