

Product overview

- Rated voltage: AC230V, AC110V, AC24V
- Rated torque: 80N.m
- Running time: **about 20s**
- Install valves: 2-way, 3-way ball valve and butterfly valve
- ※ **Note: Please reserve torque factor of safety when selecting**
- Wiring and feedback model: BD3S、B3S、B3C
- Adopted high-performance Synchronous Motor
- It can be used 20,000 times.*1
- ※ It is forbidden to use 2 or more actuators in parallel




Technical Data

Electrical data	Rated voltage	AC230V(50HZ)	AC110V	AC24V
	Rated voltage range	AC230V±10%	AC110V±10%	AC24V±10%
	Power consumption	60W@max 55W@running 0W@holding	60W@max 57.2W@running 0W@holding	60W@max 52.8W@running 0W@holding
	Peak current	0.27A@5ms @AC230V	0.54A@5ms @AC230V	2.5A@5ms @AC230V
	Fuse	1A	2A	8A
Functional data	Connecting cable	7P-5.08-500V ×(0.5-1.5)mm ² terminal 7×0.5mm ² cable, voltage withstand AC300V (Length 800mm)		
	Rated torque	80Nm@rated voltage		
	Angle of rotation	90±2°		
	Max angle of rotation	360°		
	Manual operation	※ Matching hexagon wrench, using at no power		
	Running time	About 20s		
	Operating mode	S3-75%(AC), S3-85%(DC)(loading ≤85% rated torque refer to IEC60034-1)*2		
	Sound power level	65dB(A)		
Working conditions	Position indicator	Mechanical		
	Electricity safety level	I Type(ground protection)	Type(ground protection)	III Type(safety low voltage)
	Inflaming retarding level	HB/ UL94 test method		
	Enclosure	IP67 As Per En60529/GB4208-2008 (all directions) F type can add bracket or dehumidifying heater		
	Insulation resistance	100MΩ/500VDC	100MΩ/500VDC	100MΩ/500VDC
	Withstand voltage	1500VAC@1Min	1500VAC@1Min	500VAC@1Min
	Medium temperature	≤80°can install to actuator directly ※ >80° need to install heat radiation stand		


Output axis specification	Female octagonal
Hole deepness	≤20mm(Female octagonal)
Weight	ABS material 2.2kg Aluminum material 2.5kg

Dimension [Female octagonal]


TCR-08/11

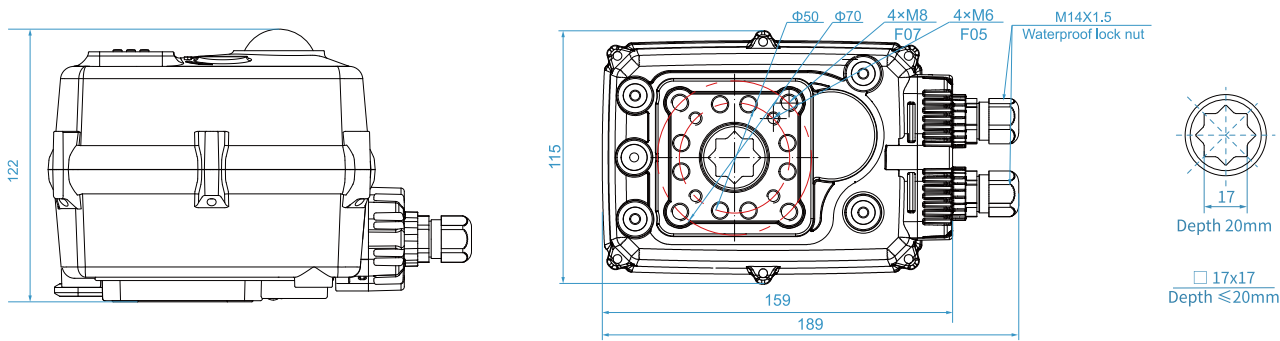

TCN-08/11

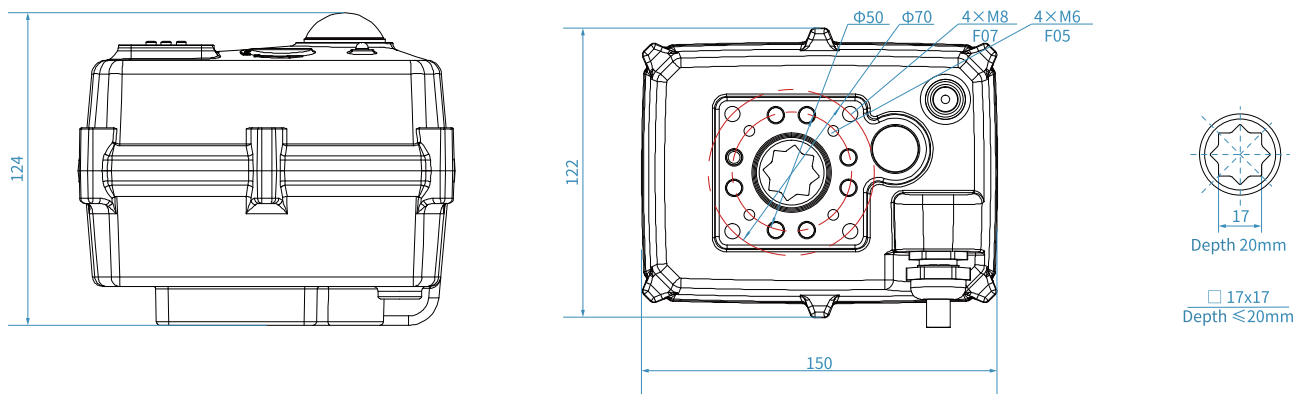


Main parts

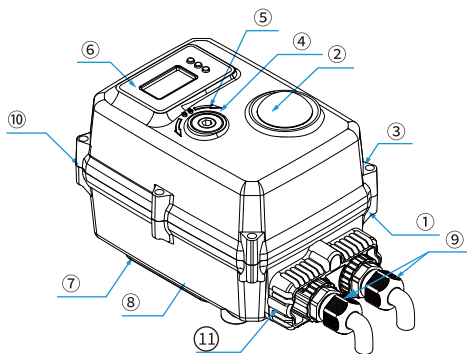

	Parts	Material		Parts	Material
1	Actuator	Heatproof ABS or Casting aluminum	8	Hexagon wrench	CR-V
2	Indicator	PC	9	Waterproof cable connector	NiLon
3	Screwx4	304	10	Lid seal	Silica gel
4	Manual shaft	304	11	Terminal cover	PC+PET
5	Oil seal	NBR			
6	Label	PVC			
7	Wrench fixed	Heatproof_ABS			

Wiring diagrams


BD3S

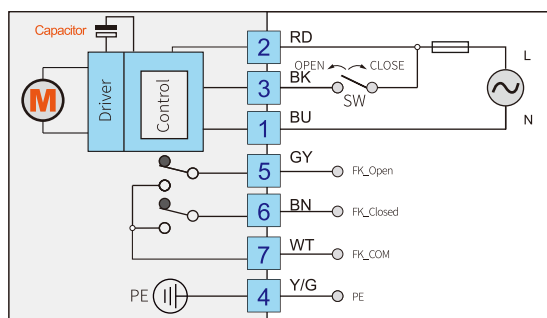

Control instructions:

- If SW is disconnected; the actuator will drive valve close clockwise. When the valve is closed completely, [7] is connected with [6], giving signal of closing.
- If SW is connected, the actuator will drive valve open anticlockwise. When the valve is open completely, [7] is connected with [5], giving signal of opening.
- ※ Notice 1: [7] is not connected with [6] [5], when the actuator is running.
- ※ Notice 2: The feedback signal is a little earlier than the actual position, so please do not cut power immediately, when you get the feedback signal.


B3C

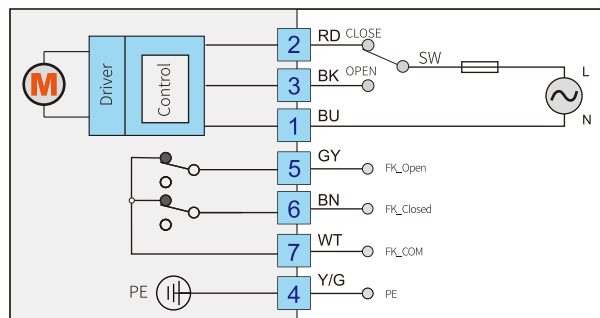

Control instructions:

- SW is connected with CLOSE, the actuator will rotate clockwise. When the valve is closed, [7] is connected with [6], giving signal of closing.
- SW is connected with OPEN, the actuator will rotate anticlockwise. When the valve is open, [7] is connected with [5], giving signal of opening.
- ※ Notice 1: [7] is connected with [6] and [5], when the actuator is rotating.
- ※ Notice 2: The feedback signal is a little earlier than the actual position, so please do not cut power immediately, when you get the feedback signal.

B3S

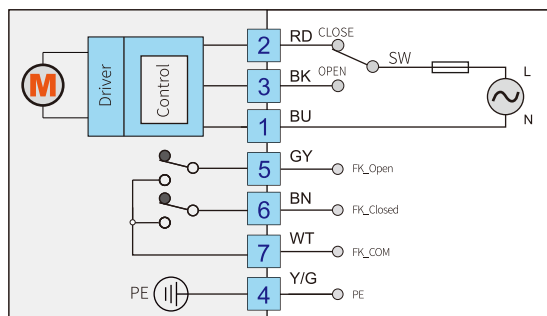


Control instructions:


- SW is connected with CLOSE, the actuator will rotate clockwise. When the valve is closed, [7] is connected with [6], giving signal of closing.
- SW is connected with OPEN, the actuator will rotate anticlockwise. When the valve is open, [7] is connected with [5], giving signal of opening.
- ※ Notice 1: [7] is disconnected with [6] and [5] when the actuator is rotating.
- ※ Notice 2: The feedback signal is a little earlier than the actual position, so please do not cut power immediately, when you get the feedback signal.

Terminal block for product without cable_Wiring instruction

1. Fuse; please refer to manual for more parameters.
2. SW switching capability; please refer to manual for more parameters.
3. Feedback signal contact load capacity: 0.1A/250VAC 0.5A/30VDC.
4. Please make sure actuator connect ground reliably.
5. Orange terminal is for the product in 95-265V (include 220V).
Black terminal is for the product DC12V/DC24V.
6. Some products adopt wiring box, user could wiring according to the order of number.

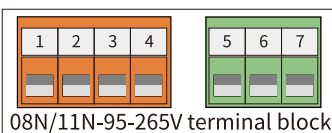

Anti-condensation heater [Accessory]

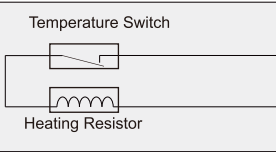

Temperature Switch

Heating Resistor

※ Notice 1: The range of power is 2W-3W;

※ Notice 2: The range of constant temperature heating is 25°C±20%.

Mounting instructions

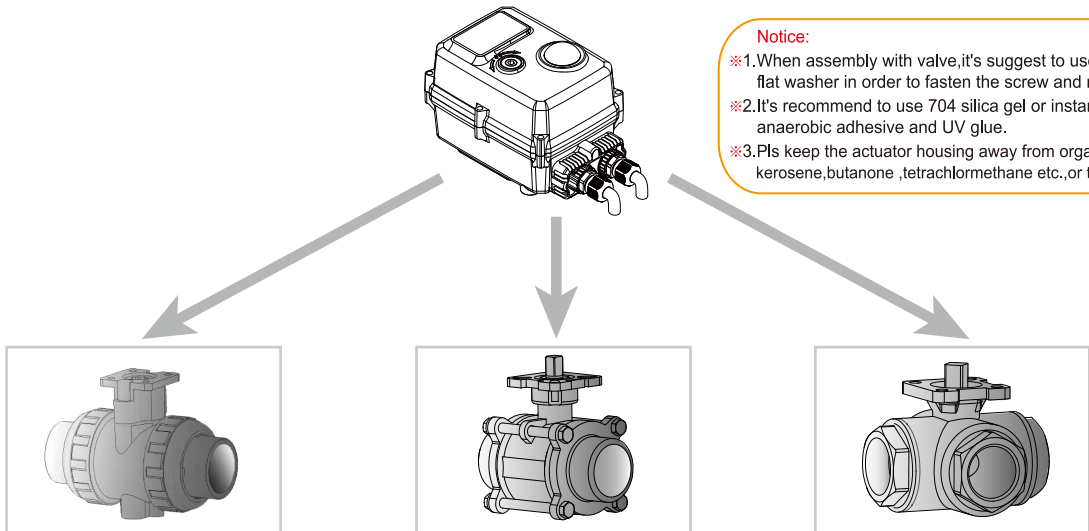


Diagram1(With bracket)

Diagram2(Direct mount)

Diagram3(Direct mount)

Notice:

- ※1. When assembly with valve, it's suggest to use spring washer add flat washer in order to fasten the screw and nut.
- ※2. It's recommend to use 704 silica gel or instant cement instead of anaerobic adhesive and UV glue.
- ※3. Pls keep the actuator housing away from organic solvents, such as: kerosene, butanone, tetrachlormethane etc., or the housing will crack.

Diagram1 UPVC plastic ball valve+bracket assembly
Diagram2 3piece stainless steel ball valve assembly
Diagram3 3piece stainless steel 3way ball valve assembly

Installed valve technical requirements

Valve type	Recommend install condition
wafer butterfly valve	actuator rate torque $\geq$ 2times valve max torque
flange butterfly valve	actuator rate torque $\geq$ 1.7times valve max torque
metal ball valve	actuator rate torque $\geq$ 1.7times valve max torque
plastic ball valve	actuator rate torque $\geq$ 1.5times valve max torque

- ☐1. If the ball valve is out of operation for a long time, and the torque value of first on or off is the max torque
- ☐2. When installing direct mount model valve, the hole deep $\leq$ 20mm. It requires cutting if the output shaft is longer than 20mm.
- ☐3. Pls pay attention to the following items if you install the bracket and coupling by yourself:
 - ※ The intensity of bracket should meet the using requirements: the bracket twisting extent $\leq$ 0.2mm in the process of on or off.
 - ※ The parallelism of bracket $\leq$ 0.5mm.
 - ※ When processing the shaft hole at both end of the coupling, it is necessary to ensure the accuracy and concentricity. The purpose is to make sure the mechanical hysteresis $\leq$ 10°, otherwise it will cause the actuator unable to work.
- ☐4. Screw should be installed spring washer, flat washer, and we suggest you daub some glue cement around the screw in case of screw loosening.
- ☐5. After installation, user should switch the valve on and off one time with handle device first. Modifying the valve after make sure it works well.

Adjusting valve location instructions

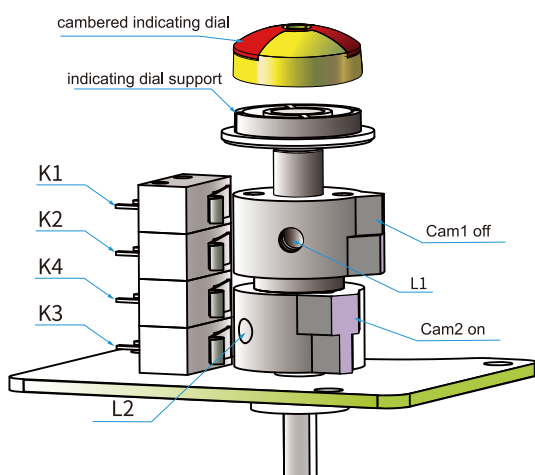


Diagram 1

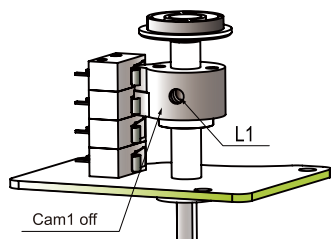


Diagram 3

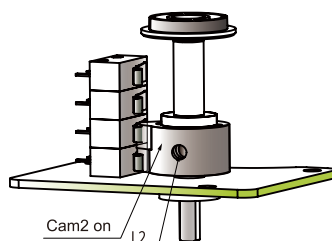


Diagram 4

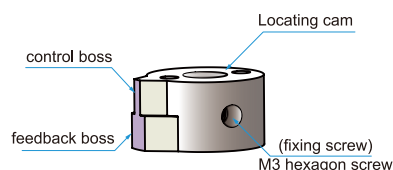


Diagram 2

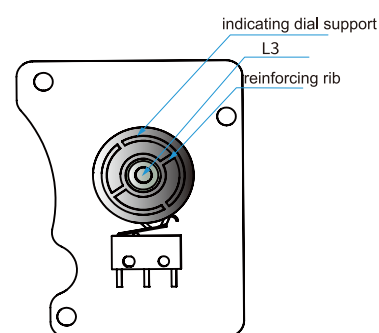


Diagram 5

Diagram 1 locating mechanism structural schematic diagram

Diagram 3 close adjustment schematic diagram

Diagram 5 Indicating dial adjustment schematic diagram

Diagram 2 locating cams structural schematic diagram

Diagram 4 open adjustment schematic diagram

Valve position adjustment

※ Notice 1: The default is that rotating in clockwise direction means closing ,and rotating in anticlockwise direction means opening.

※ Notice 2: B3P does not have K2,K4 micro switch.

Micro-adjustment of electrical limit:

□1 Adjusting full close:

△ Rotate the valve to full close position with handle.

※ Since the valve has gone through “factory default setting”, this step can be omitted if the adjustment is slight.

△ Detach cambered indicating dial, loosen fixing screw L3 of indicating dial support, turn reinforcing rib as shown in diagram 5, perpendicular to the flow direction of valve, then screw up L3 and buckle up cambered indicating dial.

※ Caution: When screwing up L3, the torque ≤ 0.5 NM, otherwise it will damage locating driving gear.

△ Loosen fixing screw L1 of cam 1, drive cam 1 to rotate clockwise and trigger micro switches K2, K1 to move in turn and make sound. When K1 moves and makes sound, stop adjustment. Then screw up fixing screw L1.

□2 Adjusting full open:

△ Rotate the valve to full open position with handle;

△ loosen fixing screw L2 of cam2, drive cam 2 to rotate anticlockwise and trigger micro switches K4, K3 to move in turn and make sound. When K3 moves and makes sound, stop adjustment. Then screw up fixing screw L2.

□3 Wiring:

After modifying, connect

Common failures and processing methods

	Fault phenomenon	Fault cause	Processing methods
□1	Actuator no action	△1 power not connected	Connect power
		△2 voltage below level or incorrect	Check whether voltage is within the normal range
		△3 overtemperature protection of motor	Check whether valve gets stuck or torque value is too big
		△4 terminal loose or poor contact	Check and correctly connect terminal
		△5 starting capacitance poor run	Contact the manufacturer to get repair
□2	No feedback signal	△1 line barrier of user acquisition signal	Connect user acquisition signal
		△2 microswitch damage	Change microswitch
□3	Actuator not fully closed	△1 use feedback signal to control actuator	Receive feedback signal doesn't mean actuator is fully closed, so don't cut power off
		△2 technical hysteresis increases due to abrasion between actuator and valve rod	1 Readjust valve-off position 2 Contact the manufacturer to get repair
□4	Actuator interior water ingress	△1 OD of incoming line cable non-standard	Contact the manufacturer to get repair
		△2 waterproof treatment of incoming line incomplete	
		△3 actuator lens wearout	
		△4 screws on connection cover/head cover /slide cover loose	

Working environment

- Indoor and outdoor are both optional.
- Not explosion proof products, ⚠ do not use them in flammable and explosive environment.
- You need to install protective device for the actuator if it is exposed to the rain or sunshine.
- Please pay attention to the ambient temp.
- When installing, you need to consider the reserved space for wiring and repairing.
- When power on, ⚠ it is not allowed to dismantle actuator and valve.
- When power on, ⚠ it is not allowed to do wiring.
- ※ Absolutely no falling down the ground, which will hit the device and lead to improper operation.
- ※ Absolutely no standing on the device, which will cause device malfunction or personal accident.
- ※ It is forbidden to do wiring project in rainy day or when there is water splash.

Safety notice

- In order to use the device safely for a long term, please pre-read the manual carefully to ensure correct use.
- Notice item: Please understand the product specification and using method clearly to prevent personal safety danger or device damage.
- In order to indicate damage and danger, here we classify them as “warning ⚠ ” and “notice ※ ”.
- Both of contents are very important, which should be obeyed strictly.
- “Warning ⚠ ”: It will cause death or serious injury if not obeyed.
- “Notice ※ ”: It will cause slight injury or device damage if not obeyed.
- Subject to technical changes.