

Barcode Scanner

User Manual

Table of contents

Working Mode	1
Upload mode	1
Power and Standby Setup	2
Language Setup	3
Capital & Lowercase Setup	4
Trigger Mode	4
End Mark	4
Buzzer Setup	5
Reverse Code Reading	5
Duplicate Barcode Upload Setup	6
Invoice Function	6
Barcode Setting	7
Add Prefix	16
Add Suffix	17
Delete Characters	17
Appendix 1: Parameter Code	18
Appendix 2:ASCII	20

■If the scanner does not work or buzzer rang “Di-Di-Di-Di”, please stop using the scanner and charging it immediately.



Decoding Restore Defaults



Wireless Restore Defaults

Note: Scan "Decoding Restore Defaults" and "Wireless Restore Defaults" in order to restore the scanner to the factory status.

Working Mode

■Match Operation:

The scanner with the USB receiver has been paired by default, just plug in the receiver and you can use it.

Note: If need to re-pair, please unplug the USB receiver, scan the code “Match”, the scanner will emits sound like "di", "di", "di", then plug it again, the scanner will paired successful.



Match

Upload mode

► **Instant upload mode** :Instant upload data to your computer



Instant Upload Mode

(1)Upload successfully: the buzzer rang“Di”.

(2)Upload failed: the buzzer rang“Di-di-di”.

► **Storage Mode** :In storage mode, the barcode will be stored in scanner's own memory and will not come up on your computer instantly. The barcode comes up on your computer only when you scan the settings code "upload data" within the wireless transmission range.



Storage Mode

Note: During use, if data cannot be uploaded, please confirm whether it is set to storage mode.

► **Non-losing Mode** :The barcode will be uploaded to the receiver in real-time when the scanner is in wireless transmission range. When the scanner is out of the wireless transmission range, the data will be stored in scanner's own memory . After scanner is reaching the wireless transmission range,scan "Upload Data" setting barcode,the lost data which are stored will be uploaded to the computer automatically.



Non-losing Mode

Note: Before using the non-losing mode, it is better to scan the code "Clear Data" to clear the data of scanner.

 Show Total Storage	 Upload Data
 High Upload Speed(*default)	 Low Upload Speed
 Clear Data	

Power and Standby Setup

 Standby Immediately	
 Set the time for automatic shutdown	 2 Minutes-Default

 10 Minutes	 20 Minutes
 8 hours	 Never Standby

► **Set the time for automatic shutdown**

For example, if you want to set the power off time to be 20 Minutes. First scan “Set the time for automatic shutdown”, then scan “20 Minutes”.

Language Setup	
 UNITED STATES*	 SPAIN
 FRANCE	 GERMANY
 ITALY	 CZECH REPUBLIC
 TURKEY	 FINLAND(SWEDEN)

Capital & Lowercase Setup



All Capital



All Lowercase



No Swap*

Trigger Mode



Continuous Mode



Auto-Sensing Mode

End Mark



None



CR



LF+CR



TAB



LF



ETX

Buzzer Setup



Volume-ON*



Volume-OFF



Volume-ON*



Volume-OFF

Reverse Code Reading

Turning on this setting will affect the scanning speed, please turn it on while you need to use



ON



OFF

Duplicate Barcode Upload Setup



Duplicate Detection-ON
(Auto-Sensing Mode)



Duplicate Detection-OFF*
(Auto-Sensing Mode)



Delay forever
(Auto-Sensing Mode)



Delay 3s
(Auto-Sensing Mode)



Duplicate Detection-ON
(Continue Scan Mode)



Duplicate Detection-OFF*
(Continue Scan Mode)



Delay forever
(Continue Scan Mode)



Delay 3s
(Continue Scan Mode)

Invoice Function



Invoice Function-ON



Invoice Function-OFF

Barcode Setting

CODE128



OFF



ON

EAN 8



OFF



ON



Check Digit-OFF



Check Digit-ON



2 Extra Code-OFF



2 Extra Code-NO



5 Extra Code-OFF



5 Extra Code-ON

EAN 13



OFF



ON



Check Digit-OFF



Check Digit-ON



2 Extra Code-OFF



2 Extra Code-NO



5 Extra Code-OFF



5 Extra Code-ON

UPC-E0



OFF



ON



Check Digit-OFF



Check Digit-ON



2 Extra Code-OFF



2 Extra Code-NO



5 Extra Code-OFF



5 Extra Code-ON



System Digit-OFF



System Digit-ON

UPC-A



OFF



ON



Check Digit-OFF



Check Digit-ON



2 Extra Code-OFF



2 Extra Code-ON



5 Extra Code-OFF



5 Extra Code-ON



System Digit-OFF



System Digit-ON



UPCA to EAN13-OFF



UPCA to EAN13-ON

Interleaved 2 of 5



OFF



ON



Check Digit-OFF



Check Digit-ON

MATRIX 25



OFF



ON



Check Digit-OFF



Check Digit-ON

CODE 39



OFF



ON



Check Digit-OFF



Check Digit-ON



Start&End Digit-OFF



Start&End Digit-ON



Full ASCII-OFF



Full ASCII-ON

CODE 32



OFF



ON



Prefix-OFF



Prefix-ON



Check Digit-OFF



Check Digit-ON

CODABAR



OFF



ON



Start&End Digit-OFF



StartABCD/End DigitABCD-ON



StartABCD/End DigitTN*E-ON



Start abcd/End Digit abcd-ON



Start abcd/End Digit tn*e-ON

CODE 93



OFF



ON

CODE 11



OFF



ON

ISBN



OFF



ON

ISSN



OFF



ON

INDUSTRIAL25



OFF



ON

STANDARD25



OFF



ON

MSI_Plessey



OFF



ON

QR



OFF



ON

PDF417



OFF



ON

Aztec



OFF



ON

DataMatrix



OFF



ON

MicroPDF417



OFF



ON

MicroQR



OFF



ON

Add Prefix



Display Prefix-OFF



Display Prefix-ON



Add Prefix

E.g. The bar code content is "123456789", add X and Y before the bar code(Check ASCII Barcode Table, X=58, Y=59), "XY123456789" will be shown. Please scan the following code in order:
 "Display Prefix-ON">"Add Prefix">Parameter Code"5","8","5","9">"Save settings"

Add Suffix



Display Suffix-OFF



Display Suffix-ON



Add Suffix

E.g. The bar code content is "123456789", add X and Y after the bar code(Check ASCII Barcode Table, X=58, Y=59), "123456789XY" will be shown.

Please scan the following code in order:

"Display Suffix-ON">"Add Suffix">Parameter Code"5","8","5","9">"Save settings"

Delete Characters



Delete Characters-OFF



Delete Characters-ON



Before Barcode



After Barcode

E.g. The bar code content is "123456789", if you want to set the scanner to delete the number 1, "23456789" will be shown.

Please scan the following code in order:

"Delete Characters-ON">"Before Barcode">"Parameter Code "0">"Parameter Code "1">"Save settings"

Appendix 1: Parameter Code



0



1



2



3



4



5



6



7



8



9



A



B



C



D



E



F



Save settings

Appendix 2:ASCII

He	De	Description	He	De	Descriptio	He	De	Descript
00	0	NUL	2B	43	+	56	86	V
01	1	SOH	2C	44	,	57	87	W
02	2	STX	2D	45	—	58	88	X
03	3	ETX	2E	46	。	59	89	Y
04	4	EOT	2F	47	/	5A	90	Z
05	5	ENQ	30	48	0	5B	91	[
06	6	ACK	31	49	1	5C	92	\
07	7	BEL	32	50	2	5D	93	]
08	8	BS(Backspace)	33	51	3	5E	94	^
09	9	HT(Tab)	34	52	4	5F	95	_
0A	10	LF(CTRL J)	35	53	5	60	96	`
0B	11	VT(CTRLK)	36	54	6	61	97	a
0C	12	FF(CTRL L)	37	55	7	62	98	b
0D	13	CR(Enter)	38	56	8	63	99	c
0E	14	SO(CTRL N)	39	57	9	64	10	d
0F	15	SI(CTRL O)	3A	58	:	65	10	e
10	16	DLE(CTRL P)	3B	59	;	66	10	f
11	17	DC1(CTRL Q)	3C	60	<	67	10	g
12	18	DC2(CTRL R)	3D	61	=	68	10	h
13	19	DC3(CTRL S)	3E	62	>	69	10	i
14	20	DC4(CTRL T)	3F	63	?	6A	10	j
15	21	NAK(CTRL U)	40	64	@	6B	10	k
16	22	SYN(CTRL V)	41	65	A	6C	10	l
17	23	ETB(CTRL W)	42	66	B	6D	10	m
18	24	CAN(CTRL X)	43	67	C	6E	11	n
19	25	EM(CTRL Y)	44	68	D	6F	11	o
1A	26	SUB(CTRL Z)	45	69	E	70	11	p
1B	27	ESC(ESC)	46	70	F	71	11	q
1C	28	FS(CTRL \)	47	71	G	72	11	r
1D	29	GS(CTRL])	48	72	H	73	11	s
1E	30	RS(CTRL ^)	49	73	I	74	11	t
1F	31	US(CTRL _)	4A	74	J	75	11	u
20	32	(space)	4B	75	K	76	11	v
21	33	!	4C	76	L	77	11	w
22	34	"	4D	77	M	78	12	x
23	35	#	4E	78	N	79	12	y
24	36	\$	4F	79	O	7A	12	z
25	37	%	50	80	P	7B	12	{
26	38	&	51	81	Q	7C	12	
27	39	'	52	82	R	7D	12	}
28	40	(	53	83	S	7E	12	~
29	41	)	54	84	T	7F	12	DEL
2A	42	*	55	85	U			