



Thermal Printer


Manual Guide

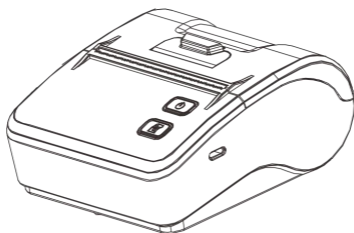

BACK

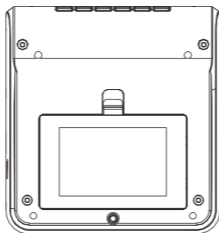


OPEN COVER

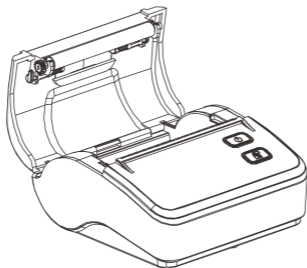


BATTERY INSTALLATION

1. Make sure the power is off when removing or inserting the battery.
2. Follow the direction of arrow in the below image, insert the battery into the battery slot on the back of the printer.

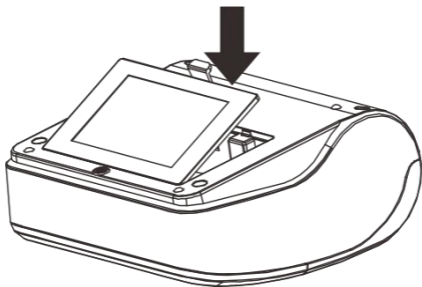


3. When removing the battery, using the opposite step of installing the battery.

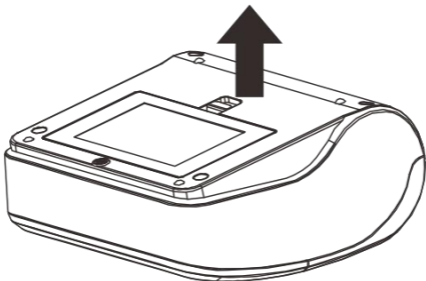


BATTERY CHARGING

1. Please connect USB or power adapter to charge the printer.
2. When printer low of battery, the battery icon on scanner screen will twinkling.
3. If you continue printing, the printer will automatically shut down.
Please charge the printer in time to continue printing.

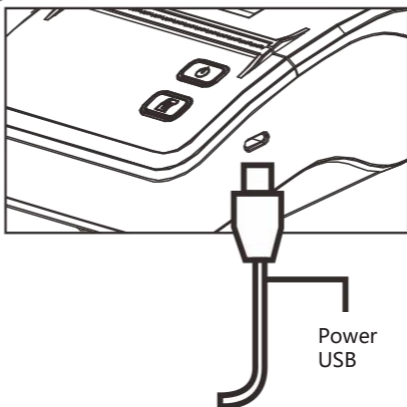

PAPER ROLLS INSTALLATION


1. Press the button to open cover.

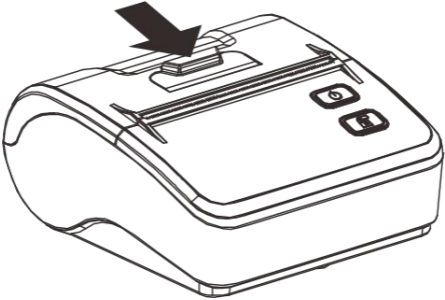


2. Follow the image below, installing the paper rolls.





3. Pull out some paper rolls, close the cover.

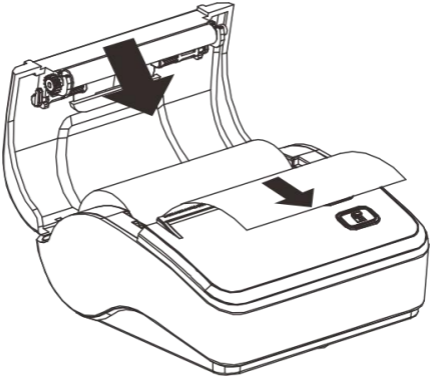


4. Using the serrated knife on the printer to remove the remainder paper.

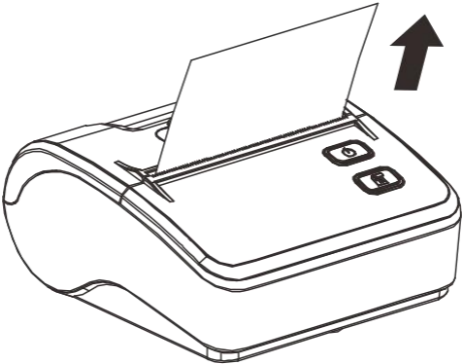

POWER ON BUTTON

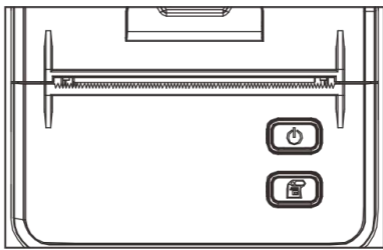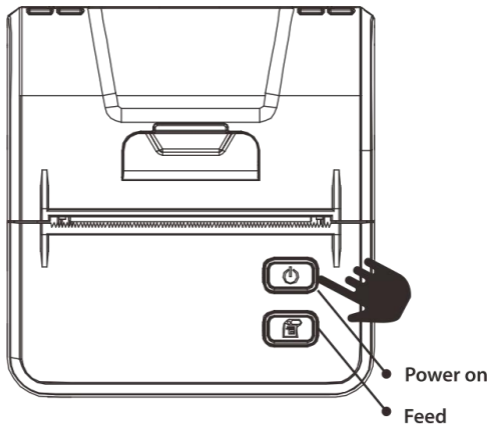

LIGHT STATE MEANING

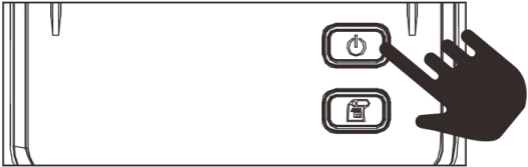

Power button

Three kinds of lights: Red, Blue and Green
Blue light for power light;
Red and Green light for battery indicator light

Battery level

Level1 Red light flashing
Level 2 Red light is always on
Level3 Red, Green lights are always on
Level4 Green light is always on

Feed button

Two kinds of lights: Red and Blue.
Red light
The red light is an error indicator and will light up
when the paper is missing or the lid is opened
Blue light
When the Bluetooth connection is successful,
the blue light will be on