

Portable Thermal Printer

User Manual

About the button using:

- ◆ Long press "Power" button for two seconds to turn on/off.
- ◆ in power on status, quick press the "Power" button two times to print self-test page.
- ◆ in power on status, quick press the "Power" button three times to test the label gap.
- ◆ in power on status, quick press the "Power" button five times to switch Label/Receipt mode, please restart the printer after switched the mode.


Please scan QR code to download CD Files

Download Link:

<http://www.barcoderead.net/printer/5811.zip>



Printer Appearance

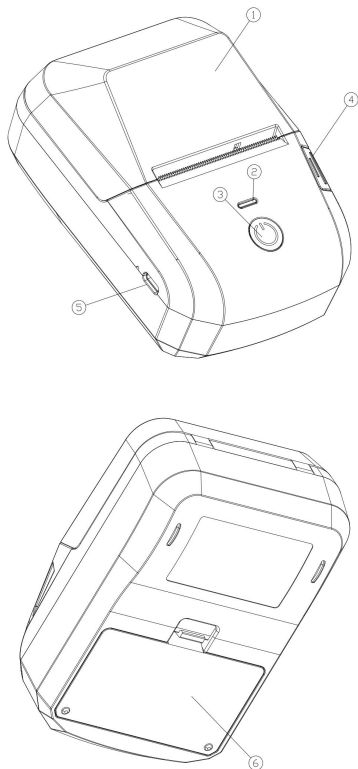


1.Printer top cover
3.Power on button
5.Type C USB port


2.Indicator light
4.Open cover button
6.Battery cover

Printer Accessories


- 1.Type-C USB
- 2.Paper Roll Holder
- 3.Battery 7.4V
- 4.Cable User Manual

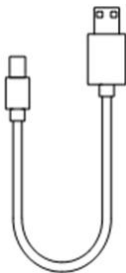


Type-C USB*1 pc

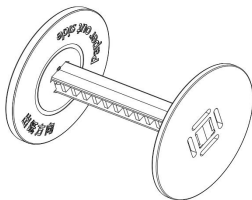

Paper Roll Holder*1 pc

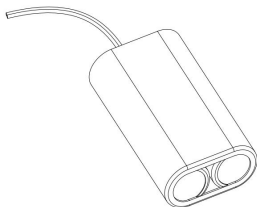

Battery 7.4V*1 pc

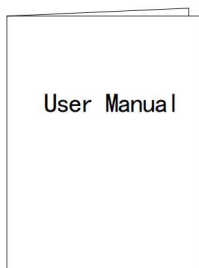

Cable User Manual*1 pc


LED Indicator and Buzzer Definition

When the power level is lower than 6.8 V, the buzzer rings continuously. At this time, the buzzer can only stop ringing by plugging in the charger; Battery less than 6.5 V The printer will automatically shut down.

Printer Status	BT Status	Indicator light				Buzzer	Remark
		White lamp	Green light	Red light	Blue light		
ON	Initialization failed	on				Prompt sound	
Stand by	Disconnected	Blink					
	Connected				on	Tweeting 1 time	When charged, it will combine into a cyan light
Charging	Disconnected		on			Tweeting 1 time	Green light off after full charged
	Connected						
Cover open	Disconnected			Blink		Tweeting 1 time in every 2 seconds	
	Connected						
Paper out	Disconnected			on		Tweeting 3 time in every 2 seconds	
	Connected						
Low voltage	Disconnected		Blink			Tweeting 3 time in every half seconds	Stop tweeting
	Connected						
High temperature	Disconnected			Blink			
	Connected			fast			
Revise		Blink	Blink	Blink	Blink		blink alternately
Firmware Update		on	on	on	on		Keep charging connected
Sleep mode		Blink					BT connected or paper out states can't enter sleep mode
Power off			on			Prompt sound	Green light off after full charged
Remark							

Label Editing Software with Android System via Bluetooth Connection

1. Turn on the power of printer.
2. Turn on the bluetooth, find the POS-5811 and type the pin "0000"

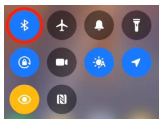



3. Open the label editing software App, please scan below QR code to download the APP.




4Barcode

Android editing software
Install Password:1234

4. Click the printer symbol.
5. Choose the "Bluetooth Connection".
6. Choose the "POS-5811".

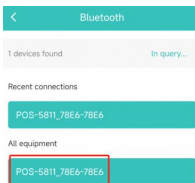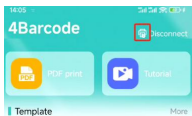

7. Connection Successful.

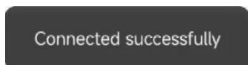

Label Editing Software with IOS via Bluetooth Connection

1.Turn on the power of printer.

2.Turn on the bluetooth.



3.Open the label editing software App, please scan below QR code to download the APP.




4Barcode

IOS editing software
Install Password:1234

4.Click the printer symbol.

5.Choose the "POS-5811".

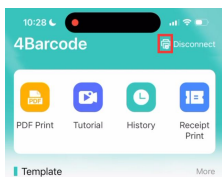


6.Bluetooth connect successful.

Bluetooth Connection Successful

Receipt Printing Test Demo with Android System via Bluetooth Connection



1. Turn on the power of printer.
2. Turn on the bluetooth, find the POS-5811 and type the pin "0000"

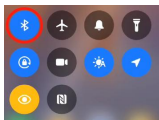


3. Open receipt printing test demo App, please search the "POS-Printer" to download the APP.



4. Click the printer symbol.
5. Choose the "SEARCH FOR AND CONNECT A BLUETOOTH PRINTER".
6. Choose the "POS-5811".

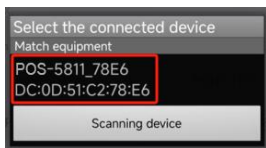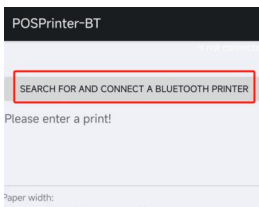

7. Send some letters or numbers to test it.

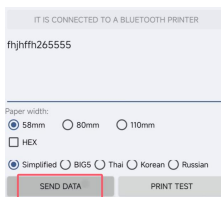

Receipt Printing Test Demo with IOS via Bluetooth Connection

1. Turn on the power of printer.
2. Turn on the bluetooth.



3. Open receipt printing test demo App, please search the "POS-Printer" to download the APP.



4. Click the printer symbol.
5. Choose the "Select Printer".
6. Choose the "POS-5811".



7. Send some letters or numbers to test it.

