

# A4 Thermal Printer

## User Manual

Please scan QR code to download CD Files

Download Link:

<http://www.barcoderead.net/printer/2105.zip>

 
 


## Packing List

1 Printer

2.USB Cable

3.User Manual



Printer\*1 pc

USB Cable\*1 pc

User Manual\*1 pc

## Indicator Light Buzzer Description

Status	Indicator light		Buzzer
	Blue light	Red light	
Power On	Long light	Off	
Power Off	Off	Off	
Power on and charge	Off	Long light	
Power off and charge	Off	Ring flashes	
Bluetooth connection successful			"Beep beep"

## Error Status

Status	Indicator light		Buzzer
	Blue light	Red light	
Out of paper	Off	500ms frequency flashing	"Beep beep beep"
Open cover	Off	1s frequency flashing	"Beep beep beep"
Black mark error	Off	750ms frequency flashing	"Beep beep beep"
Over temperature	Off	1.5s frequency flashing	"Beep beep beep"
Low battery	Off	300ms frequency flashing	"Beep beep beep"

## Product Introduction


### Operation button description

**Single click:** Paper feeding to the next black mark position


**Double click:** Print self-test page

**Click the button more than 4 times:** Paper calibration


Front view 1

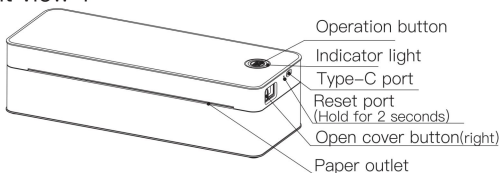

Front view 2

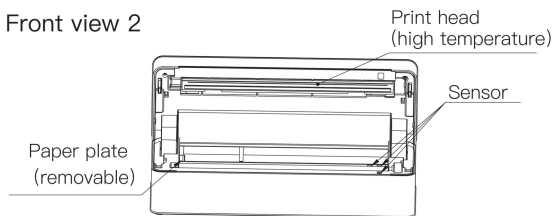


Rear view 1

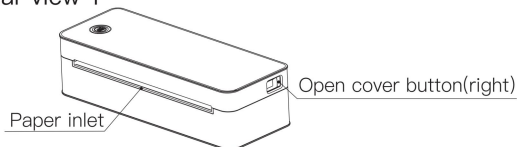

\*(Suitable for folded paper or paper rolls with a diameter larger than the specifications of the paper bin)

## How to Open the Printer Bin


Simultaneously pull the lid opening buttons on both sides of the machine forward to open it.

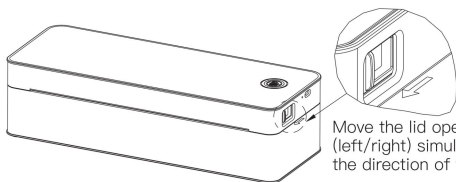

Move the lid opening button (left/right) simultaneously in the direction of the arrow.


## How to Load Paper

1. Open the paper bin and put the paper into the paper bin according to the sign, paying attention to the front and back of the paper.

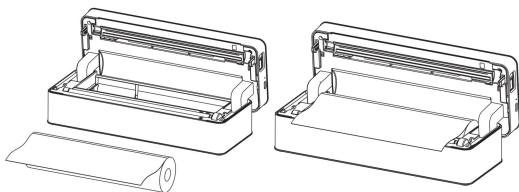


2. Single paper/folding paper placement method:


① Open the buttons on the left and right sides of the machine. There is no need to lift up the upper cover at this time.

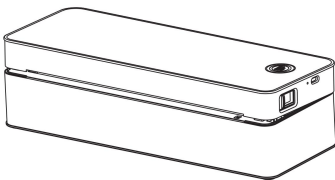


- ② Align the paper with the arrow mark, then insert it about 5cm deep into the machine's rear feed slot, as illustrated below.

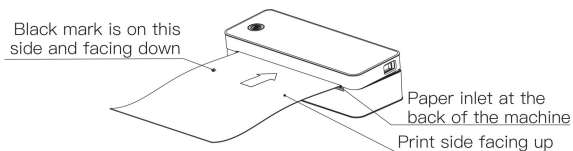


- ③ Lift up the upper cover as shown in the figure below.

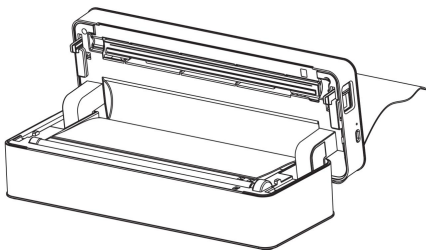


- ④ Pull the paper to the edge of the machine's output tray (approximately 2cm), then close the upper unit.

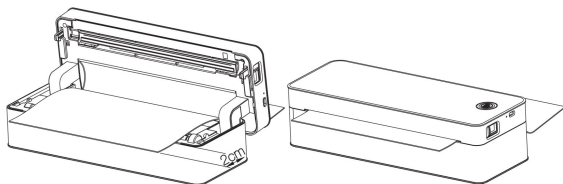

 
3.After the paper roll is installed,close the top cover. Please make sure that both sides of the top cover are in place.



When closing the cover, press down hard on both sides  
When hear a crisp ticking sound, the cover is closed in place.

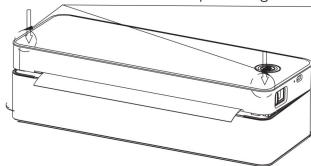

**\*Note:** How to use the paper plate for A5 paper/Letter paper.

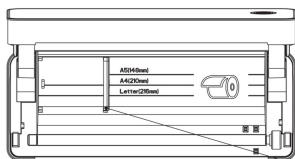

When using A5 paper, need to put the paper plate to the position shown in the figure. When using Letter paper, need to remove the paper plate (no need paper plate).

## Application Installation and Printing

**Android OS:** Go to Google Play Store to download the app "Zimo" or scan below QR code.



Android App

**IOS OS:** Go to App Store to download the app "Zimo" or scan below QR code.



IOS App

## Connect the Windows Computer for Printing

- ① Connect the computer and printer through the USB cable.
- ② Please power on the printer.
- ③ CD Files (<http://www.barcoderead.net/printer/2105.zip>) and install it on the computer.
- ④ Add the printer on the computer and establish a communication connection, then can print documents through the computer.

## Charging Method

- ① Connect the power charger to the power connector of the printer.
- ② Plug the power charger into an electrical outlet (Printer could be in use when charging).

NOTE: Please use the original battery and power charger, otherwise printer may be damaged or even cause explosion.

## Cleaning and Maintenance

Following these simple maintenance guidelines will ensure the printer longer life with quality printing performance.

General Cleaning-Keep the outside your printer clean by periodically wiping it with a soft cloth dampened with water. Do not use abrasive cleaners as they will damage the surfaces.

Cleaning the Print Head -When handled during installation, and over time, the print head may become contaminated resulting in poor print quality. After installing a new print head or after using a roll of media, rub the cleaning pen across the dark area of the print head. Allow the print head to dry for one minute before loading labels.

### **Warning**

This manual contains proprietary information of this printer manufacturer. It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the express written permission of this printer manufacturer.