

Barcode Scanner

User Manual

General Settings



Factory Default

If the scanner can not work normally, Pls scan "Factory Default"



CR



LF



LF+CR



NONE



Manual Trigger Mode



Auto Sense Mode



Continue Scan Mode

Buzzer Setup



Volume ON



Volume Off



High volume -Default



Low volume

Interface setup



USB KBW



USB COM



TTL 232

Serial Port Setup



1200bps



2400bps

 4800bps	 9600bps
 19200bps	 38400bps
 57600bps	 115200bps
 1200bps	 2400bps

Language	
 American Keyboard	 Germany
 France	 Sweden



Belgium



Finland



Russia



Turkey_Q



Portugal



Norway



England



Denmark



Spain



Italy



Czech



Japan

Barcode Type ON/OFF

 Reverse Code (ON)	 Reverse Code (OFF)
 UPC-A(ON)	 UPC-A(OFF)
 UPC-A Check Bit (ON)	 UPC-A Check Bit(OFF)
 UPC-E(ON)	 UPC-E(OFF)



UPC-e 校验位 ON

UPC-e Check Bit(ON)



UPC-e 校验位 OFF

UPC-e Check Bit(OFF)



CODE39 校验位 ON

CODE 39 (ON)



CODE39 校验位 OFF

CODE 39 (OFF)



CODE39 校验位 ON

Code39 Check Bit(ON)



CODE39 校验位 OFF

Code39 Check
Bit(OFF)



CODE39 全 ASCII 校验位 ON

Code 39Full ASCII (ON)



CODE39 全 ASCII 校验位 OFF

Code39Full ASCII (OFF)



CODE32_0name

CODE 32 (ON)



CODE32_1name

CODE 32 (OFF)



CODE93_0name

CODE 93 (ON)



CODE93_1name

CODE 93 (OFF)



CODE11_0name

CODE 11 (ON)



CODE11_1name

CODE 11 (OFF)



CODABAR_0name

CODABAR (ON)



CODABAR_1name

CODABAR (OFF)



IS2_0name

Industrial 2 of 5 (ON)



IS2_1name

Industrial 2 of 5 (OFF)