

Product overview

- ⊙ Rated voltage: AC/DC95-265V, AC/DC24V
- ⊙ Rated torque: 50Nm
- ⊙ Control feedback model: CANBUS
- ⊙ Install valves: 2-way, 3-way ball valve and butterfly valve.
- ※ **Note: Please reserve torque safety factor when selecting**
- ⊙ Be achievable: | 2 -position 90°2-way mode | 2 -position 180°3-way mode |
- ⊙ High performance brushless¹ motor, Overload protection of internal motor.
- ⊙ It can be used 20,000 times.*
- ⊙ 2 or more actuators can be used in parallel.



Product features

- △ 1.3" OLED screen, no visual dead angle, highly bright, energy saving and eco-friendly, real time to show valve opening angle and external control command.
- △ Original valve adjustment mode--free cover-opening and interactive:
 - step1: saving "anticlockwise full open position" by using the button to control valve;
 - step2: saving "clockwise full close position" by using the button to control valve.
 Thoroughly eliminate the complex and inconvenience caused by mechanical positioning, then complete modifying the valve easily.
- △ Adopt 32 digit high performances CPU, 12 digit high-precision AD converting, built-in unique algorithm, thoroughly eliminate mechanical hysteresis, greatly reduce valve position control error.
- △ Motor frequency speed control can realize accurate positioning.
- △ Adopt non contact positioning, control unit module design and potting processing, guarantee components reliability and greatly improve product service life; Interface uses standard connectors, convenient for installment, adjustment and replacement.
- △ Menu can realize valve control command exchange.
- △ Menu can switch freely between remote control and local setting, by pressing button to realize valve on/off locally.
- △ Menu can set valve close position deviation to on or off direction, enormously reduce the complex and inconvenience of local valve adjustment.
- △ Menu button can restore factory default setting.

*1. Test condition: Rated load, test at under 25 °C working temperature and 50% humidity, lead the result from 2 times switching cycle, which will be influenced by different load and working environment.

Technical data


Electrical data	Rated voltage	AC/DC95-265V	AC/DC24V
	Rated voltage range	AC95-265V/DC100-300V	AC20-26V/DC22-30V
	Power consumption	25W@max,9.6W@running 2.5W@keep	25W@max,9.6W@running 2.5W@keep
	Peak current	0.11A@5ms@AC230V	1.0A@5ms@DC24V
	Fuse	1A	2A
	Connecting cable	7*0.5mm ² cable, voltage withstand AC300V(Length 800mm)	
Functional data	Rated torque	50Nm@rated voltage	
	Angle of rotation	90±2°	
	Max angle of rotation	330±5°	
	Manual operation	※ Matching hexagon wrench , using at power cut	
	Running time	About 12s	
	Operating mode	S3-75%(AC),S3-85%(DC)(loading ≤85% rated torque refer to IEC60034-1)*1	
	Sound power level	65dB(A)	
	Position indicator	Mechanical and screen	
Working conditions	Electricity safety level	I Type (ground protection)	III Type (safety low voltage)
	Inflaming retarding level	HB/UL94 test method	
	Enclosure	IP67 As Per En60529/GB4208-2008 (all directions)	
		F type can add dehumidifying heater	
	Insulation resistance	100MΩ/500VDC	100MΩ/500VDC
	Withstand voltage	1500VAC@1Min	500VAC@1Min
	Medium temperature	≤80℃can install with actuator directly	
		※ >80℃ need to install bracket or heat radiation stand	
	Working environment	Indoor or outdoor; if exposed to the rain or sunshine, need to install protective device for the actuator	
	Explosion-proof level	⚠ Not explosion proof products, do not use in flammable and explosive environment.	
	Ambient temp*2	-15℃~+45℃ (ABS) ; -15℃~+60℃ (Aluminum)	
	Non-operation temp	≤-40℃ or ≥80℃	
	Ambient Humidity	5-95%RH non-condensing	
	Vibration Shock	≤5g	
	Vibration amplitude	※ 10 to 55 Hz, 1.5 mm double amplitude	
	Installation notes	360°any angle, The need for manual operation or the wiring space	
	Maintenance	Free maintenance	
	Certification	CE	
Dimensions / weight	Dimensions (LXWXH)	See "Dimensions"	
	Connection standard	ISO5211 F05、F07	
	Output axis specification	Female octagonal	
	Hole deepness	≤15mm(Female octagonal)	
	Weight	ABSmaterial 1.8kg,Casting aluminu 2.3kg	

*1 Operating mode: The testing environment temperature is 25℃ inside the factory. The testing standard as per IEC 60034-1-2017. The operation mode will be S3-90% if the loading less than 60% rated torque..


*2.(1) It is customized item when used and stored under special ambient temperature of -20℃~40℃, and special instructions are required.
 (2) At the ambient temperature of -40℃, power on is required for more than 15 minutes (30 minutes is recommended) before use. The higher the ambient temperature is, the shorter the power on time can be.
 (3) If user use the product at the ambient temperature of -40℃ for long time, it needs to be insulated. For example, add heating cable around the actuator. If the ambient temperature is over -20℃, then the heating cable can be canceled.

Dimension 【TCN-05X- ABS/Die-casting Aluminium 】

unit: mm

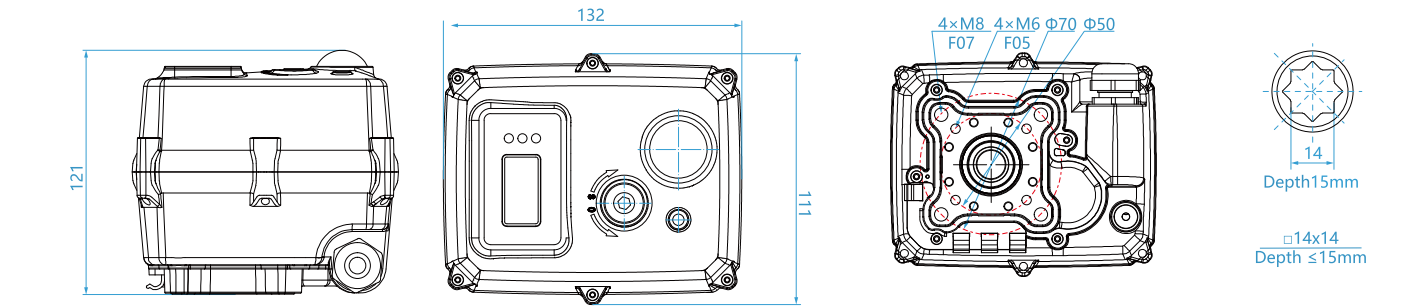


Main parts

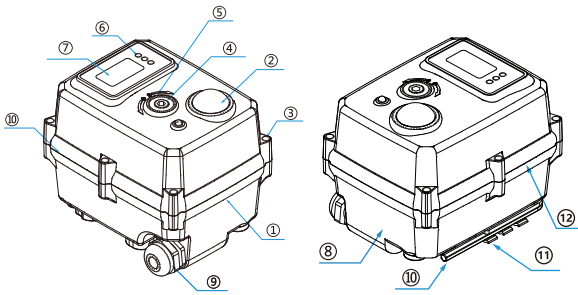

	Parts	Material		Parts	Material
1	Actuator	Heatproof ABS or Casting aluminum	7	1.3" LCD Screen	OLED
2	Indicator	PC	8	Label	PVC
3	Screw X 6	304	9	Waterproof cable connector	NiLon
4	Manual shaft	304	10	Hexagon wrench	CR-V
5	Oil seal	NBR	11	Wrench fixed	Heatproof_ABS
6	Button	Rubber	12	Lid seal	Silica gel


Wiring Diagrams

CANBUS

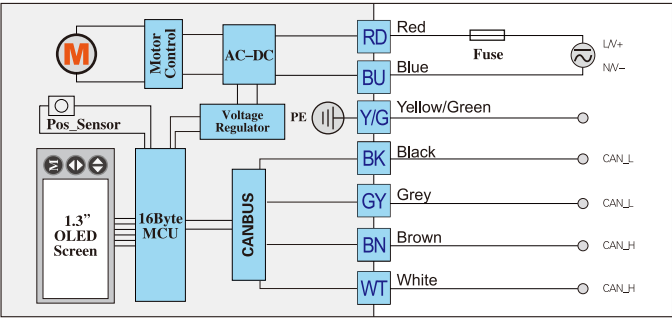


Test terminal for the cable end_wiring instruction

- 1.Fuse;please refer to manual for more parameters.
- 2.SW switching capability;please refer to manual for more parameters.
- 3.Feedback signal contact load capacity:0.1A/250VAC 0.5A/30VDC.
- 4.Please make sure actuator connect ground reliably
- 5. Some products adopt wiring box ,user could wiring according to the order of number.

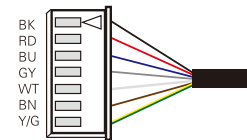


(User could cut out the cable terminal as it is only used for factory test.)

Cable terminal for test(7pin)

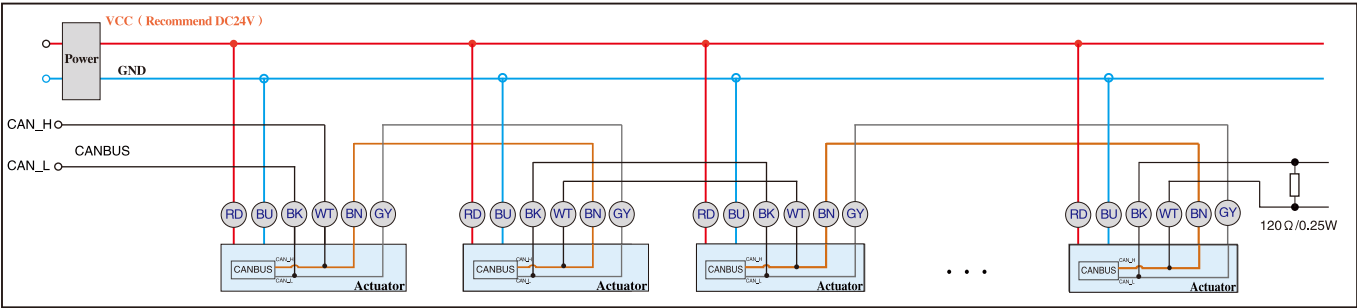

Anti-condensation heater 【Accessory】

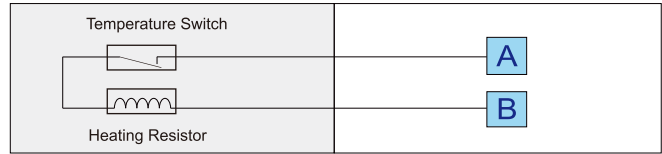

- ※ Notice 1: The range of power is 2W-3W;
- ※ Notice 2:The range of constant temperature heating is 25℃ ± 20%.

Operation methods

• Choose left bottom of software : 【 handle choose 】

• Handle set serial value

[1]communication port: COMX //select according to serial in use

[2]data bit: 8

[3]check bit: NONE


[4]baud rate: 9600 //communication defaults

[5]stop bit: 1


• Separately pith on 【 hexadecimal receive 】 and 【 hexadecimal send 】 under 【 data receive area 】 and 【 data send area 】.

• Edit the command code in need of sending at 【 data send area 】 or you can click on 【 open file 】 at right bottom of 【 data receive area 】 , invocation edited TXT text form commend.

• Click on 【 proceed to send 】 at right bottom of 【 data send area 】 to send control command.

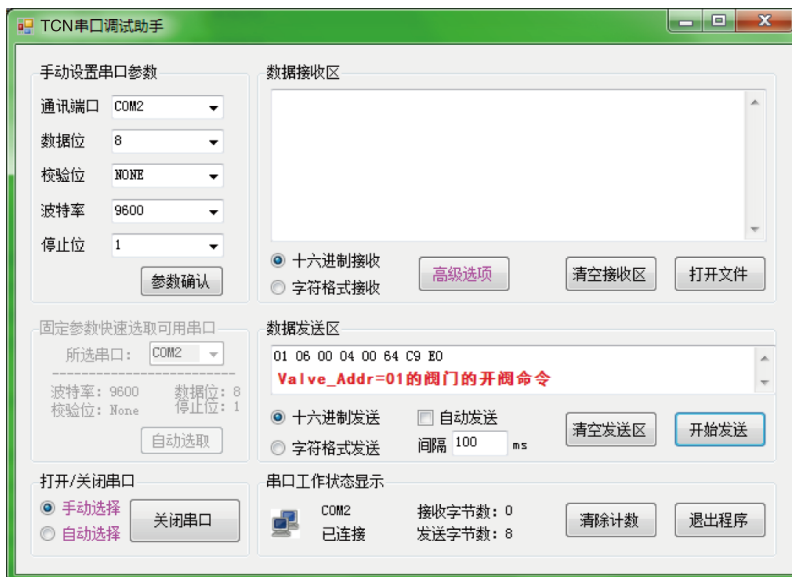

Mounting instructions

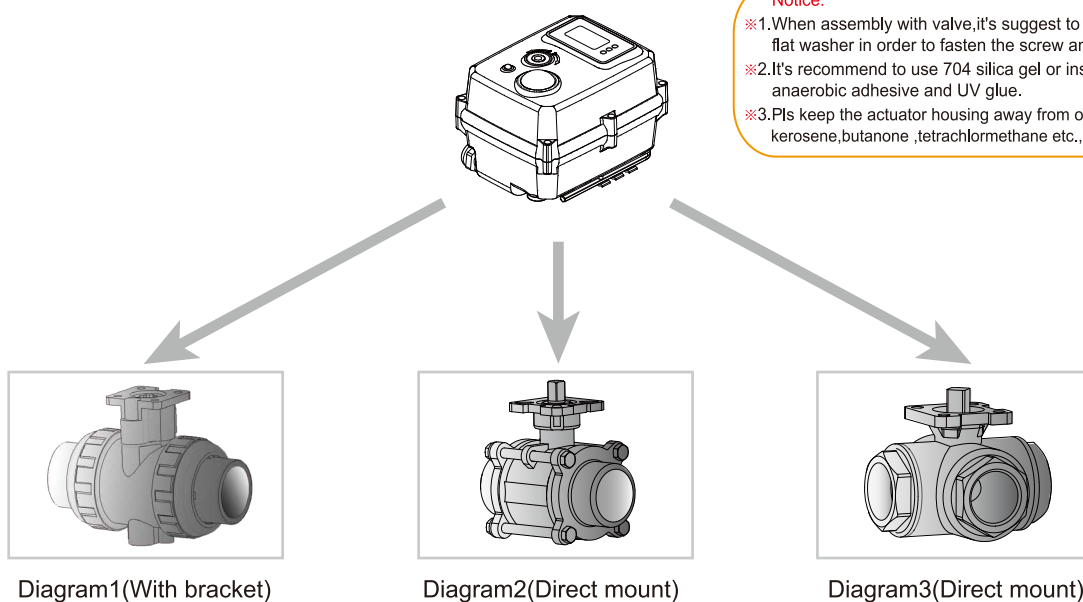

Notice:

- ※1. When assembly with valve, it's suggest to use spring washer add flat washer in order to fasten the screw and nut.
- ※2. It's recommend to use 704 silica gel or instant cement instead of anaerobic adhesive and UV glue.
- ※3. Pls keep the actuator housing away from organic solvents, such as: kerosene, butanone, tetrachlormethane etc., or the housing will crack.

Diagram1 UPVC plastic ball valve+bracket assembly

Diagram2 3piece stainless steel ball valve assembly

Diagram3 3piece stainless steel 3way ball valve assembly

Installed valve technical requirements

Valve type	Recommend install condition
wafer butterfly valve	actuator rate torque ≥ 2 times valve max torque
flange butterfly valve	actuator rate torque ≥ 1.7 times valve max torque
metal ball valve	actuator rate torque ≥ 1.7 times valve max torque
plastic ball valve	actuator rate torque ≥ 1.5 times valve max torque

- 1. When installing ball valve, the max torque $\leq 35\text{Nm}$. If the ball valve is out of operation for a long time, and the torque value of first on or off is the max torque. Or you can choose ball valve with elastic sealing.
- 2. When installing butterfly valve, the max torque $\leq 35\text{Nm}$. Because the torque value will increased by 10-20% after installing.
- 3. When installing direct mount model valve, the hole deep $\leq 15\text{mm}$. It requires cutting if the output shaft is longer than 17mm.
- 4. Pls pay attention to the following items if you install the bracket and coupling by yourself:
 - ※ The intensity of bracket should meet the using requirements: the bracket twisting extent $\leq 0.2\text{mm}$ in the process of on or off.
 - ※ The parallelism of bracket $\leq 0.5\text{mm}$.
 - ※ When processing the shaft hole at both end of the coupling, it is necessary to ensure the accuracy and concentricity. The purpose is to make sure the mechanical hysteresis $\leq 10^\circ$, otherwise it will cause the actuator unable to work.
- 5. Screw should be installed spring washer、flat washer, and we suggest you daub some glue cement around the screw in case of screw loosening.
- 6. After installation, user should switch the valve on and off one time with handle device first. Modifying the valve after make sure it works well.

Common failures and processing methods

	Fault phenomenon	Fault cause	Processing methods
□1	Actuator no action	△1 power not connected	Connect power
		△2 voltage below level or incorrect	Check whether voltage is within the normal range
		△3 overload protection of motor after 3s	Check whether valve gets stuck or torque value is too big
		△4 terminal loose or poor contact	Check and correctly connect terminal
		△5 starting capacitance poor run	Contact the manufacturer to get repair
□2	No feedback signal	△1 line barrier of user acquisition signal	Connect user acquisition signal
		△2 actuator is cut off the power	Connect power and signal will be normal
□3	Actuator not fully closed	△1 use feedback signal to control actuator	Receive feedback signal doesn't mean actuator is fully closed, so don't cut power off
		△2 return difference increases due to abrasion between actuator and valve rod	1 Adjust valve-off position to realize deviation by the menu 2 Contact the manufacturer to get repair
□4	Actuator interior water ingress	△1 OD of incoming line cable non-standard	Contact the manufacturer to get repair
		△2 waterproof treatment of incoming line incomplete	
		△3 actuator lens wearout	
		△4 screws on connection cover/head cover /slide cover loose	

Special Version

- Valve is suggested to use DC24V central power supply for valve, every valve power is consider to be 15W, for example if there are 10 valves to be supported, the switch power should be 150W at least. DC voltage range is DC22V-30V, if hop-up DC30V, valve will be damage. For the practical power of the electrical valve, user could refer to the data shown on the nameplate.
- When AC supply, transformer power should also take 15W into consideration, if 10 valves to be supported, the switch power should be 150W at least. AC voltage range is AC20-AC26V, if hop-up AC26V, valve will be damage. In addition, AC220V voltage fluctuant range is AC180-AC265V, so we design transformers on the basis of input voltage AC265V and floating voltage less than AC265V. We recommend 24VDC NOT 220VAC for the BUS series.
- CANBUS the max numbers of terminal connects are less than 110, please illustrate in particular when order if more are needed.
- CANBUS communication rate range is 100K-500K, factory default is 125K, it can be designated when ordered.
- CANBUS adopts hand connect schema instead of star schema, or length of every terminal will less than 5m.
- CANBUS communication line should be shielded line more than 0.2mm², it will reduce the transfer distance to terminals if line is thin excessively.
- CANBUS communication line is more than 5m, you should parallel a 120ohm /0.25 resistance at the end part

Working environment

- ☐ Indoor and outdoor are both optional.
- ☐ Not explosion proof products, ⚠ do not use them in flammable and explosive environment.
- ☐ You need to install protective device for the actuator, if it is exposed to the rain or sunshine.
- ☐ Please pay attention to the ambient temp.
- ☐ When installing, you need to consider the reserved space for wiring and repairing.
- ☐ When power on, ⚠ it is not allowed to dismantle actuator and valve.
- ☐ When power on, ⚠ it is not allowed to do wiring.
- ☐ ✖ Absolutely no falling down the ground, which will hit the device and lead to improper operation.
- ☐ ✖ Absolutely no standing on the device, which will cause device malfunction or personal accident.
- ☐ ✖ It is forbidden to do wiring project in rainy day or when there is water splash.

Safety notice

- ☐ In order to use the device safely for a long term, please pre-read the manual carefully to ensure correct use.
- ☐ Notice item: Please understand the product specification and using method clearly to prevent personal safety danger or device damage.
- ☐ In order to indicate damage and danger, here we classify them as “warning ⚠ ” and “notice ✖ ”.
- ☐ Both of contents are very important, which should be obeyed strictly.
- ☐ “Warning ⚠ ”: It will cause death or serious injury if not obeyed.
- ☐ “Notice ✖ ”: It will cause slight injury or device damage if not obeyed.
- ☐ Subject to technical changes.