

## Product overview

- Rated voltage: AC/DC95-265V,AC/DC24V
- Rated torque: 110N.m
- Running time: **about 10s**
- Install valves: 2-way, 3-way ball valve and butterfly valve  
 ※ **Note: Please reserve torque factor of safety when selecting**
- Wiring and feedback model: BD3S、B3S、B3C、B2S
- High performance brushless motor, Overload protection of internal motor
- It can be used 20,000 times.\*1
- Two and more actuators can be used in parallel



## Technical Data

|                     |                           |                                                                                                                        |                                      |
|---------------------|---------------------------|------------------------------------------------------------------------------------------------------------------------|--------------------------------------|
| Electrical data     | Rated voltage             | AC/DC95-265V                                                                                                           | AC/DC24V                             |
|                     | Rated voltage range       | AC95-265V/DC100-300V                                                                                                   | AC20-26V/DC22-30V                    |
|                     | Power consumption         | 100W@Max; 19.2W@Running ;2.50W@Keep                                                                                    | 100W@max;19.2W@running ;2.5W@holding |
|                     | Peak current              | 0.45A@5ms@AC230V                                                                                                       | 4.17A@5ms @DC24V                     |
|                     | Fuse                      | 2A                                                                                                                     | 10A                                  |
| Functional data     | Connecting cable          | 7P-5.08-500V ×(0.5-1.5)mm <sup>2</sup> terminal<br>7*0.5mm <sup>2</sup> cable, voltage withstand AC300V (Length 800mm) |                                      |
|                     | Rated torque              | <b>110Nm@rated voltage</b>                                                                                             |                                      |
|                     | Angle of rotation         | 90±2°                                                                                                                  |                                      |
|                     | Max angle of rotation     | 360°                                                                                                                   |                                      |
|                     | Manual operation          | ※ Matching hexagon wrench, using at no power                                                                           |                                      |
|                     | Running time              | <b>About 10s (per 90°)</b>                                                                                             |                                      |
|                     | Operating mode            | S3-75%(AC),S3-85%(DC)(loading ≤85% rated torque refer to IEC60034-1)*2                                                 |                                      |
|                     | Sound power level         | <b>65dB(A)</b>                                                                                                         |                                      |
| Working conditions  | Position indicator        | Mechanical                                                                                                             |                                      |
|                     | Electricity safety level  | I Type(ground protection)                                                                                              | III Type(saftey low voltage)         |
|                     | Inflaming retarding level | HB/ UL94 test method                                                                                                   |                                      |
|                     | Enclosure                 | IP67 As Per En60529/GB4208-2008 (all directions)                                                                       |                                      |
|                     |                           | F type can add bracket or dehumidifying heater                                                                         |                                      |
|                     | Insulation resistance     | 100MΩ/500VDC                                                                                                           | 100MΩ/500VDC                         |
|                     | Withstand voltage         | 1500VAC@1Min                                                                                                           | 500VAC@1Min                          |
|                     | Medium temperature        | ≤80°can install to actuator directly                                                                                   |                                      |
|                     |                           | ※ >80° need to install heat radiation stand                                                                            |                                      |
|                     | Working environment       | ※ Indoor or outdoor; if exposed to the rain or sunshine, need to install protective device for the actuator            |                                      |
|                     | Explosion-proof level     | ⚠ Not explosion proof products, do not use them in flammable and explosive environment                                 |                                      |
|                     | Ambient temp *3           | -15°C~+45°C (ABS) ; -15°C~+60°C(Aluminum)                                                                              |                                      |
|                     | Non-operation temp        | ≤-40°C or ≥80°C                                                                                                        |                                      |
|                     | Ambient humidity          | 5-95%RH non-condensing                                                                                                 |                                      |
|                     | Vibration Shock           | ≤2g                                                                                                                    |                                      |
|                     | Vibration amplitude       | ※ 10 to 55 Hz, 1.5 mm double amplitude                                                                                 |                                      |
|                     | Installation notes        | 360°any angle, need manual operation or allow for wiring space                                                         |                                      |
|                     | Maintenance               | Free maintenance                                                                                                       |                                      |
| Dimensions / weight | Certification             | CE                                                                                                                     |                                      |
|                     | Dimensions (LXWXH)        | See "Dimensions"                                                                                                       |                                      |
|                     | Connection standard       | ISO5211 F05,F07                                                                                                        |                                      |
|                     | Output axis specification | Female octagonal                                                                                                       |                                      |

\*1. Test condition: Rated load, test at under 25°C working temperature and 50% humidity, lead the result from 2 times switching cycle, which will be influenced by different load and working environment.

\*2 Operating mode: The testing environment temperature is 25 °C inside the factory. The testing standard as per IEC 60034-1-2017. The operation mode will be S3-90% if the loading less than 60% rated torque.

\*3. (1) It is customized item when used and stored under special ambient temperature of -20°C~40°C, and special instructions are required.


(2) At the ambient temperature of -40 °C, power on is required for more than 15 minutes (30 minutes is recommended) before use. The higher the ambient temperature is, the shorter the power on time can be.

(3) If user use the product at the ambient temperature of -40°C for long time, it needs to be insulated. For example, add heating cable around the actuator. If the ambient temperature is over -20°C, then the heating cable can be canceled.


|               |                                            |
|---------------|--------------------------------------------|
| Hole deepness | ≤20mm(Female octagonal)                    |
| Weight        | ABS material 2.2kg Aluminum material 2.5kg |

Dimension **[Female octagonal]**


TCR-08/11

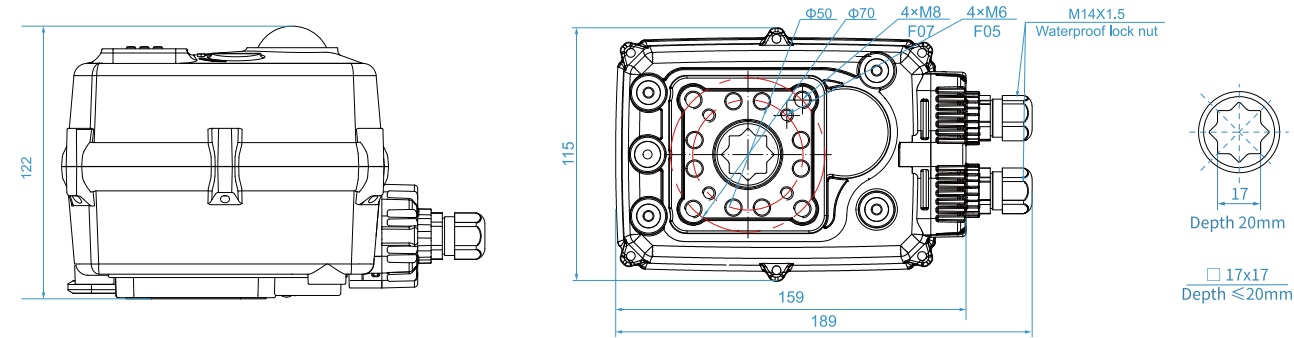

TCN-08/11

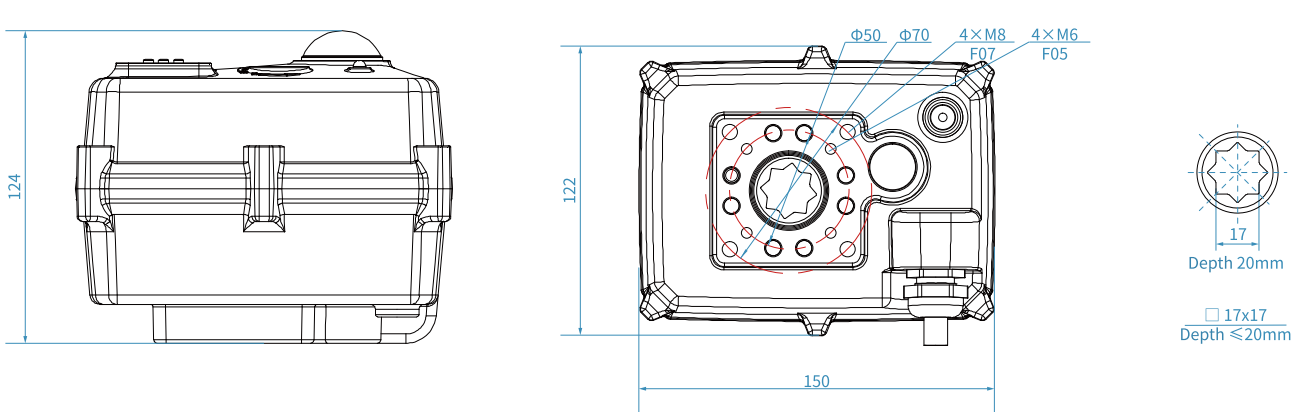


Main parts

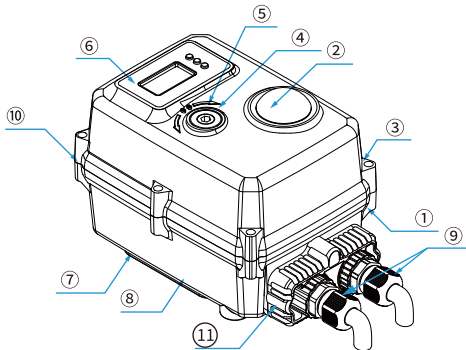

|   | Parts        | Material                          |    | Parts                      | Material   |
|---|--------------|-----------------------------------|----|----------------------------|------------|
| 1 | Actuator     | Heatproof ABS or Casting aluminum | 8  | Hexagon wrench             | CR-V       |
| 2 | Indicator    | PC                                | 9  | Waterproof cable connector | NiLon      |
| 3 | Screwx4      | 304                               | 10 | Lid seal                   | Silica gel |
| 4 | Manual shaft | 304                               | 11 | Terminal cover             | PC+PET     |
| 5 | Oil seal     | NBR                               |    |                            |            |
| 6 | Label        | PVC                               |    |                            |            |
| 7 | Wrench fixed | Heatproof_ABS                     |    |                            |            |

## Wiring diagrams


## KT32S/BD3S-General Voltage

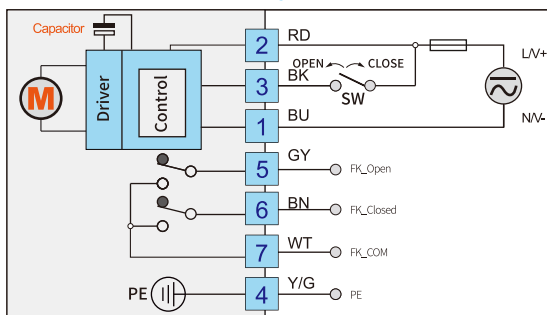

## Control instructions:

- If SW is disconnected;the actuator will drive valve close clockwise ↻.When the valve is closed completely, [7] is connected with [6],giving signal of dosing.
- If SW is connected,the actuator will drive valve open anticlockwise ↻.When the valve is open completely, [7] is connected with [5],giving signal of opening .
- ※ Notice 1: [7] is not connected with [6][5],when the actuator is running.
- ※ Notice 2:The feedback signal is a little earlier than the actual position,so please do not cut power immediately,when you get the feedback signal.
- ※ Notice 3:When power cut,actuator will drive valve to close.

### B3S-General Voltage

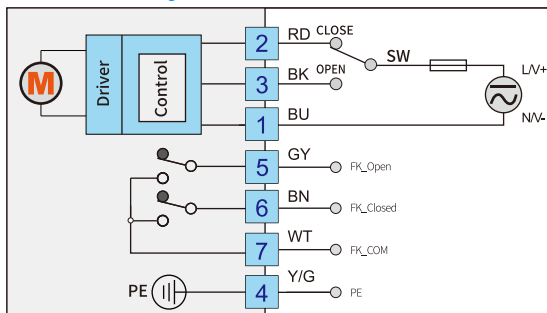


Control instructions:


- ☐ SW is connected with CLOSE, the actuator will rotate clockwise . When the valve is closed, [7] is connect with [6], giving signal of closing.
  - ☐ SW is connected with OPEN, the actuator will rotate anticlockwise . When the valve is open, [7] is connect with [5], giving signal of opening.
- ※ Notice 1: [7] is disconnected with [6] and [5], when the actuator is rotating.
- ※ Notice 2: The feedback signal is a little earlier than the actual position, so please do not cut power immediately, when you get the feedback signal.

## Terminal block for product without cable Wiring instruction

- 1.Fuse:please refer to manual for more parameters.
- 2.SW switching capability:please refer to manual for more parameters.
- 3.Feedback signal contact load capacity:0.1A/250VAC 0.5A/30VDC.
- 4.Please make sure actuator connect ground reliably.
5. Orange terminal is for the product in 95-265V (include 220V) .  
Black terminal is for the product DC12V/DC24V.
6. Some products adopt wiring box ,user could wiring according to the order of number.

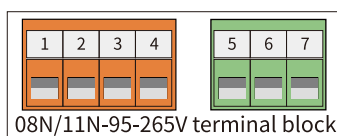


08N/11N-95-265V terminal block

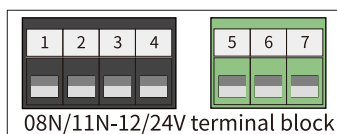

08N/11N-12/24V terminal block

Terminal block of the product without cable.


**B2S-DC24V/DC12V**

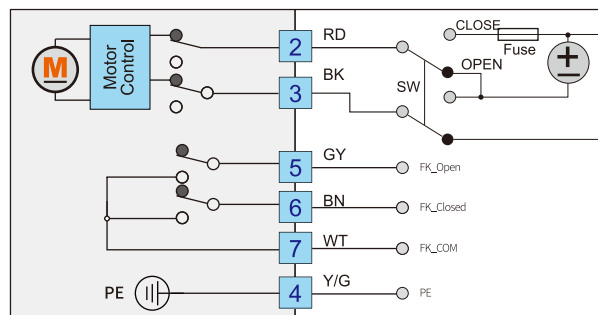

## Control instructions:

- ☐ If SW is connected with **CLOSE**,the actuator will drive valve close clockwise ➡.When the valve is closed completely, [7] is connected with [6], giving signal of closing.
- ☐ If SW is connected with **OPEN**,the actuator will drive valve open anticlockwise ➡.When the valve is open completely, [7] is connected with [5],giving signal of opening .
- ※ Notice 1: [7] is not connected with [6] [5],when the actuator is running.
- ※ Notice 2: The feedback signal is a little earlier than the actual position,so please do not cut power immediately,when you get the feedback signal.

### B3C-General Voltage

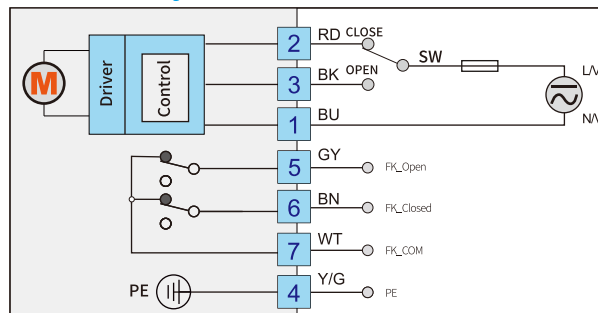


## Control instructions:

- ☐ SW is connected with CLOSE, the actuator will rotate clockwise ↻. When the valve is closed, [7] is connect with [6], giving signal of closing.
  - ☐ SW is connected with OPEN, the actuator will rotate anticlockwise ↻. When the valve is open, [7] is connect with [5], giving signal of opening.
- ※ Notice 1: [7] is connected with [6] and [5], when the actuator is rotating.
- ※ Notice 2: The feedback signal is a little earlier than the actual position, so please do not cut power immediately, when you get the feedback signal.

Test terminal for the cable end wiring instruction


- 1.Fuse:please refer to manual for more parameters.
- 2.SW switching capability:please refer to manual for more parameters.
- 3.Feedback signal contact load capacity:0.1A/250VAC 0.5A/30VDC.
- 4.Please make sure actuator connect ground reliably
5. Some products adopt wiring box ,user could wiring according to the order of number.

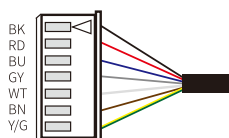

(User could cut out the cable terminal as it is only used for factory test.)

Cable terminal for test(7pin)

Anti-condensation heater **[Accessory]**

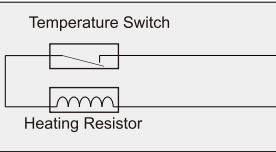

Temperature Switch

Heating Resistor

※ Notice 1: The range of power is 2W-3W;

※ Notice 2:The range of constant temperature heating is 25°C±20%.

Mounting instructions

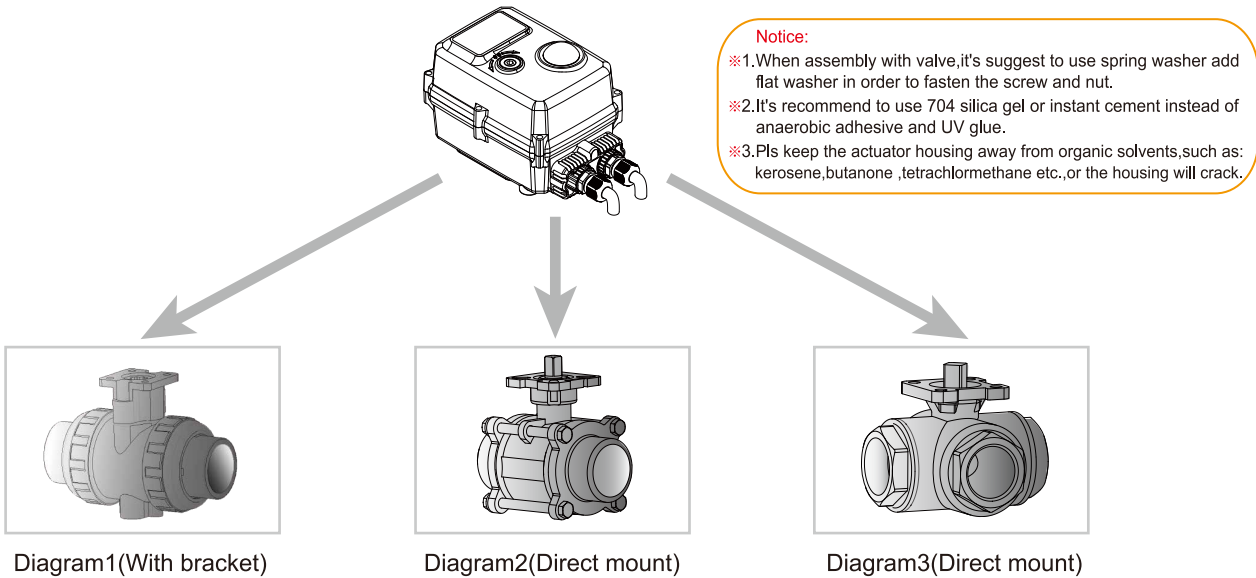


Diagram1 UPVC plastic ball valve+bracket assembly  
Diagram2 3piece stainless steel ball valve assembly  
Diagram3 3piece stainless steel 3way ball valve assembly

Installed valve technical requirements

| Valve type             | Recommend install condition                    |
|------------------------|------------------------------------------------|
| wafer butterfly valve  | actuator rate torque≥2times valve max torque   |
| flange butterfly valve | actuator rate torque≥1.7times valve max torque |
| metal ball valve       | actuator rate torque≥1.7times valve max torque |
| plastic ball valve     | actuator rate torque≥1.5times valve max torque |

- ☐1. If the ball valve is out of operation for a long time, and the torque value of first on or off is the max torque
- ☐2. When installing direct mount model valve, the hole deep ≤20mm. It requires cutting if the output shaft is longer than 20mm.
- ☐3. Pls pay attention to the following items if you install the bracket and coupling by yourself:
  - ※ The intensity of bracket should meet the using requirements: the bracket twisting extent ≤0.2mm in the process of on or off.
  - ※ The parallelism of bracket ≤0.5mm.
  - ※ When processing the shaft hole at both end of the coupling, it is necessary to ensure the accuracy and concentricity. The purpose is to make sure the mechanical hysteresis ≤10°, otherwise it will cause the actuator unable to work.
- ☐4. Screw should be installed spring washer、flat washer, and we suggest you daub some glue cement around the screw in case of screw loosening.
- ☐5. After installation, user should switch the valve on and off one time with handle device first. Modifying the valve after make sure it works well.

## Adjusting valve location instructions

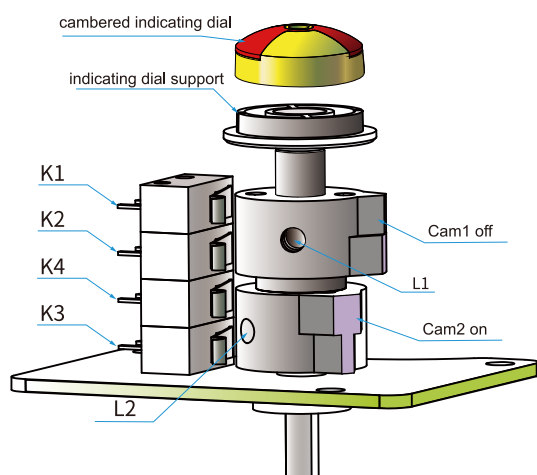


Diagram 1

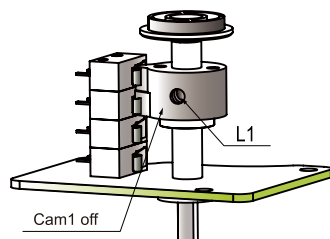


Diagram 3

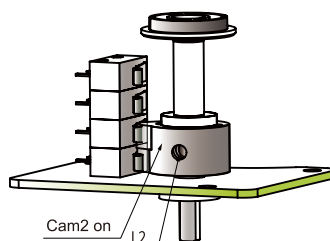


Diagram 4

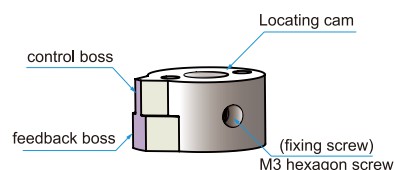


Diagram 2

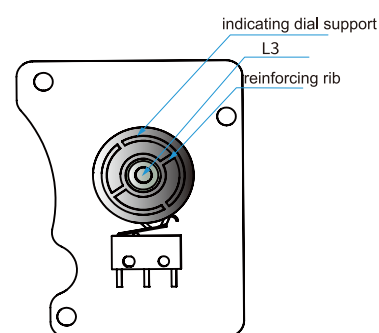


Diagram 5

Diagram 1 locating mechanism structural schematic diagram

Diagram 3 close adjustment schematic diagram

Diagram 5 Indicating dial adjustment schematic diagram

Diagram 2 locating cams structural schematic diagram

Diagram 4 open adjustment schematic diagram

## Valve position adjustment

※ Notice 1: The default is that rotating in clockwise direction means closing ,and rotating in anticlockwise direction means opening.

※ Notice 2: B3P does not have K2,K4 micro switch.

### Micro-adjustment of electrical limit:

#### □1 Adjusting full close:

△ Rotate the valve to full close position with handle.

※ Since the valve has gone through “factory default setting”, this step can be omitted if the adjustment is slight.

△ Detach cambered indicating dial, loosen fixing screw L3 of indicating dial support, turn reinforcing rib as shown in diagram 5, perpendicular to the flow direction of valve, then screw up L3 and buckle up cambered indicating dial.

※ Caution: When screwing up L3, the torque  $\leq 0.5$  NM, otherwise it will damage locating driving gear.

△ Loosen fixing screw L1 of cam 1, drive cam 1 to rotate clockwise and trigger micro switches K2, K1 to move in turn and make sound. When K1 moves and makes sound, stop adjustment. Then screw up fixing screw L1.

#### □2 Adjusting full open:

△ Rotate the valve to full open position with handle;

△ loosen fixing screw L2 of cam2, drive cam 2 to rotate anticlockwise and trigger micro switches K4, K3 to move in turn and make sound. When K3 moves and makes sound, stop adjustment. Then screw up fixing screw L2.

#### □3 Wiring:

After modifying, connect the circuit according to the wiring label on the box cover. After confirmation, you can do power test.

#### □4 Power test:

△ mainly check the consistence of on and off between the actuator and the valve body. At the same time, please check whether the valve is full close or not. Special testing device is recommended.

※ In the process of adjustment, do not over tighten screws, otherwise it will damage screw threads or other parts.

## Common failures and processing methods

|    | Fault phenomenon                | Fault cause                                                                      | Processing methods                                                                    |
|----|---------------------------------|----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| □1 | Actuator no action              | △1 power not connected                                                           | Connect power                                                                         |
|    |                                 | △2 voltage below level or incorrect                                              | Check whether voltage is within the normal range                                      |
|    |                                 | △3 overtemperature protection of motor                                           | Check whether valve gets stuck or torque value is too big                             |
|    |                                 | △4 terminal loose or poor contact                                                | Check and correctly connect terminal                                                  |
|    |                                 | △5 starting capacitance poor run                                                 | Contact the manufacturer to get repair                                                |
| □2 | No feedback signal              | △1 line barrier of user acquisition signal                                       | Connect user acquisition signal                                                       |
|    |                                 | △2 microswitch damage                                                            | Change microswitch                                                                    |
| □3 | Actuator not fully closed       | △1 use feedback signal to control actuator                                       | Receive feedback signal doesn't mean actuator is fully closed, so don't cut power off |
|    |                                 | △2 technical hysteresis increases due to abrasion between actuator and valve rod | 1 Readjust valve-off position<br>2 Contact the manufacturer to get repair             |
| □4 | Actuator interior water ingress | △1 OD of incoming line cable non-standard                                        | Contact the manufacturer to get repair                                                |
|    |                                 | △2 waterproof treatment of incoming line incomplete                              |                                                                                       |
|    |                                 | △3 actuator lens wearout                                                         |                                                                                       |
|    |                                 | △4 screws on connection cover/head cover /slide cover loose                      |                                                                                       |

## Working environment

- Indoor and outdoor are both optional.
- Not explosion proof products, ⚠ do not use them in flammable and explosive environment.
- You need to install protective device for the actuator if it is exposed to the rain or sunshine.
- Please pay attention to the ambient temp.
- When installing, you need to consider the reserved space for wiring and repairing.
- When power on, ⚠ it is not allowed to dismantle actuator and valve.
- When power on, ⚠ it is not allowed to do wiring.
- ※ Absolutely no falling down the ground, which will hit the device and lead to improper operation.
- ※ Absolutely no standing on the device, which will cause device malfunction or personal accident.
- ※ It is forbidden to do wiring project in rainy day or when there is water splash.

## Safety notice

- In order to use the device safely for a long term, please pre-read the manual carefully to ensure correct use.
- Notice item: Please understand the product specification and using method clearly to prevent personal safety danger or device damage.
- In order to indicate damage and danger, here we classify them as “warning ⚠ ” and “notice ※ ”.
- Both of contents are very important, which should be obeyed strictly.
- “Warning ⚠ ”: It will cause death or serious injury if not obeyed.
- “Notice ※ ”: It will cause slight injury or device damage if not obeyed.
- Subject to technical changes.