Instruction Manual

BS Series



NOTE: Owner/Operator must read and understand this instruction manual before using the lift table.

RevB: 01/2025

Operation and Service Manual

BEFORE OPERATING THE LIFT TABLE, READ THIS MANUAL CAREFULLY AND UNDERSTAND COMPLETELY. KEEP THIS MANUAL ON FILE FOR FUTURE REFERENCE. IF THIS IS LOST, PLEASE CONTACT YOUR LOCAL SUPPLIER FOR A NEW COPY. ALSO, IF THE WARNING/CAUTION DECAL ON THE UNIT IS LOST, PLEASE CONTACT YOUR LOCAL SUPPLIER FOR A NEW DECAL.

NOTE: On this manual, WARNING means the danger which can lead to death or serious injury. CAUTION means the danger which can lead to slight injury or property damage.

1. WARNING

1.DO NOT put foot or hand in scissors mechanism.

2.DO NOT allow other person to stand in front of or behind lift table when it is moving.

3.DO NOT move lift table when table is in raised position. Load could fall down.

4.DO NOT enter under table.

5.DO NOT overload lift table.

6.DO NOT put foot in front of rolling wheels. Injury could result.

7.WATCH difference and hardness of floor level when moving lift table. Load could fall down.

8.DO NOT use lift table on slope or inclined surface, lift table may become uncontrollable and create danger.

9.DO NOT lift people. People could fall down and suffer severe injury.

2. CAUTION

1.Read this operation manual carefully and understand completely operating lift table. Improper operation could create danger.

2.This lift table is a movable lifter designed to lift or lower rated load on table. NO NOT use lift table for other purpose than its intended use.

3.DO NOT allow person to operate lift table who does not understand its operation.

4.DO NOT lower table too fast. Load could fall down and create danger.

5.KEEP watching the condition of load. Stop operating lift table if load becomes unstable.

6.Byake lift table when sliding load on of off table.

7.DO NOT side or end load. Load must be distributed on at least 80%of table area.

8.DO NOT use lift table with unstable, unbalanced loosely stacked load.

9.Practice maintenance work according to service instructions.

10. DO NOT modify lift table without manufacturer’s written consent.

11. REMOVE load from table and use safety stopper to prevent table from lowering when servicing lift table.

12. This lift table is not designed to be water resistant. Use lift table under dry condition.

3. DAILY INSPECTION

Daily inspection is effective to find the malfunction or fault on lift table. Check lift table on the following points before operation.

CAUTION

DO NOT use lift table if any malfunction or fault is found.

(1) Check for scratch, bending or cracking on the lift table.

(2) Check if there is any oil leakage from the cylinder.

(3) Check the vertical creep of the table.

(4) Check the smooth movement of the wheel.

(5) Check the function of brake.

(6) Check if all the bolt and nuts are tightened firmly.

4. OPERATING LIFTTABLE


4-1. How to use the brake.

CAUTION
Brake lift table when not moving it in order to prevent sudden movement.

The brake is equipped with the swivel caster on the right side.

(1) Braking the wheel, press the brake pedal.

(2) Releasing the brake, lift up the brake pedal.

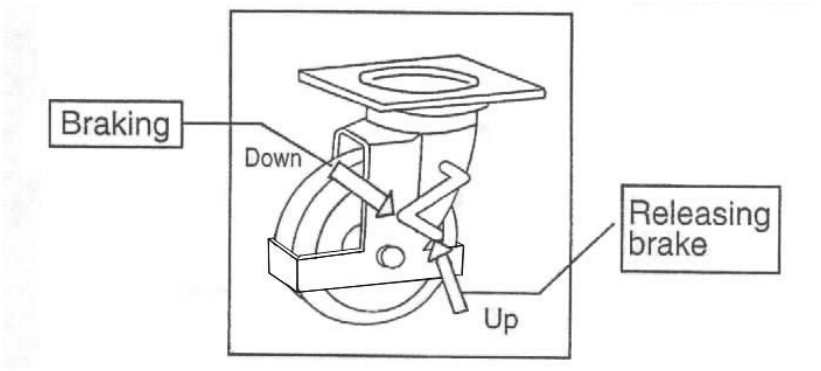

4-2 Lifting the table

WARNING
1. DO NOT overload lift table, stay within its rated capacity. 2. DO NOT side end load must be distributed on at least 80% of table area.

Press the lifting pedal several times the until the table reaches the desired position.

The table does not elevate after reaching the highest position even if the lifting pedal is pressed.

The table lowers slightly after reaching the highest position.

MAXIMUM CAPACITY OF TABLE							
BS15	**BS25**	**BS50**	**BS75**	**BS100**	**BS30D**	**BS50D**	**BS80D**
150KG	**250KG**	**500KG**	**750KG**	**1000KG**	**300KG**	**500KG**	**800KG**

NOTE: The hydraulic cylinder is designed to hold table. As is the nature of the hydraulic system, table lowers very

slowly over and extended period of time, Please note the table does not stay at the same position ionindefiinitely.

4-3. Lowering table

WARNING
DO NOT put foot or hand in scissors mechanism.

Pull the lowering down and table lowers.

5. Specifications

Model	Capacity (kg)	Table (mm)	Table Height(mm)	L×W×H (mm)	Pedal to top. (approx. times)	Wheel (mm) φ	Weight (kg)
BS15	150	700×450	265-755	1000×450×950	18	100	41
BS25	250	830×500	330-910	1100×500×1010	25	125	78
BS50	500	1010×520	435-1000	1130×520×1185	44	150	118
BS75	750	1010×520	442-1000	1130×520×1260	55	150	120
BS100	1000	1010×520	445-950	1130×520×1260	68	150	137
BS30D	300	1010×520	435-1585	1130×520×1260	53	150	150
BS50D	500	1010×520	440-1575	1130×520×1260	68	150	168
BS80D	800	1010×520	470-1410	1130×520×1260	78	150	165


6. Service instruction

6.1-1. Lubricate each point described below every month:


6.2.Change hydraulic oil every 12 months.

Lubricating Points

(1) Fitting of cylinder……Oil
(2) Roller friction surface……Grease
(3) Link Pin ……Oil
(4) Pedal fitting point……Oil
(5) Link center pin……Oil
(6) Joint……Grease
(7) Grease nipple……Grease
(8) Hydraulic circuit

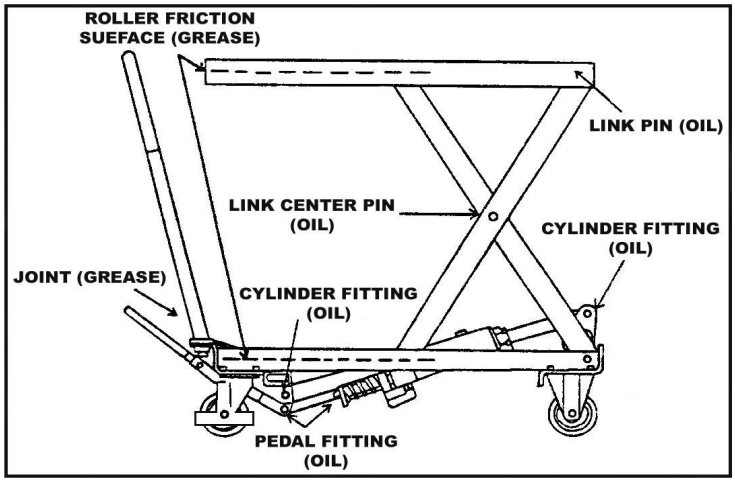

7. Hydraulic Circuit

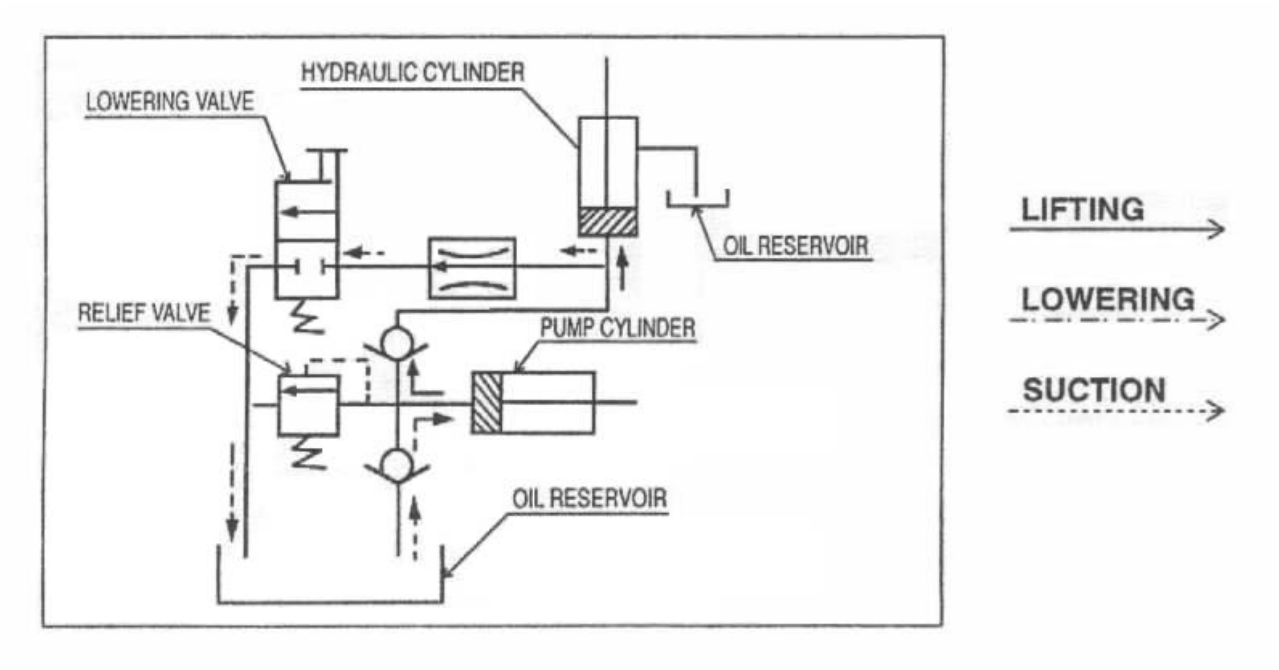

常州市祥瑞液压设备有限公司
CHANGZHOU XIANGRUI HYDRAULIC EQUIPMENT CO.,LTD.