

Instruction Manual


Lift Table Series


SHT20 SHT35 SHT50 HL300 HL350L

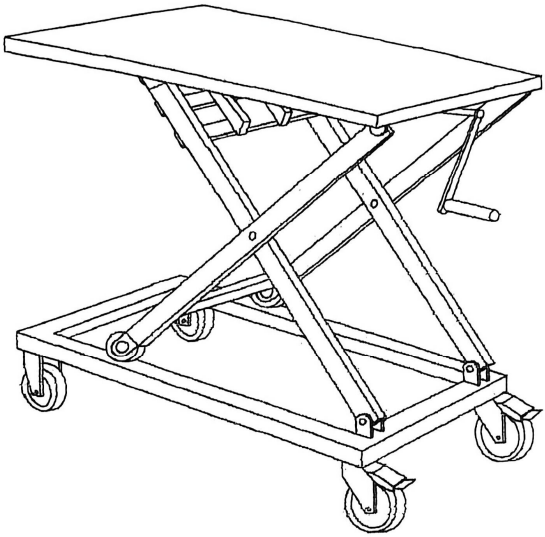

Note: Owner/Operator must read and understand this instruction Manual before using the low profile lift table

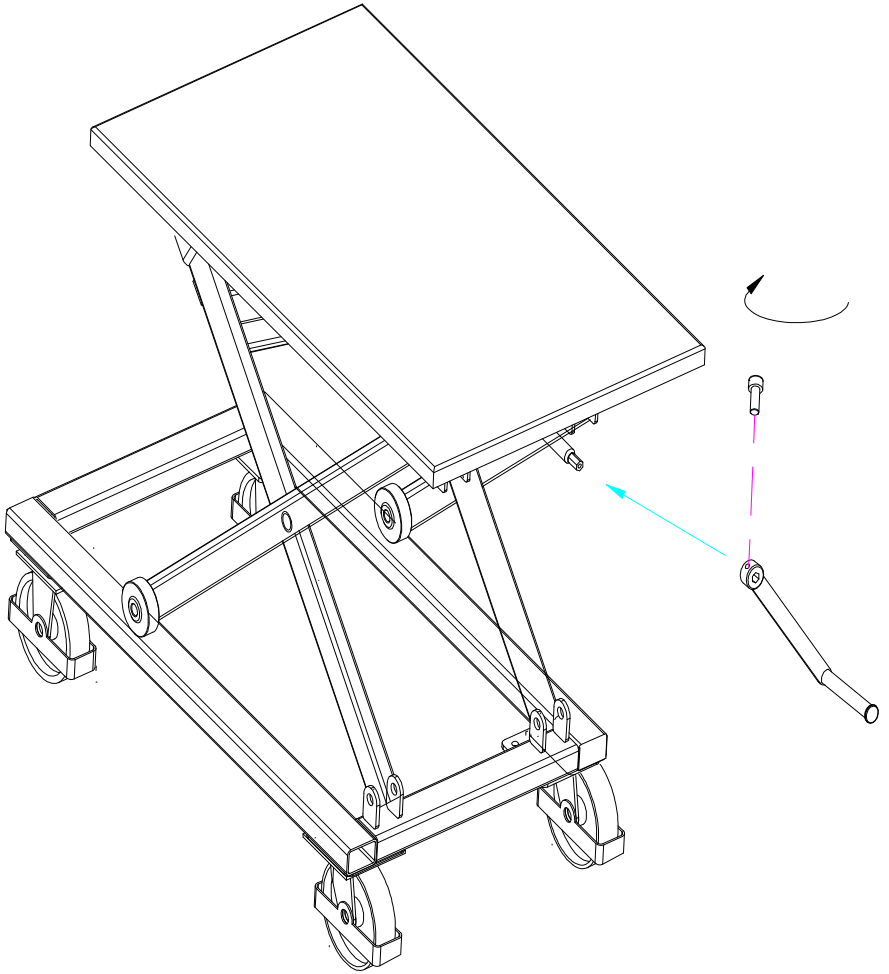

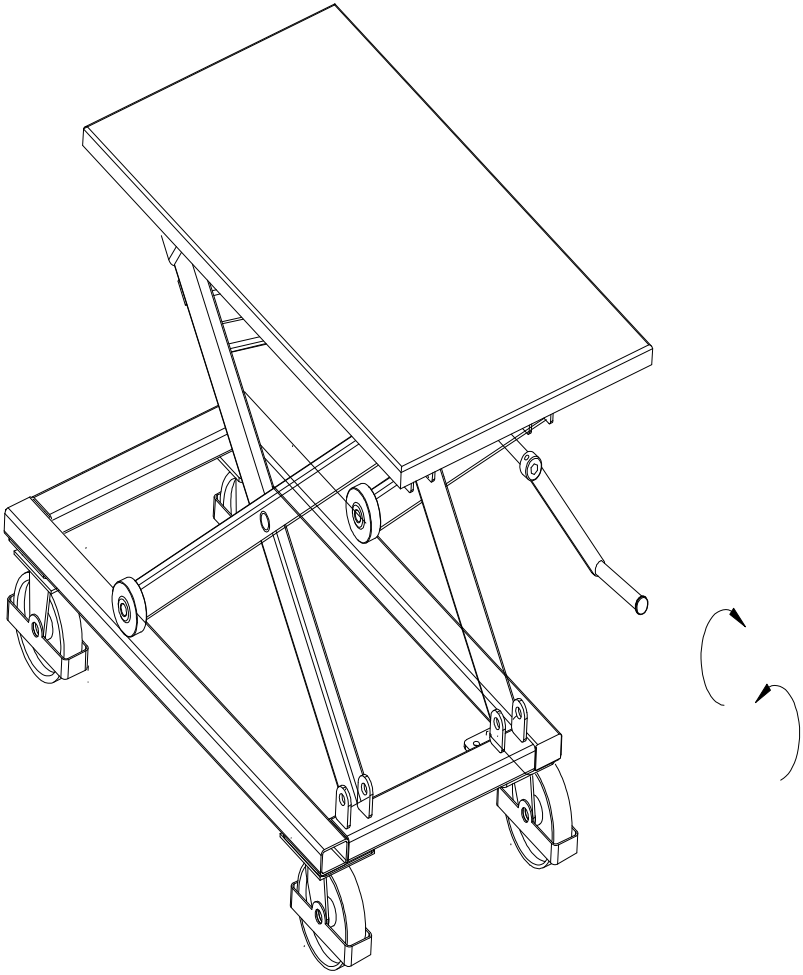

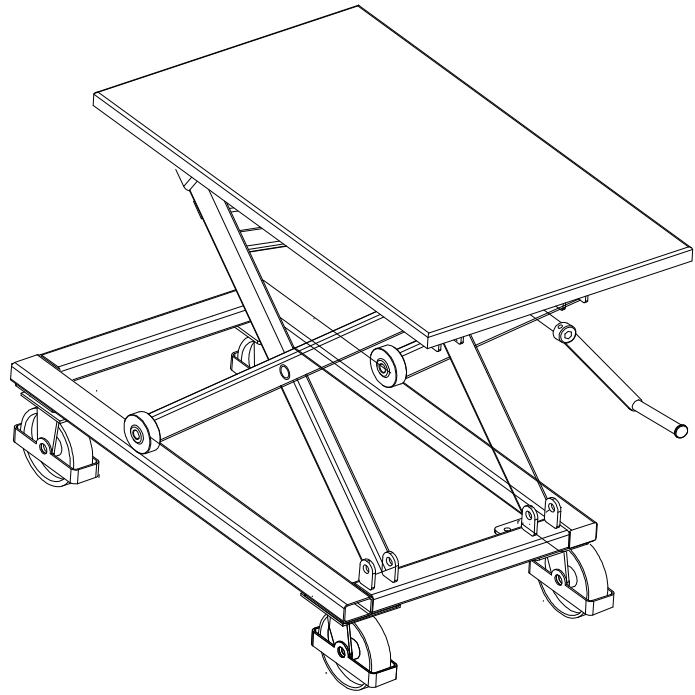

SHT HL lifting platform car

I. Instructions before commissioning

II. Servicing and inspection

III. Specification

Safety instructions

IMPORTANT

The instructions and safety instructions in this operating manual must be followed to the letter.Failure to follow them or incorrect operation or abuse may result in danger.

-for the operator or third parties

-for the unit and other property of the operator

The units may only be operated and serviced by persons

-who are trained to do so

-who have read and understood this operating manual

-who are acquainted with the safety regulations governing their work station - who have a suitable work station and tools

★★★★★★★★★★★★★★

Note:The serial number and the production date are shown on the model plate of each unit and also recorded at the factory.Please make a note of this information in a separate file.

I. Instructions before commissioning

The lifting platform car has been developed and designed for safe operation.If you observe the following safety instructions,it is possible to prevent exposing the operator,third parties and property to any danger

A.IMPORTANT

1.PEOPLE OTHER THAN THE OPERATOR MUST KEEP A SAFE DISTANCE FROM THR UNIT WHILST IT IS OPERATING.

2.NEVER STAND ON THE PLATFORM.

3.NEVER EXCEED THE MAXIMUM LOAD LIMIT.

4.NEVER LOAD THE PLATFORM ON ONE SIDE OR MAKE IT TOP-HEAVY OR PLACE LOADS THAT STICK OUT OVER THE EDGE OF THE PLATFORM.

5.NEVER INSERT YOUR HAND OR FOOT BETWEEN THE PLATFORM AND THE BASE FRAME.

6.LOWER THE LOADED PLATFORM SLOWLY.

7.THE PLATFORM MUST BE LOWERED IN FULL FOR TRANSPORT.

8.BEFORE LOADING AND UNLOADING ALWAYS APPLY THE PARKING BRAKE.

9.ONLY RAISE AND LOWER THE PLATFORM WHEN THE UNIT IS HORIZONTAL. 10.DO NOT USE THE UNIT IS ITS LOWERING SPEED BECOMES IRREGULAR OR EXCESSIVE.

11.THE UNIT MAY ONLY BE INSTALLED ON A FLAT SURFACE AND AFTER BLOCKING THE ROLLERS SO AS TO PREVENT THE UNIT ROLLING AWAY SUDDENLY

II.Servicing and inspection

The lifting platform cars do not require any special servicing and in fact only have to be lubricated/greased at regular intervals and inspected from time to time.To ensure the perfect handling and function of the unit,the following work should be completed.

Important: The platform must not be laden during the servicing,inspection and lubrication work.Support blocks must be placed between the platform guides and the frame to secure the platform support blocks.

1.Every friction point should be greased every month.

2.Check the wheels on a regular basis to ensure that they move easily and show no signs of wear.

3.Check the brake on a regular basis.

III . Specification

Model	Rated capacity（Kg）	L×W（mm）	H（mm）	H1（mm）	Wheel（mm）	Net Weight(Kg)
SHT20	200	750×500	420	820	Φ100	46
SHT35	350	950×600	430	1050	Φ125	63
SHT50	500	1200×800	500	1100	Φ150	138
HL300	300	950×600	440	1050	Φ125	61
HL350L	350	1200×800	450	1060	Φ125	97

