


568-171 Assembly Instructions


Parts List

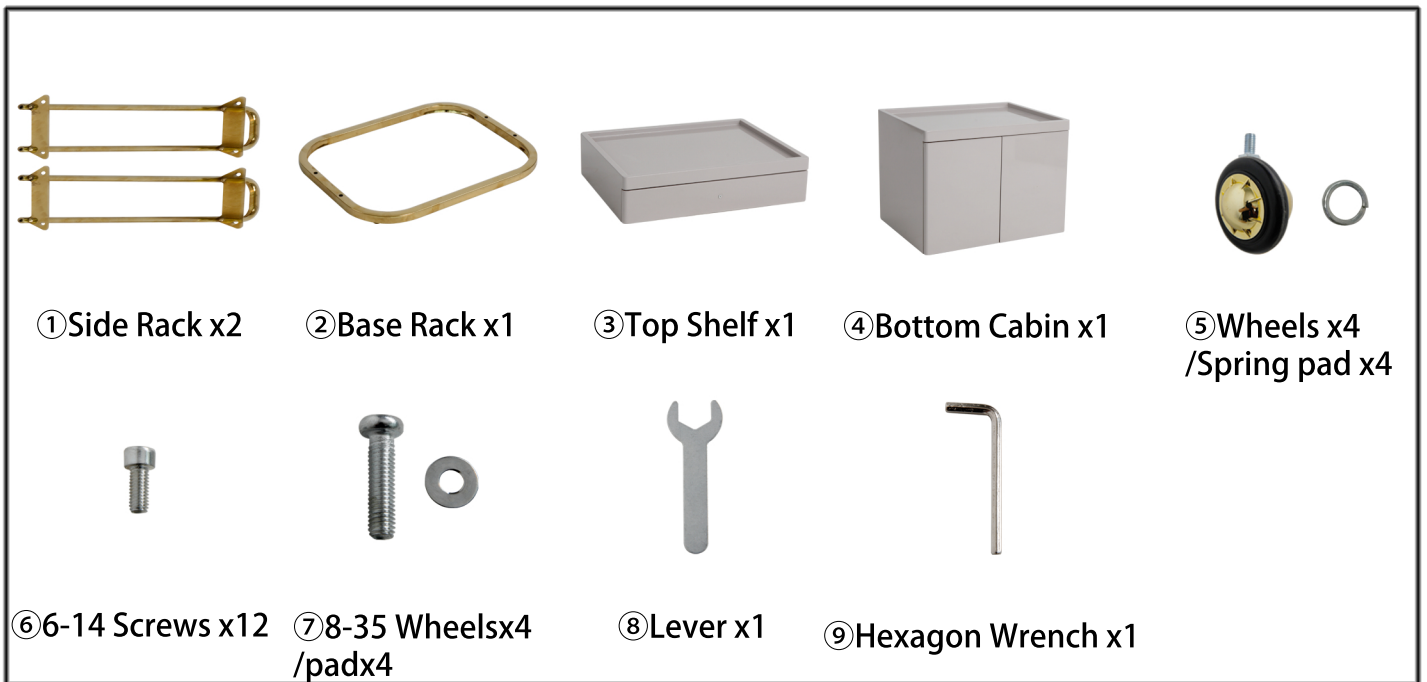


Step 1: put the ⑤ spring pad on the wheel, install it on the bottom frame, and lock it with the ⑧ wrench.



Step 2: Put the ⑦ flat pad over the screws, connect the ① side frame and the ② base frame, and tighten the screws with the ⑨ wrench.

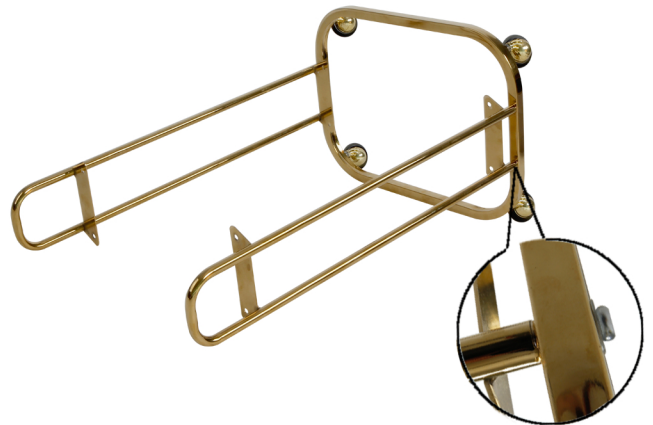

Step 3: Use screw ⑥ to install drawers ③ and ④ and the wooden cabinet in sequence onto the side frame, and then lock them tightly with wrench ⑨.

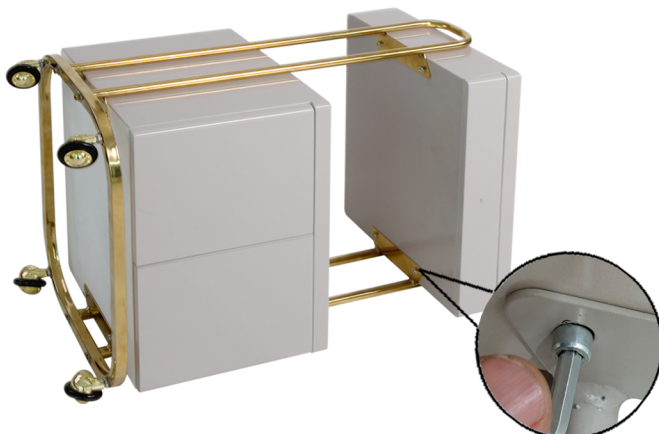

Step 4: Stand the trolley upright, remove the handle from the drawer and install it on the front.

