



Please operate after turning on the power

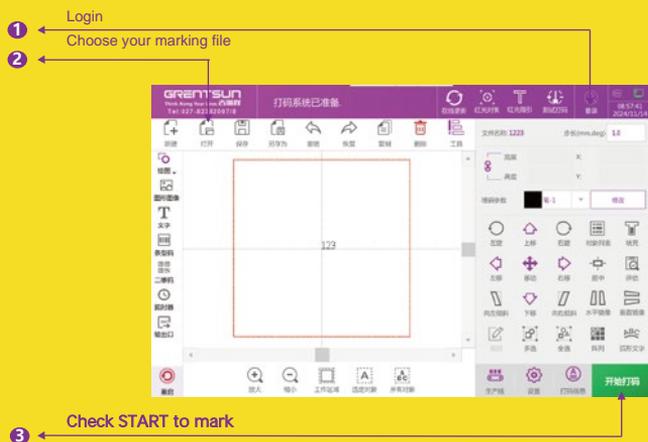


**注意:**


1. During maintenance, please turn off the laser marking machine and cover the lens
2. Do not look directly at the laser when the machine is running

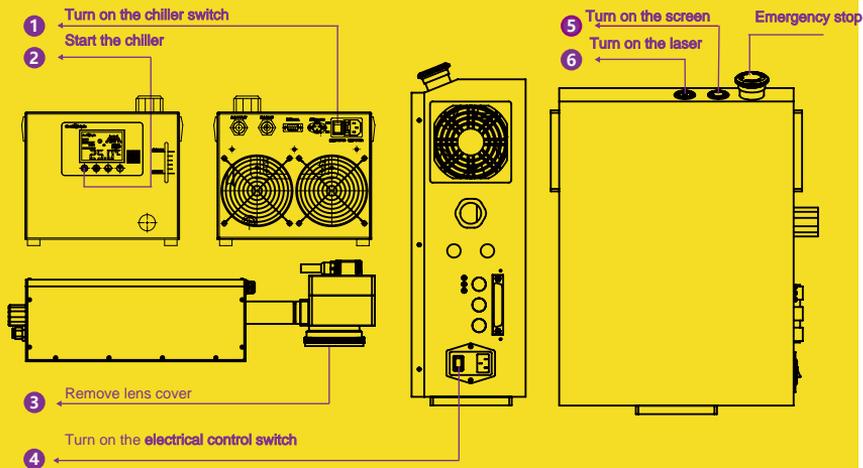

Daily amaintenance

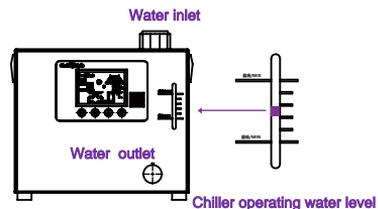


Antifreeze cannot be used for a long time. Change back to purified water in seasons above 0°C (purified water should be replaced every 15-30 days)

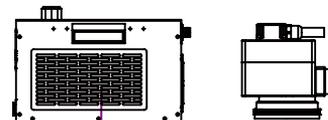

Clean the filters on both sides at least once every 15 to 30 days

Wipe with a lint-free cloth and 95% alcohol or above in one direction



Regularly clean the dust and debris on the cooling fan to avoid laser machine failure caused by overheating. (At least once a week, keep the dust filter on)



When shutting down, cover the laser head to prevent the optical components from getting wet or contaminated.



Regularly check the power cord of the laser machine to see if the power cord is firmly connected and whether it is loose or damaged. To avoid equipment failure caused by poor contact.

Service email: [info@greentsun.com](mailto:info@greentsun.com)

You can also download more manual from [www.laser-code.com](http://www.laser-code.com)