

User Instruction

YS-108pro

Product specifications


- ◇Temperature measurement range: $-50^{\circ}\text{C} \sim +300^{\circ}\text{C}$ ($-58^{\circ}\text{F} \sim +572^{\circ}\text{F}$)
- ◇Temperature measurement accuracy: $\pm 0.3^{\circ}\text{C}$ (0.5°F) at $0^{\circ}\text{C} \sim +100^{\circ}\text{C}$ ($32^{\circ}\text{F} \sim +212^{\circ}\text{F}$)
 $\pm 1^{\circ}\text{C}/1.8^{\circ}\text{F}$ at the other ranges.
- ◇Temperature resolution: 0.1
- ◇Measure speed: in 1 second
- ◇Placement: magnet / hanging hole
- ◇Backlit: auto off about 1 minute
- ◇Power supply: 3V CR2032

Basic functions

Temperature measure
Temperature reading hold
 $^{\circ}\text{C}/^{\circ}\text{F}$ temperature switch
Water proof - can be rinsed , not soaked

Operation method

- ◆Before using the thermometer, please pill-off the protected film from the front panel.
- ◆To start the measurement, unfold the probe from its housing will power on , and the LCD will immediately display the temperature.
- ◆The default display unit is Celsius, If you want to read by Fahrenheit, please long press the key for 1.5 seconds to switch.
- ◆Data-hold: Before withdrawing from food , press the key will hold the temperature reading until pressed again.
- ◆To enable light on the screen, press the button. It will turn off after 1 minute.
- ◆1 minute into standby mode automatically , click the button instantly enter into the state of temperature measurement.

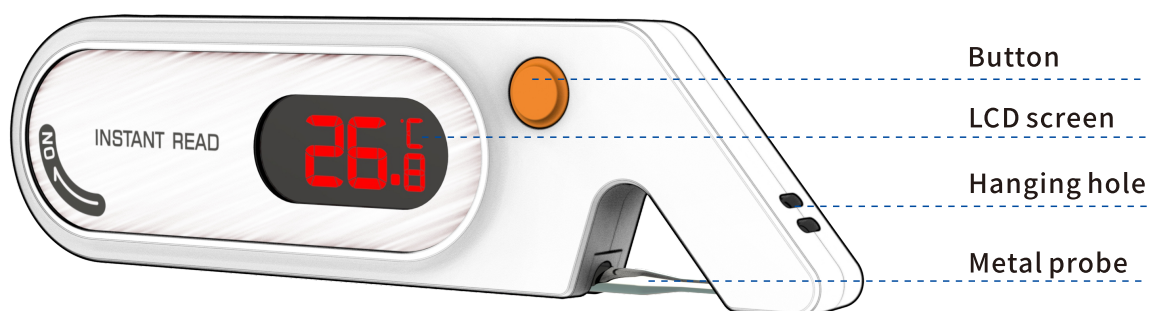

Warnings and precautions!

DO NOT LEAVE THE THERMOMETER IN THE OVEN WHILE COOKING.
DO NOT TOUCH HOT PROBE WITH BARE HANDS.
Wash the metal probe in soapy water.
Clean the thermometer by hand or using water.
Do not immerse the machine in water, only rinse, wash and dry immediately.
Sterilize the metal probe by inserting it into a boiling water for several minutes.