
# ● ● 4/8 Ports PoE Ethernet Switch

4/8 ports PoE Ethernet Switch is a security surveillance Ethernet Switch which aims at Ethernet high definition surveillance and security system. The product fully combines the characteristics of security surveillance, provides fast packet forwarding ability and abundant backplane bandwidth, which ensures clear image and fluent transmission. ESD and surge protection circuit can improve product stability. The product supports one key Extend mode, with VLAN function can restrain the network storm, protect the information security, prevent the viral transmission and cyber attack, fully satisfy the Ethernet video security surveillance system and Ethernet project needs.

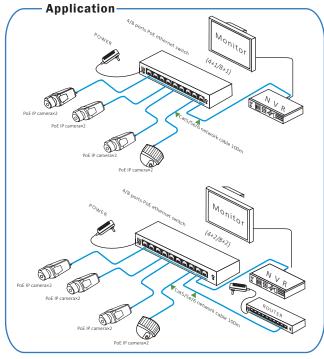

1 2

# User Manual VerB 1.0

4/8 Ports PoE Ethernet Switch

# ● ● 4/8 Ports PoE Ethernet Switch

#### Feature

• Major ports: 4x 10/100Mbps PoE ports, 1x 10/100Mbps uplink port, every port supports MDI/MDIX;(4+1)

 $4x\ 10/100 Mbps\ PoE\ ports,\ 2x\ 10/100 Mbps\ uplink\ port,\ every\ port\ supports\ MDI/MDIX;(4+2)$ 

8x 10/100Mbps PoE ports, 1x 10/100Mbps uplink port, every port supports MDI/MDIX;(8+1) 8x 10/100Mbps PoE ports, 2x 10/100Mbps uplink port, every port supports

 $8x\ 10/100$ Mbps PoE ports,  $2x\ 10/100$ Mbps uplink port, every port supports MDI/MDIX;(8+2)

- Special function: downlink ports can only communicate with uplink ports;
- Standard: IEEE802.3af/at,POE pin:1/2+,3/6- (End-span),the remaining lines (4,5,7,8) can be used for other program;
- Protection: Excellent anti thunder, anti static and anti-interference ability;
- Smart Design,With anti-theft lock,Easy installation;
- Operation: Plug arfd Play, No Setting required;

#### Notice


The transmission distance is related to the connected cable. We suggest standard Cat5e/6 network cable to make sure transmission distance can up to furthest!

#### **♦ Board Diagram**


#### ► Front board



#### ▶ Back board

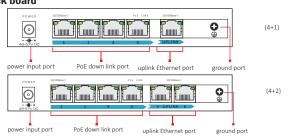

# - ● ● ● 4/8 Ports PoE Ethernet Switch

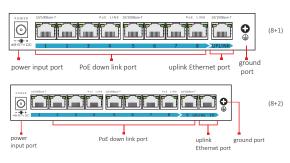

#### ► Side board



#### Notice

- 1) Device must be connected with lightning protection grounding, otherwise protection level will reduce; please use above No.20 wire to connect the grounding terminal.
- 2) Turn the dial switch for left, the equipment can enter surveillance module after providing equipment power.

# **♦** Installation steps

Please check the following items before installation, if it is missing, please contact the dealer .

	0)
PoE Ethernet Switch	1pcs
Power adaptor	1pcs
AC power cable	1pcs
<ul> <li>Accessory</li> </ul>	1pcs
User manual	1pcs

# Please follow the below installation steps

- 1) Please turn off the signal source and the device's power before installing, installation with power on may damage the device;
- 2) Use network cable connect PoE IP camera and  $1\sim$ 4 downlink ports of product respectively;
- 3) Use a network cable connect equipment uplink port and NVR or computer;
- 4) Connect power adapter;
- 5) Check if the installation is correct, equipment is in good condition, the connection is stable, then power on for system;
- 6) Ensure the Ethernet equipment with power on can work properly.

# ◆ ◆ 4/8 Ports PoE Ethernet Switch -

# Specification

Model			Description			
			4 Ports POE Ethernet Switch		8 Ports POE Ethernet Switch	
Item			4+1	4+2	8+1	8+2
	Power	Adapter Voltage	48-57V DC			
Power	Consumption		65W		120W	
Network Connector	Network POE Ethernet Port		1 ~ 4 Port : 10/100Mbps		1 ~ 8 Port : 10/100Mbps	
	Port	Ethernet port	Uplink Port : 10/100Mbps			
	Transmission Distance		1 ~ 4 Port : 100Mbps:0 ~ 100m 10Mbps: 0 ~ 250m;		1 ~ 8 Port : 100Mbps:0 ~ 100m 1 ~ 8 Port : 10Mbps: 0 ~ 250m;	
			Uplink Port : 0 ~ 100m			
	Transmission Distance		Cat5/5e/6 standard network cable			
	Network Standard		IEEE 802.3/802.3u, IEEE 802.3x, IEEE 802.1p, IEEE 802.3az			
Network Switch	Switching Capacity		1Gbps		1.8Gbps	5.6Gbps
	Packet Forwarding Rate		0.74N	/lpps	1.34Mpps	4.166Mpps
	MAC Table		1K		2K	
Power Over	POE Standard		IEEE 802.3af/at		IEEE 802.3af	
Etherne	POE Power Supply Type		End-Span(1/2+;3/6-)			
	POE Power		af=15.4W/at=30W(every port)			
LED Status Indicator VLAN/Exten	POE Ethernet LED Indicator Indicator Surveillance Module Ligh		Power: 1 red light indicates that the power normal work;			
			POE: 4 yellow lights indicate P		POE: 8 yellow lights indicate that the POE	
			that the POE is power on;		is power on;	
			5 green lights	6 green lights	9 green lights	10 green lights
			indicate that	indicate that	indicate that	indicate that
			the Ethernet	the Ethernet	the Ethernet link and	the Ethernet link
			link and act;	link and act;	act;	and act;
			1pcs(Green), green indicates Camera			
Environmental		ng temperature Itive Humidity	0°C~55°C 20~95%			
			20~95% -20°C ~70°C			
	Storage temperature Dimension (L×W×H)		-20 C~70 C 135 mm *89 mm *27mm 208 mm *96 mm *27mm			
Mechanical	Dillie	Color	135 mm *69 mm *27mm 206 mm *96 mm *27mm		mi -2/111111	
ivicuialilical	Weight		750a	759a	1107a	1120g

Specification change will not be noticed

# Trouble Shooting


Please follow the steps if the equipment has trouble.

- $\bullet \ \ \text{Make sure the equipment is installed according to the manufactures installation guide}.$
- Confirm RJ45 cable order meets EIA/TIA568A or 568B standard.
- Every PoE port can provide PoE equipment maximum power less than 30W, please do not connect the PoE equipment with power over 30W.
- Replace the equipment with a proper functioning 4 ports PoE Ethernet Switch to check if the equipment is damaged.
- Please contact your vendor if trouble still exists.


# Plug Producing Method

Instruments to be used: wire crimper, network tester. Wire sequence of RJ45 plug should conform with EIA/TIA568A or 568B.

- 1) Please remove 2cm long the insulating layer, and bare 4 pairs UTP cable;
- 2) Separate the 4 pairs UTP cable and straighten them;
- 3) Line up the 8 pieces of cables per EIA/TIA 568A or 568B;
- 4) Cut off the cables to leave 1.5cm bare wire;
- 5) Plug 8 cables into RJ45 plug, make sure each cable is in each pin;
- 6) Use the wire crimper to crimp it;
- 7) Repeat above 5 steps to make the another end;
- 8) Use network tester to test the cable if it works.

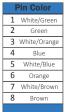



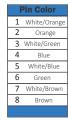



EIA/TIA 568A

EIA/TIA 568B

## **Notice**

When choose RJ45 make sure if one end is EIA/TIA568A, the other end should also be EIA/TIA568A.

When choose RJ45 make sure if one end is EIA/TIA568B, the other end should also be EIA/TIA568B.